



# Audio 20

Supplement



2535849304

Order no. P253 0577 13 Part no. 253 584 93 04 Edition B-2018

Mercedes-Benz



## Symbols


In this Operator's Manual you will find the following symbols:


### **WARNING**

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

### **Environmental note**

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 Practical tips or further information that could be helpful to you.

- ▶ This symbol indicates an instruction that must be followed.
- ▶ Several of these symbols in succession indicate an instruction with several steps.

(▷ This symbol tells you where you can find more information about a topic.

**Dis-** This text indicates a message in the  
**play** multimedia display.

Parts of the software in the vehicle are protected by copyright © 2005 The FreeType Project <http://www.freetype.org>. All rights reserved.

## Publication details

### Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

### Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,  
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

### Vehicle manufacturer

Daimler AG  
Mercedesstraße 137  
70327 Stuttgart  
Germany

## **Welcome to the world of Mercedes-Benz**

First of all, familiarize yourself with your multimedia system. Read these operating instructions, particularly the safety and warning notes, before you drive off.

This will help you to obtain the maximum pleasure from your multimedia system and avoid endangering yourself and others.

The equipment level and functions of your multimedia system may differ depending on:

- Model
- Order
- Country specification
- Availability

Mercedes-Benz is constantly updating its vehicles to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- Design
- Equipment
- Technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

Consult an authorized Mercedes-Benz Center if you have further questions.

The Operator's Manual and all supplements are integral parts of the vehicle. You should always keep it in the vehicle and pass it on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motor-ing.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

<b>Index</b> .....	<b>4</b>	Important safety notes .....	44
<b>Introduction</b> .....	<b>11</b>	General notes .....	44
Operating safety .....	11	Telephone menu .....	45
Data stored in the vehicle .....	12	Connecting/disconnecting a mobile phone .....	45
Information on copyright .....	13	Reception and transmission volume .....	49
Your multimedia system equipment .....	13	Using the telephone .....	50
<b>Overview and operation</b> .....	<b>14</b>	Phone book .....	53
Overview .....	14	Call lists .....	57
Touchpad .....	18	Speed dial lists .....	57
Basic functions .....	23	Messages .....	58
Favorites .....	24	<b>Online and Internet functions</b> .....	<b>62</b>
<b>System settings</b> .....	<b>26</b>	Your multimedia system equipment .....	62
Your multimedia system equipment .....	26	Important safety notes .....	62
Important safety notes .....	26	General notes .....	62
Display settings .....	26	Conditions for access .....	62
Time settings .....	27	Setting up an Internet connection (Canada) .....	63
Bluetooth® settings .....	28	Establishing/ending the connection .....	65
Automatic volume adjustment .....	29	Mercedes-Benz Apps .....	66
Setting the system language .....	29	Web browser .....	66
Calling up and editing the Favorites function .....	30	<b>Radio</b> .....	<b>71</b>
Importing/exporting data .....	30	Your multimedia system equipment .....	71
Reset function .....	31	Switching on the radio .....	71
<b>Vehicle functions</b> .....	<b>33</b>	Overview .....	71
Your multimedia system equipment .....	33	Setting the waveband .....	71
Important safety notes .....	33	Station .....	72
Vehicle settings .....	33	Tagging music tracks .....	73
360° camera .....	35	Displaying station information .....	74
Rear view camera .....	35	Calling up sound settings .....	74
Climate control settings .....	36	Displaying information .....	74
DYNAMIC SELECT .....	39	Satellite radio .....	74
<b>Navigation</b> .....	<b>42</b>	<b>Media</b> .....	<b>79</b>
Your multimedia system equipment .....	42	Your multimedia system equipment .....	79
Garmin® MAP PILOT navigation mod- ule .....	42	Activating media mode .....	79
<b>Telephone</b> .....	<b>44</b>	Audio mode .....	80
Your multimedia system equipment .....	44	Media search .....	84
		Bluetooth® audio mode .....	85
		Operation with the Media Interface .....	90
		Picture viewer .....	91

---

<b>Sound</b> .....	<b>93</b>
Your multimedia system equipment .....	93
Sound settings .....	93
Burmester® surround sound system .....	93

## 1, 2, 3 ...

**360° camera**

Displaying images .....	35
Opening the camera cover for cleaning (Audio 20) .....	35
Settings .....	35
Switching on/off .....	35

**A****Access data of the mobile phone network provider**

Deleting .....	65
Editing .....	65
Making entries .....	64
Selecting .....	63

**Acoustic locking confirmation**

Activating/deactivating (Audio 20) .....	33
------------------------------------------	----

**Activating media mode**

General notes .....	79
Switching on automatically .....	80

**Adding bookmarks** ..... 68**Address book**

Receiving vCards .....	56
------------------------	----

**Adjusting the volume**

Audio 20 .....	23
Media source .....	23
Traffic announcements .....	23

**Ambient light**

Settings (Audio 20) .....	33
---------------------------	----

**Asterisk key**

see Favorites button

**Audio 20**

Adjusting the display .....	26
Basic functions .....	23
Components .....	14
Controller .....	16
Display .....	15
Switching on/off .....	23

**Audio mode**

Menu overview .....	81
---------------------	----

**Automatic locking feature**

Activating/deactivating (Audio 20) .....	34
------------------------------------------	----

**Automatic mirror folding function**

Activating/deactivating (Audio 20) .....	34
------------------------------------------	----

**Automatic time**

Switching on/off .....	27
------------------------	----

**Automatic volume adjustment**

General information .....	29
Switching on/off .....	29

**B****Back button** ..... 16**Belt adjustment**

Activating/deactivating (Audio 20) .....	34
------------------------------------------	----

**Bluetooth®**

Activating audio mode .....	86
Activating/deactivating .....	29
Audio device mode and searching for mobile phones .....	89
Bluetooth® audio menu .....	86
Connecting a different mobile phone .....	48
Connecting audio devices .....	86
De-authorizing (de-registering) a device .....	90
Device list .....	86
Displaying connection details .....	49
Displaying details .....	87
Entering the passcode .....	47
External authorization (audio device) .....	87
General information .....	28
Increasing the Audio 20 volume .....	89
Interface .....	44
Introduction .....	44
Playback options .....	88
Preparation .....	85
Reconnecting an audio device .....	89
Searching for a mobile phone .....	46
Selecting a playback option .....	89
Selecting a track .....	88
Starting and stopping playback .....	88
Starting playback if the Bluetooth® audio device has been stopped .....	88
Telephony .....	45
Telephony notes .....	44

**Burmester® surround sound system**

Balance/fader .....	94
Calling up the sound menu .....	93
Equalizer .....	94
Equipment .....	93
Surround sound .....	94
<b>Buttons and controller</b> .....	16

**C****Call lists**

Displaying details .....	57
Opening and selecting an entry .....	57

<b>Category list (music search)</b> .....	84
-------------------------------------------	----

**CD**

Fast forward/fast rewind .....	83
Inserting .....	82
Notes on discs .....	81

**CD mode**

Playback options .....	82
------------------------	----

**Climate control**

Audio 20 .....	36
Calling up the climate control bar (Audio 20) .....	37
Calling up the climate control menu (Audio 20) .....	37
Cooling with air dehumidification (Audio 20) .....	38
Ionization (Audio 20) .....	38
Overview .....	36
Perfume atomizer (Audio 20) .....	37
Pre-entry climate control (Audio 20) .....	38
Pre-entry climate control at departure time (Audio 20) .....	38
Pre-entry climate control using the key (Audio 20) .....	38
Setting the air distribution (Audio 20) .....	37
Setting the airflow (Audio 20) .....	37
Setting the climate mode (Audio 20) .....	37
Setting the temperature (Audio 20) .....	37
Switching on/off (Audio 20) .....	38
Switching the ionization on/off (Audio 20) .....	38

Switching the synchronizing function on/off (Audio 20) .....	39
Using the key (Audio 20) .....	38

**Climate control bar**

Calling up .....	37
------------------	----

**Contacts**

Importing .....	55
-----------------	----

<b>Controller</b> .....	17
-------------------------	----

<b>Correct use</b> .....	11
--------------------------	----

**D**

<b>Date format, setting</b> .....	28
-----------------------------------	----

<b>Day design, setting</b> .....	26
----------------------------------	----

**Delayed switch-off**

Settings (Audio 20) .....	34
---------------------------	----

<b>Dialing a number (telephone)</b> .....	50
-------------------------------------------	----

**Display**

Notes about cleaning .....	15
Selecting the design .....	26
Switching on/off .....	27

**Displaying the artist and track**

Radio .....	74
-------------	----

**DYNAMIC SELECT**

Configuration via the DYNAMIC SELECT switch .....	39
Configuring individual drive program .....	39
Displaying engine data .....	40
Displaying vehicle data .....	40
Individual configuration setting options .....	40

**E****E-mail**

Calling up the settings menu .....	59
Changing the name of the e-mail account .....	59
Configuring an e-mail account .....	59
Configuring the e-mails displayed .....	59
Deactivating the e-mail function .....	59
Deleting .....	61
Displaying details .....	60
Downloading e-mails manually .....	59
Inbox .....	60
Reading .....	60
Settings .....	59

- Unread messages ..... 60
  - EASY-ENTRY/EXIT feature**
  - Activating/deactivating (Audio 20) ..... 33
- F**
- Factory setting (reset function) ..... 31**
  - Favorites**
  - Adding ..... 25
  - Adding (predefined) ..... 25
  - Adding (your own) ..... 25
  - Deleting ..... 25
  - Displaying and calling up ..... 24
  - Moving ..... 25
  - Overview ..... 24
  - Renaming ..... 25
  - Favorites (Internet) ..... 69**
  - Favorites button ..... 30**
- G**
- GARMIN® MAP PILOT ..... 42**
- H**
- Handwriting recognition**
  - Switching text reader function on/off ..... 21
  - Touchpad ..... 21
- I**
- Importing/exporting data ..... 30**
  - Internet**
  - Conditions for access ..... 62
  - Creating favorites ..... 69
  - Entering the URL ..... 67
  - Favorites manager ..... 69
  - Favorites menu ..... 69
  - Menu functions ..... 67
  - Options menu ..... 68
  - Selecting/setting access data ..... 63
  - Setting automatic disconnection of the Internet connection ..... 65
  - Setting up an Internet connection ... 63
- L**
- Lighting**
  - Switching the locator lighting on/off ..... 34
  - Lights**
  - Ambient light settings (Audio 20) ..... 33
  - List of access data**
  - New provider ..... 64
  - List of mobile phone network providers**
  - With the selected provider ..... 64
  - Locator lighting**
  - Switching on/off (Audio 20) ..... 34
  - Locking confirmation**
  - see Acoustic locking confirmation
- M**
- Making a call**
  - Using speed dial ..... 51
  - Using the call lists ..... 50
  - Using the phone book ..... 51
  - Media Interface**
  - Media Interface menu ..... 90
  - Playback options ..... 91
  - Search ..... 91
  - Selecting a music file ..... 91
  - Supported devices ..... 90
  - Supported file formats ..... 90
  - Switching to Media Interface ..... 90
  - Media mode**
  - Bluetooth® Audio ..... 85
  - Connections for external media sources ..... 79
  - Media search ..... 84
  - Switching on ..... 79
  - Media search**
  - By folder ..... 84
  - Category list ..... 84
  - Current track list ..... 84
  - General notes ..... 84
  - Keyword search ..... 85
  - Music genres ..... 85
  - Selecting by cover ..... 85
  - Starting the media search ..... 84
  - Mercedes-Benz Apps**
  - Calling up ..... 66



**Microphone, switching on/off** ..... 51

**Mobile phone**

  Authorizing ..... 47

  Connecting (Bluetooth® inter-  
  face) ..... 45

  Connecting another mobile  
  phone ..... 48

  De-authorizing ..... 49

  Displaying Bluetooth® connection  
  details ..... 49

  Enabling for Internet access ..... 63

**MP3**

  Copyright ..... 81

  Fast forward/fast rewind ..... 83

  Notes ..... 80

  Stop and playback function ..... 83

**Multimedia system**

  see Display

**N**

**Navigation**

  Adjusting the volume of the navi-  
  gation announcements ..... 23

  Garmin® MAP PILOT ..... 42

  Overview ..... 42

  Switching to ..... 42

**Navigation announcements**

  Switching off ..... 23

**O**

**Off-road program**

  Setting (Audio 20) ..... 40

**Online and Internet functions**

  Calling up ..... 66

  Calling up the device list ..... 64

  Enabling a mobile phone for Inter-  
  net access ..... 63

  Ending the connection ..... 66

  Establishing a connection ..... 65

  Managing all Internet devices ..... 65

  Manually setting the access data  
  of the mobile phone network pro-  
  vider ..... 64

  Mercedes-Benz Apps ..... 66

  Selecting the access data of the  
  mobile phone network provider ..... 63

  Setting automatic disconnection  
  of the Internet connection ..... 65

  Setting up an Internet connection ... 63

  Web browser ..... 66

**P**

**Perfume atomizer**

  Setting the perfume intensity  
  (Audio 20) ..... 37

**Phone book**

  Automatically importing contacts  
  from the mobile phone ..... 55

  Calling up ..... 53

  Changing the display and sorting  
  criteria for contacts ..... 54

  Deleting a contact ..... 55

  Deleting imported contacts ..... 56

  Displaying the details of an entry .... 54

  Importing contacts ..... 55

  Saving a contact ..... 55

  Searching for a contact ..... 54

  Symbol overview ..... 54

**Phone call**

  Dialing ..... 50

**Picture viewer**

  Changing view ..... 92

  Displaying pictures ..... 92

  Exiting the picture viewer ..... 92

  General notes ..... 91

  Starting a slide show ..... 92

**PIN protection**

  Activating/deactivating ..... 30

**R**

**Radio**

  Activating/deactivating the sta-  
  tion presets display ..... 73

  Deleting a station ..... 73

  Displaying information ..... 74

  Displaying station information ..... 74

  Displaying the artist and track ..... 74

  Moving stations ..... 73

  Overview ..... 71

  Setting the waveband ..... 71

  Sound settings (balance, bass,  
  treble) ..... 74

  Station list ..... 73

- Storing stations ..... 73
  - Switching on ..... 71
  - Tagging music tracks (downloading/purchasing tracks from the iTunes Store®) ..... 73
  - Radio station**
  - Storing ..... 73
  - Rear view camera**
  - Displaying the image ..... 35
  - Object detection ..... 36
  - Opening the camera cover for cleaning (Audio 20) ..... 36
  - Switching object detection on/off ..... 36
  - Switching on/off (Audio 20) ..... 36
  - Receiving vCards** ..... 56
  - Redialing (telephone)** ..... 50
  - Resetting (factory settings)** ..... 31
- S**
- Safety notes**
  - Audio CD and MP3 mode ..... 80
  - Operating safety ..... 11
  - Using the telephone ..... 44
  - Satellite radio**
  - Displaying information ..... 78
  - Overview ..... 75
  - Presets menu view ..... 76
  - Registering ..... 75
  - Switching to ..... 75
  - SatRadio**
  - Channel list updates ..... 78
  - Memory functions ..... 76
  - Music and sports alerts ..... 77
  - Notes ..... 74
  - Selecting a category ..... 75
  - Selecting a channel ..... 76
  - Tagging music tracks ..... 77
  - SD card**
  - Inserting ..... 82
  - Inserting/removing ..... 82
  - Removing ..... 82
  - Selecting stations**
  - Radio ..... 72
  - Sending DTMF tones** ..... 52
  - Setting access data**
  - Online and Internet ..... 63
  - Setting the language**
  - Audio 20 ..... 29
  - Setting the night design** ..... 26
  - Setting the volume**
  - Telephone calls ..... 23
  - Short message**
  - see Text messages (SMS)
  - SMS**
  - Unread messages ..... 60
  - Sound**
  - Switching on/off ..... 23
  - Sound settings**
  - Audio ..... 93
  - Balance/fader ..... 93
  - Calling up the sound menu ..... 93
  - Equalizer ..... 93
  - Sound system**
  - see Burmester® surround sound system
  - Speed dial**
  - Deleting ..... 58
  - Setting up ..... 57
  - Station presets (radio)**
  - Deleting marked stations ..... 73
  - Storing stations**
  - Radio ..... 73
  - Switching between summer time and standard time** ..... 27
  - Switching on media mode**
  - Using the Media button ..... 79
  - Via the device list ..... 79
  - Via the main function bar ..... 79
  - System settings**
  - Automatic volume adjustment ..... 29
  - Bluetooth® ..... 28
  - Date ..... 27
  - Importing/exporting data ..... 30
  - Language ..... 29
  - Time ..... 27
  - Time zone ..... 27
- T**
- Telephone**
  - Accepting a call (Audio 20) ..... 50
  - Adding a call ..... 51
  - Adjusting the volume for calls ..... 23
  - Authorizing a mobile phone (connecting) ..... 47

Call lists .....	57	Text message settings .....	59
Call waiting .....	53	Text messages (SMS) .....	58
Calling up the telephone menu .....	45	Toggling .....	52
Calls with several participants .....	52	Using the telephone .....	50
Conference calls .....	52	<b>Telephone number</b>	
Connecting a mobile phone (general information) .....	45	Entering .....	50
De-authorizing (disconnecting) a mobile phone .....	49	<b>Text messages (SMS)</b>	
Deleting a speed dial preset .....	58	Calling the sender .....	61
Deleting messages .....	61	Calling up the settings menu .....	59
Displaying Bluetooth® connection details .....	49	Configuring the text messages displayed .....	59
Downloading messages manually ....	59	Deleting .....	61
E-mail .....	58	Displaying details .....	60
E-mail requirements .....	58	Downloading manually .....	59
E-mail settings .....	59	Inbox .....	60
Ending an active call .....	53	Reading .....	60
Entering a number .....	50	Settings .....	59
Entering phone numbers .....	50	Using a phone number in the text ....	61
Establishing the connection from the mobile phone .....	48	<b>Time</b>	
Function restrictions .....	45	Setting the format .....	28
Functions available during a call .....	51	Setting the time manually .....	28
General notes .....	44	Setting the time zone .....	27
Incoming call during an existing call .....	53	Setting the time/date format .....	28
Making a call .....	50	Switching automatic time on/off .....	27
Message conditions .....	58	<b>Touchpad</b>	
Message settings .....	59	Calling up quick access for audio ....	19
Operating options .....	45	Changing the input language for handwriting recognition .....	22
Phone book .....	53	Changing the station/music track .....	23
Reading messages .....	60	Character suggestions .....	21
Reception and transmission volume .....	49	Deleting characters .....	21
Reconnecting a mobile phone automatically .....	48	Entering a space .....	21
Rejecting a call (Audio 20) .....	50	Entering characters .....	21
Safety notes .....	44	Gesture control .....	19
Sending DTMF tones .....	52	Handwriting recognition .....	21
Setting up a speed dial .....	57	Operating the touchpad .....	19
Switching between calls (call waiting) .....	52	Overview .....	18
Switching between mobile phones .....	48	Quick access for Audio .....	23
Switching the microphone on/off ....	51	Selecting a menu item .....	19
Telephone menu overview .....	45	Switching .....	18
Text message conditions .....	58	Switching input line .....	22
		<b>U</b>	
		<b>USB audio mode</b>	
		Selecting a track .....	83

**USB devices**

- Connecting to the Media Interface ..... 82

**V****Vehicle**

- Data acquisition ..... 12

**Vehicle settings**

- Calling up ..... 33

**Volume, adjusting**

- Navigation messages ..... 23

**W****Web browser**

- Entering a web address ..... 67

## Operating safety

### Important safety notes

#### WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), your vehicle covers a distance of 44 feet (approximately 14 m) every second.

#### WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

This device complies with the following FCC regulations:

- FCC radiation exposure limits for unregulated equipment
- FCC guidelines for high-frequency exposure in Supplement C of OET Bulletin 65

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).

The device should be installed at a distance of at least 8 in (approx. 20 cm) between the radiation source and a person's body.

The minimum distance does not include body parts such as:

- hands
- wrists
- feet
- legs

### Correct use

Observe the following information when using the multimedia system:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles


Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Attaching metalized retrofit film to the windshield may affect radio reception. This can have a negative impact on all other antennas (e.g. emergency call antenna) in the vehicle interior.

**Protection against theft:** this device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.


### Declarations of conformity

#### Vehicle components which receive and/or transmit radio waves

 **USA only:** The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 **Canada only:** The wireless devices of this vehicle comply with Industry Canada license-

exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

### Qualified specialist workshop

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

### Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion. You will notice this, for example, because you will not be able to select certain menu items.

### Data stored in the vehicle

#### Data recording

A wide range of electronic components in your vehicle contain data memories.

These data memories temporarily or permanently store technical information about:

- the vehicle's operating state
- events
- malfunctions

In general, this technical information documents the state of a component, a module, a system or the surroundings.

These include, for example:

- operating conditions of system components, e.g. fluid levels
- the vehicle's status messages and those of its individual components, e.g. number of wheel revolutions/speed, deceleration in movement, lateral acceleration, accelerator pedal position
- malfunctions and defects in important system components, e.g. lights, brakes
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment, intervention of stability control systems
- ambient conditions, e.g. outside temperature

This data is of an exclusively technical nature and can be used to:

- assist in detecting and rectifying malfunctions and defects
- analyze vehicle functions, e.g. after an accident
- optimize vehicle function

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the event data memory and fault data memory.

Services include, for example:

- repair services
- service processes
- warranty events
- quality assurance

The vehicle is read out by employees of the service network (including the manufacturer) using special diagnostic testers. You can obtain more information there, if required.

After a malfunction has been rectified, the information is deleted from the malfunction memory or is continually overwritten.

When operating the vehicle, situations are conceivable in which this technical data, in connection with other information (if necessary, after consultation with an authorized expert), could be traced to a person.

Examples include:

- accident reports
- damage to the vehicle
- witness statements

Further additional functions that have been contractually agreed upon with the customer allow certain vehicle data to be conveyed by the vehicle as well. The additional functions include, for example, vehicle location in case of an emergency.

### Multimedia system/mbrace

If the vehicle is equipped with multimedia system or mbrace, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled through the multimedia system or the mbrace system.

For additional information please refer to the multimedia system User Manual and/or the mbrace Terms and Conditions.

### Event data recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed in certain crash or near crash-like situations, such as during air bag deployment or when hitting a road obstacle. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- how various systems in your vehicle are operating
- whether or not the driver and passenger seat belts are fastened
- how far (if at all) the driver is depressing the accelerator and/or brake pedal and
- how fast the vehicle is traveling

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, can combine the EDR data with the type of personal identification data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Supplemental Restraint System ("SRS") Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the SRS Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of February 20 13, 13 states have enacted laws relating to EDRs.

### Information on copyright

Information on licenses for free and Open Source software used in your vehicle and in the electronic components can be found on this website: <http://www.mercedes-benz.com/opensource>.

### Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Overview

## Components



- ① Multimedia system display
- ② Single CD drive
- ③ Touchpad (for multimedia system with touchpad)
- ④ Controller

The multimedia system consists of:

- the display
  - The display has 800 x 480 pixels
- the single CD drive
- the buttons
- the controller
- the touchpad (for multimedia system with touchpad)
- ports in the center console (2 x USB, SD-card slot)

An iPod® is connected via a USB cable.

For the multimedia system with touchpad: the controller and touchpad provide two options for entering characters and selecting functions.

## Functions

- **HD FM radio and HD AM radio/satellite radio**
- **Media**
  - Media support: audio CD, MP3 CD, two connection options for USB or Media Interface (e.g. iPod®), SD card, Bluetooth® audio
  - Music search using all media
- **Sound system**

You can select from two sound systems:

- Standard sound system
- Burmester® surround sound system
- **Navigation system**
  - Navigation using SD memory card
  - Realistic 3D map with textured city models



### • Communication

- Reading text messages
- Web browser
- Mercedes-Benz Apps with online search, Facebook, stock prices, news and much more
- Mercedes-Benz Mobile Website

### • Vehicle functions

- Vehicle settings, e.g. ambient lighting
- 360° camera
- Rear view camera
- Climate control functions, e.g. climate mode
- DYNAMIC SELECT (individual drive program)

### • Favorites button

- fast access to favorites on the controller or on the touchpad
- adds and edits favorites

## Display

### General notes

**!** Avoid any direct contact with the display surface. Pressure on the display surface may result in impairments to the display, which could be irreversible.

Wearing polarized sunglasses may impair your ability to read the display.

The display has an automatic temperature-controlled switch-off feature. The brightness is automatically reduced if the temperature is too high. The display may then temporarily switch off completely.

### Overview



- ① Status bar with displays
- ② Cover view (if available)
- ③ Main display field
- ④ Climate control status display

### Cleaning instructions

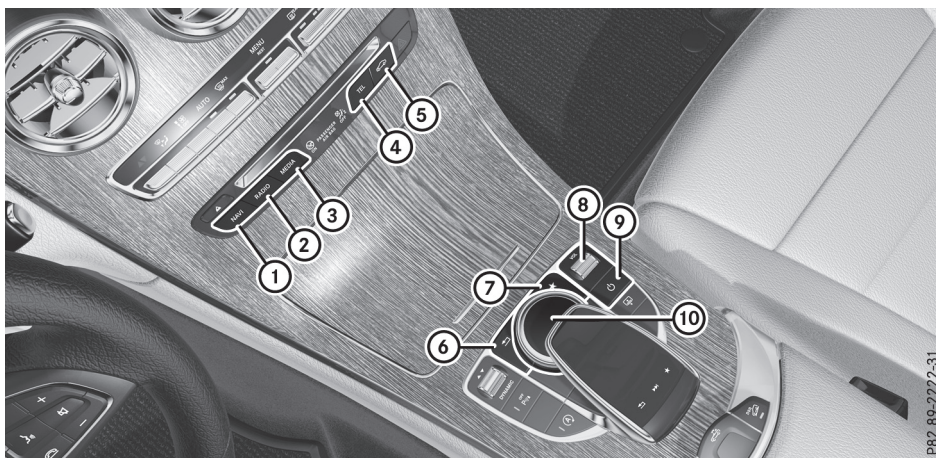
**!** Do not touch the display. The display has a very sensitive high-gloss surface; there is a risk of scratching. If you have to clean the screen, however, use a mild cleaning agent and a soft, lint-free cloth.

The display must be switched off and have cooled down before you start cleaning. Clean the display screen, when necessary, with a commercially available microfiber cloth and cleaning agent for TFT and LCD displays. Do not apply pressure to the display surface when cleaning it, as this could cause irreversible damage to the display. Then, dry the surface with a dry microfiber cloth.

Avoid using alcoholic thinners, gasoline or abrasive cleaning agents. These could damage the display surface.

## Buttons and controller

## Overview



 
Example: buttons and controller with touchpad


 
- ① Navigation button
- ② Radio button
- ③ Media button
- ④ Telephone button
- ⑤ Vehicle and system settings button
- ⑥ Back button
- ⑦ Favorites button
- ⑧ Adjusts the volume or mutes
- ⑨ Switches the multimedia system on/off
- ⑩ Controller

For Mercedes-AMG vehicles with a switchable AMG Performance exhaust system:

⑧	<ul style="list-style-type: none"> <li>• Turning: adjusts the volume</li> <li>• Pressing: switches the multimedia system on/off</li> </ul>
⑨	Adjusts the volume of the AMG Performance exhaust system (see the vehicle Operator's Manual)

### Back button

You can use the  button to exit a menu or to call up the display of the current operating mode.






- ▶ **To exit the menu:** briefly press the  button.  
The multimedia system changes to the next higher menu level in the current operating mode.
- ▶ **To call up the highest level menu:** press the  button for longer than two seconds.

## Controller

The controller in the center console lets you:

- select menu items on the display
- enter characters
- select a destination on the map
- save entries

The controller can be:

- turned 
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held 

## Favorites button

With the favorites button, you can select, add or edit favorites.

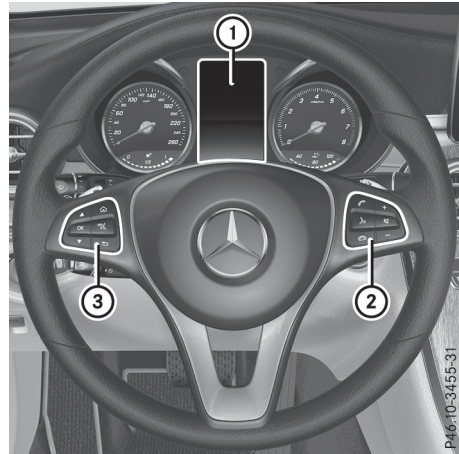
- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select a favorite:** turn and press the controller.
- ▶ Press the controller.

Other functions (▷ page 24).

## Touchpad

Multimedia system with touchpad: alternatively, you can use the touchpad to select and enter information (▷ page 18).

## Multifunction steering wheel



- ① Multifunction display
- ② Right control panel
- ③ Left control panel

### Left control panel



- Calls up the main menu



#### Press briefly:



- Scrolls in lists
- Selects a menu or function
- In the **Radio/Media** menu: opens the track or station list and selects a station or an audio track
- In the **Telephone** menu: switches to the phone book and selects a name or a telephone number



#### Press and hold:



- Scrolls quickly through all lists
- In the **Radio/Media** menu, selects a station or an audio track using rapid scrolling
- In the **Telephone** menu: starts rapid scrolling if the phone book is open

OK	<ul style="list-style-type: none"> <li>In all menus: confirms the selected entry in the list</li> <li>In the <b>Radio/Media</b> menu: opens the list of available radio sources and media</li> <li>In the <b>Telephone</b> menu: switches to the phone book and starts dialing the selected number</li> </ul>
OFF/ON	Switches off voice operation of the Garmin® MAP PILOT (see the manufacturer's operating instructions)
←	<p><b>Press briefly:</b></p> <ul style="list-style-type: none"> <li>Back</li> <li>In the <b>Radio/Media</b> menu: deselects the track, station list or list of available radio sources and media</li> <li>Hides display messages</li> <li>Exits the telephone book/redial memory</li> </ul>
←	<p><b>Press and hold:</b></p> <ul style="list-style-type: none"> <li>Calls up the standard display in the <b>Trip</b> menu</li> </ul>

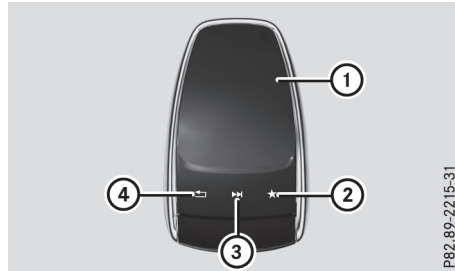
### Right control panel

	<ul style="list-style-type: none"> <li>Rejects or ends a call</li> <li>Exits the telephone book/redial memory</li> </ul>
	<ul style="list-style-type: none"> <li>Makes or accepts a call</li> <li>Switches to the redial memory</li> </ul>
+ -	<ul style="list-style-type: none"> <li>Adjusts the volume</li> </ul>
	<ul style="list-style-type: none"> <li>Mute</li> </ul>
	Switches on voice operation of the Garmin® MAP PILOT (see manufacturer's operating instructions)

## Touchpad

### Touchpad overview

- ! Do not use any sharp objects on the touchpad. This could damage the touchpad.



P82.89-2215-31

- ① Touch-sensitive surface
- ② Favorites button
- ③ Calls up quick access for audio
- ④ Back button

### Using the touchpad, you can:

- select menu items (▷ page 19)
- enter characters (handwriting recognition) (▷ page 21)
- control the active audio source (▷ page 23)
- create, manage and call up favorites (▷ page 24)
- save entries

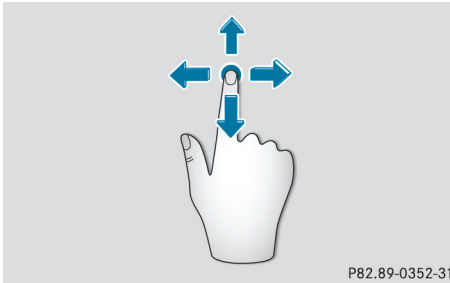
Further information on operating the touchpad (▷ page 19).

### Switching the touchpad on/off

- ▶ Press the button. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Touchpad**: turn and press the controller.
- ▶ Select **Activate Touchpad**. The touchpad is switched on  or off .

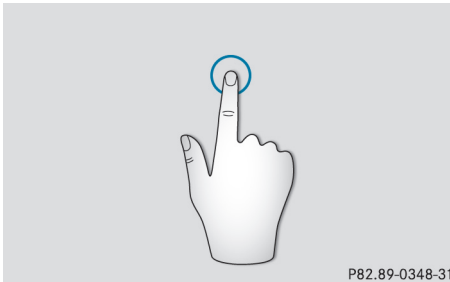
## Operating the touchpad

### Selecting a menu item



- ▶ Use one finger to touch the touch-sensitive surface.
- ▶ Swipe your finger up, down, to the left or right. The selection in the display moves in accordance with the direction of movement. You can navigate in lists or menus in this way.

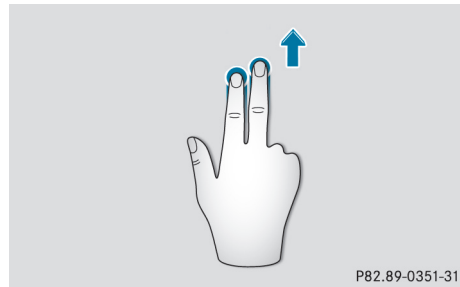
### Confirming a selection



Do not press your finger too hard on the touchpad. This could cause malfunctions.

- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point. A menu, an option or an application is started.

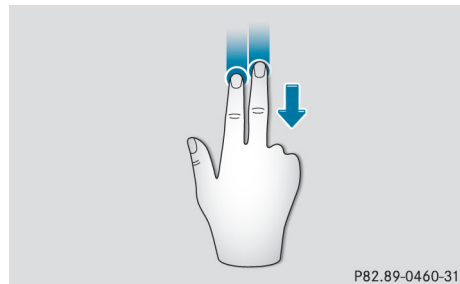
### Calling up quick access for audio



- ▶ Use two fingers to touch the lower part of the touch-sensitive surface.
- ▶ Swipe your fingers up. Quick access is displayed.

Further information on quick access for audio (> page 23).

### Hiding quick access for audio



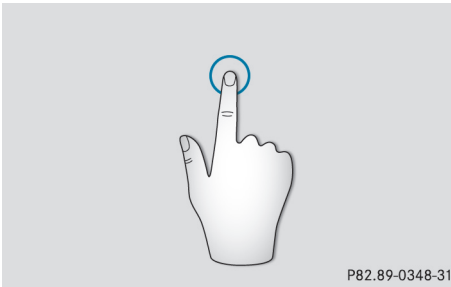
- ▶ Use two fingers to touch the touch-sensitive surface.
- ▶ Swipe your fingers down. Quick access is hidden.

### Operating the control for vehicle and sound settings

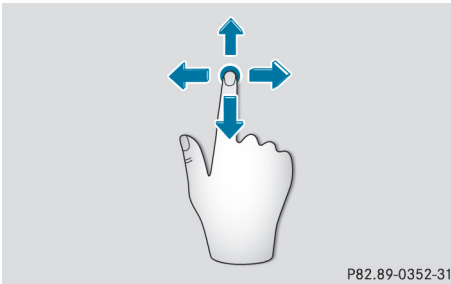


- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
  - ▶ Turn both fingers clockwise.  
The control setting is increased.
- or
- ▶ Turn both fingers counter-clockwise.  
The control setting is decreased.

### Moving the map

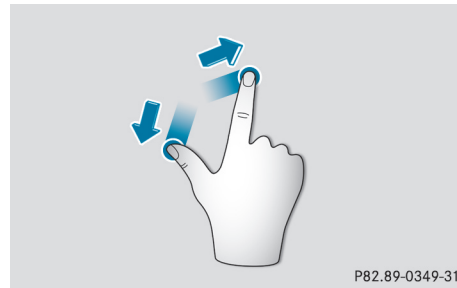


- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point. The crosshair is shown.



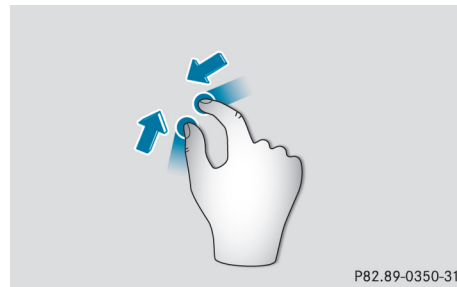
- ▶ Touch the touch-sensitive surface again with one finger.
- ▶ Swipe your finger in any direction.  
The map is moved in the direction of movement.

### Zooming in on the map



- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
- ▶ Glide your fingers away from each other.  
The map scale is magnified.

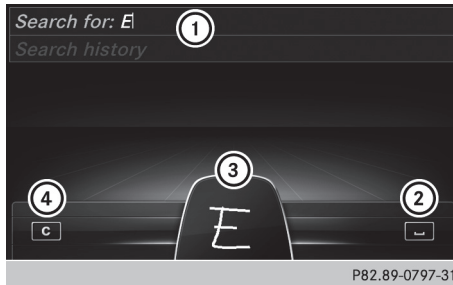
### Zooming out of the map



- ▶ Touch the touch-sensitive surface with two fingers, spaced far apart.
- ▶ Glide your fingers towards each other.  
The map scale is reduced.

## Handwriting recognition

### Handwriting recognition overview



- ① Active input line
- ② Inserts a space (▷ page 21)
- ③ Illustration of the touch-sensitive surface
- ④ Deletes characters (▷ page 21)

You can use handwriting recognition for text, numbers or characters in any input line.

If the character that you have entered can be interpreted in different ways, these options are displayed. More information on the character suggestions (▷ page 21).

You can additionally switch the handwriting recognition read-aloud function on and off.



- ① To exit the menu
- ② To return to handwriting recognition
- ③ To change the input line or the position of the cursor
- ④ To change the input language
- ⑤ To finish character entry

▶ **To display the menu:** press the touchpad.

### Switching the text reader function of the handwriting recognition on/off

You can switch the text reader function of the handwriting recognition on or off.

- ▶ Press the button. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Touchpad**: turn and press the controller.
- ▶ To select **Read Out Handwriting Recognition**: turn and press the controller. The text reader function is switched on  or off .

### Entering characters

Requirement: an input line for text, numbers or characters has been selected.

- ▶ Use one finger to draw the desired character on the touch-sensitive surface. The character recognized is entered in the input line. You can draw the next character on the touch-sensitive surface.

If the character can be interpreted in different ways, these options are displayed.

More information on the character suggestions (▷ page 21).

### Character suggestions

- ▶ **To select a character suggestion:** turn the controller. The selected character is entered instead of the automatically recognized character. Character entry can be continued.

### Inserting a space

Requirement: an input line for text, numbers or characters has been selected.

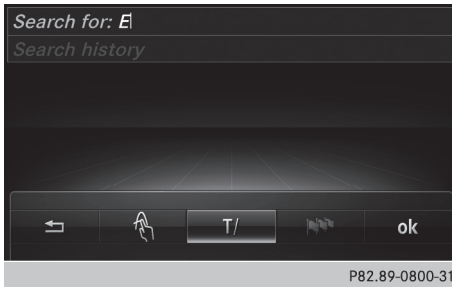
- ▶ Use your finger to touch the touch-sensitive surface and swipe to the right. A space is entered into the input line.

### Deleting characters

Requirement: an input line for text, numbers or characters has been selected.

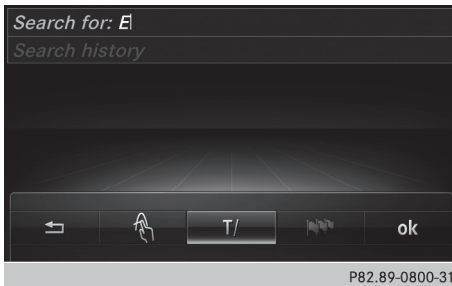
- ▶ Use your finger to touch the touch-sensitive surface and swipe to the left. The character last entered is deleted.

## Switching input lines



- ▶ Press the touchpad.  
A symbol is shown.
- ▶ To select **T/**: swipe your finger to the left or right and press.
- ▶ To select the input line: swipe up or down and press.  
The selected input line is active and character entry can be continued.

## Moving the cursor within the input line



- ▶ Press the touchpad.  
A symbol is shown.
- ▶ To select **T/**: glide your finger to the left or right and press.
- ▶ To move the cursor: glide to the left or right.

## Changing the input language for handwriting recognition

Requirement: an input line for text, numbers or characters has been selected.

- ▶ Press the touchpad.  
A symbol is shown.
- ▶ To select **☰**: swipe your finger to the left or right and press.  
The list of available input languages appears.
- ▶ To select a language: swipe up or down and press.  
The input language for handwriting recognition has been changed.

## Searching in lists

The phone book search is used as an example. You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw the letter on the touchpad surface.  
The first contact with the selected first character is highlighted in the phone book.  
Further information on handwriting recognition on the touchpad (> page 21).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ **To complete the search and return to the phone book:** press the touchpad.

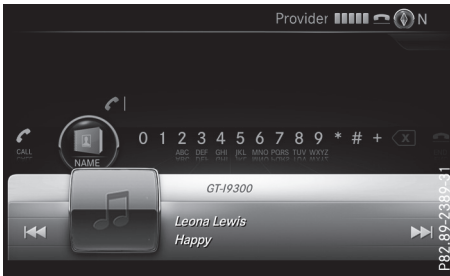
## Switching between the controller and the touchpad as input device

Requirement: an input line for text, numbers or characters has been selected.

- ▶ **To switch from character entry using the controller to handwriting recognition on the touchpad:** use one finger to press the touchpad.  
Handwriting recognition on the touchpad is active.
- ▶ **To switch from handwriting recognition on the touchpad to character entry using the controller:** press the controller.  
Character entry using the controller is active.



### Quick access for audio

 


Depending on the audio source that is currently activated, you can use this function to select the next station or music track.

- ▶ Call up quick access (> page 19).  
The current audio source is displayed.
- ▶ To select the previous or next station or music track: swipe to the left or right.  
The selected station or music track is played.

 

### Basic functions

#### Switching the multimedia system on/off

- ▶ Press the  button on the center console to the right of the controller.  
The multimedia system calls up the previously selected menu.  
If you switch the multimedia system off, playback of the current media source will also be switched off.

#### Adjusts the volume

#### Adjusting the volume for media sources

- ▶ Turn the thumbwheel to the right of the controller.
- or
- ▶ Press the  or  button on the multi-function steering wheel.  
The volume of the media source currently selected changes.

#### Adjusting the volume for traffic announcements and navigation announcements

During traffic or navigation announcements:

- ▶ Turn the thumbwheel to the right of the controller.

or

- ▶ Press the  or  button on the multi-function steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

#### Adjusting the volume for phone calls

You can adjust the volume for hands-free mode during a telephone call.

- ▶ Turn the thumbwheel to the right of the controller.

or


- ▶ Press the  or  button on the multi-function steering wheel.


#### Switching the sound on or off

#### Media source sound

- ▶ Press the thumbwheel to the right of the controller.

or

- ▶ Press the  button on the multifunction steering wheel.

- i** If the audio output is switched off, the status line will show the  symbol. If you switch the media source or change the volume, the sound is automatically switched on.

- i** Even if the sound is switched off, you will still hear navigation system announcements.

#### Switching navigation announcements off and on again

If your vehicle is equipped with Garmin® MAP PILOT, you can switch navigation announcements on and off.

- ▶ **To switch off navigation announcements:** press the thumbwheel to the right of the controller during the announcement. The **Spoken driving recommendations have been deactivated.** message appears.
  - ▶ **To switch navigation announcements back on again:** restart the vehicle.
- or
- ▶ If navigation is available via an SD card, start a new route calculation.

### Basic menu displays

- ▶ Press the **NAVI**, **RADIO**, **MEDIA**, **TEL** or **PHONE** button.
  - Navigation (if available):** the main menu appears.
  - Radio:** the display of the radio mode last set appears.
  - Media:** the display for the media source last set appears.
  - Telephone:** the display for the communication function last set appears.
  - Vehicle functions:** the vehicle functions display appears.
- ▶ **To show the menu:** slide **↑** **☉** **↓** the controller. The menu for the selected functions appears. Depending on the operation, the marking is shown in main function bar (top) or menu bar (bottom).
- ▶ **To select a menu item:** turn and press the controller. If you have selected a menu item from the main function bar, switch to the last menu set for the selected function. The menu bar features options within the currently set function.

### Selecting the operating mode for a main function

You can select the available operating modes for the main functions, e.g. communication.

In the communication menu, you can:

- switch to telephone mode
  - call up the Internet
  - call up the Digital Operator's Manual for the telephone/🌐
- ▶ Press the **TEL** button. If telephone mode was the last mode selected, the telephone menu appears.
  - ▶ **To call up the menu:** press the **TEL** button again.
- or
- ▶ To select **Tel/🌐**: slide **↑** **☉** and press the controller. A menu appears. **Phone** is at the front.
  - ▶ To select a menu option: turn and press the controller.

## Favorites

### Overview of favorites

- ▶ **To display the favorites overview:** press the favorites button on the controller.
- ▶ **To show the menu bar:** slide **☉** **↓** the controller.

You can manage a total of 20 favorites.

Use these functions:


- Displaying and selecting favorites (▷ page 24)
- Adding favorites (▷ page 25)
- Renaming favorites (▷ page 25)
- Moving favorites (▷ page 25)
- Deleting favorites (▷ page 25)

### Displaying and selecting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To call up a favorite:** turn and press the controller.

## Adding favorites



### Adding predefined favorites

- ▶ Press the favorites button on the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Reassign**: turn and press the controller.  
The categories and predefined favorites are displayed.
- ▶ **To select a category:** turn and press the controller.  
The available favorites are displayed.
- ▶ **To select a favorite:** turn and press the controller.
- ▶ **To add a favorite at the desired position:** turn and press the controller.  
If there is already a favorite at this position, then this will be deleted.


### Adding your own favorites

You can store phone numbers from the phone book or radio station as favorites.

A phone number from the phone book is used as an example.

- ▶ Call up the phone book (▷ page 53).
- ▶ Search for and highlight a contact (▷ page 54).
- ▶ **To add a telephone number as a favorite at the desired position:** press and hold the favorites button on the controller until the favorites are displayed.
- ▶ Turn, slide  or  and press the controller.  
If there is already a favorite at this position, it will be deleted and replaced by a new one.


## Renaming favorites

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ **To select a favorite to be renamed:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Rename**: turn and press the controller.


- ▶ Enter characters using the controller or the touchpad (▷ page 21).

- ▶ **To finish the entry:** select **OK**.  
The favorite has been renamed.

## Moving favorites

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ **To select a favorite to be moved:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Move**: turn and press the controller.
- ▶ **To store a favorite in the desired order:** turn and press the controller.  
If a favorite is stored over another favorite, the favorite underneath is deleted.

## Deleting favorites

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ **To select a favorite to be deleted:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.  
The favorite is deleted.
- ▶ If you select **No**, the process is canceled.

### Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

### Important safety notes

#### WARNING

If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

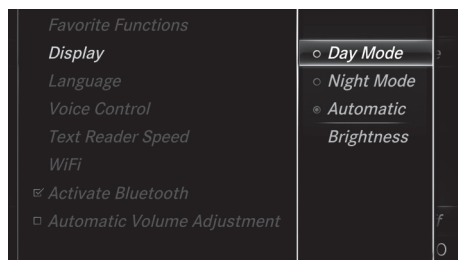
Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.


 
## Display settings

### Setting the brightness

The brightness detected by the display light sensor affects the setting options for this function.


 


P82.89-0145-31

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.  
A menu appears.
- ▶ To select **Display**: turn and press the controller.  
A menu appears.
- ▶ Select **Brightness** .  
A control appears.
- ▶ Select the desired brightness.

### Display design

 

The display features optimized designs for day-time and night-time operation. You can set the design by manually selecting day or night design or opt for an automatic setting.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.  
A menu appears.
- ▶ To select **Display**: turn and press the controller.  
A menu appears.
- ▶ Select **Day Mode**, **Night Mode** or **Auto**.  
The ● dot indicates the current setting.

Design	Explanation
Day Mode	The display is set permanently to day design.
Night Mode	The display is set permanently to night design.
Automatic	The multimedia system evaluates the data of the light sensor and automatically switches over the display design.

### Switching the display on/off

#### Switching off the display

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Display Off**: slide , turn and press the controller. The display goes out.
- ▶ **To switch the display on again**: press the controller.

### Time settings



#### General information

Vehicles with GPS reception: the multimedia system can automatically set the time and date. The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival

#### Switching automatic time on and off

 

The **Automatic Time Settings** function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide , the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To switch **Automatic Time Settings** on  or off : turn and press the controller.

#### Setting the time zone

To set the time zone, the **Automatic Time Settings** function must be activated.

 

The **Time Zone**: function is only available in vehicles with GPS reception.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide , the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Time Zone**:: turn and press the controller. A list of countries appears. The • dot indicates the current setting.
- ▶ **To select the country in which you are currently driving**: turn and press the controller. The country is accepted. A time zone list may also be displayed, depending on the country selected.
- ▶ **To select the desired time zone**: turn and press the controller. The time zone is accepted. A list of available options for setting summer time appears (▶ page 27).

#### Setting summer and standard time

Using the **Daylight Saving Time** function, you can set the automatic changeover to summer time or switch the summer time settings on and off. The changeover to summer time advances the time by one hour.

The **Daylight Saving Time** function is not available in all countries. The **Automatic** option is only available in vehicles with GPS.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide , the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Daylight Saving Time**: turn and press the controller. A list of available options for setting summer time appears.
- ▶ To select **Automatic, On** or **Off**: turn and press the controller.

Setting	Function
Automatic	The summer and standard time are automatically changed over.
On	The clock is advanced one hour ahead of standard time.
Off	The standard time for the chosen time zone is selected.

### Manual time setting



Vehicles with GPS reception: using the manual time settings, you can set the time forwards or backwards by up to several hours.

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Set Time Manually**: turn and press the controller. An analog clock appears.
- ▶ To set the hour: turn the controller.
- ▶ To highlight minutes: slide the controller.
- ▶ To set minutes: turn and press the controller. The time is accepted. The **Automatic** function is deactivated .

**i** If **Automatic** is reactivated, the previous settings for time zone and summer time changeover are restored.

### Setting the time and date format

Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Format**: turn and press the controller.
- ▶ To select the desired date format: turn and press the controller. The **•** dot indicates the current setting.
- ▶ To select the desired time format: turn and press the controller. The **•** dot indicates the current setting.

Abbreviation	Meaning
YYYY/MM/DD	Year/Month/Day date format, year (all four digits)
YY/MM/DD	Year/Month/Day date format, year (two digits)
MM/DD/YYYY	Month/Day/Year date format, year (all four digits)
DD/MM/YYYY	Day/Month/Year date format, year (all four digits)
HH:MM (24 hrs)	Hours : Minutes (24 hour time format)
HH:MM (AM/PM)	Hours : Minutes (AM/PM time format)

### Bluetooth® settings

#### General information about Bluetooth®

Bluetooth®-capable devices, e.g. mobile phones, need to comply with a certain profile in order to be connected to the multimedia sys-

tem. Every Bluetooth® device has its own specific Bluetooth® name.

 
 
Bluetooth® technology is a standard for short-range wireless data transmissions up to approximately 10 m.

You can use Bluetooth® to connect your mobile phone to the multimedia system, for example:

- use the hands-free system
- establish an Internet connection
- listen to music using Bluetooth® Audio
- exchange vCards

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

### Activating/deactivating Bluetooth®

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To activate  or deactivate  **Activate Bluetooth**: turn and press the controller.

### Automatic volume adjustment


 
#### General information

With the **Automatic Volume Adjustment** function, the volumes of different audio sources are adjusted for each other, to compensate for relative differences in volume.

**For example:** changing from a relatively quiet to a relatively loud radio station. The volume for both stations sounds the same. Manual readjustment of the volume is not required.

The **Automatic Volume Adjustment** function is deactivated  when the vehicle leaves the factory. Using this function, the dynamic range of the music is slightly reduced. To make the most of the audiophile sound quality, it is recommended to leave it off.

### Switching the automatic volume adjustment on/off

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Automatic Volume Adjustment**: turn and press the controller. Switch the **Automatic Volume Adjustment** function on  or off .



### Setting the system language

#### General information

This function allows you to determine the language for the menu displays and the navigation messages. The selected language affects the characters available for entry.

- i** The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

### Setting the system language

 

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Language**: turn and press the controller. The list of languages appears. The • dot indicates the current setting.
- ▶ Select the desired language. The multimedia system loads the selected language and sets it.

### Calling up and editing the Favorites function

The Favorites function can, depending on the vehicle equipment, be called up as follows:

- via the **System Settings** menu
- via the Favorites button on the controller
- via the Favorites button on the touchpad (▷ page 18)


#### Calling up the Favorites function via the system menu

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Favorite Functions**: press the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller.

#### Calling up the Favorites function via the controller or touchpad

- ▶ Press the Favorites button on the controller or touchpad. The menu for setting favorites appears.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller.

#### Exiting the Favorites function

- ▶ Press the Favorites button again.
- or
- ▶ Press the  button.

Further information on favorites (▷ page 24).

### Importing/exporting data

#### General notes

- ❗ Never remove the stick or card when writing data to the USB stick or the memory card. You may otherwise lose data.

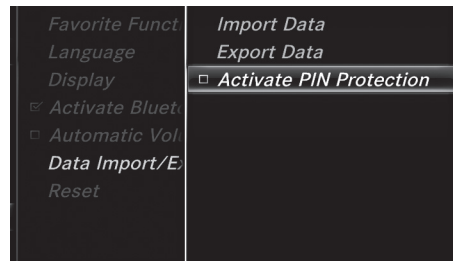
Using this function you can do the following with your personal data:

- transfer your data from one multimedia system to another multimedia system  
The transfer may be limited or not possible, depending on the vehicle's equipment.
- make a backup copy of your personal data (export data) and load it again (import data)
- protect your data from unwanted export by activating a pin prompt (presetting: deactivated )



You can either use an SD card or a USB storage device (e.g. a USB stick) as temporary storage.

You can obtain further information on data import and export from an authorized Mercedes-Benz Center.


 
#### Activating/deactivating PIN protection



P82.89-0566-31

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Activate PIN Protection**. Activate  or deactivate  PIN protection. When activating PIN protection, you will be prompted to enter a PIN.



- ▶ To enter the 4-digit PIN and select  : turn and press the controller.  
You will be prompted to enter the PIN again.
  - ▶ Enter the PIN again and select  .  
The PIN prompt now protects your personal data from unwanted export.
- i** If you deactivate your PIN protection, you will first be prompted to enter your PIN. If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate your PIN protection for you. Alternatively, you can deactivate PIN protection by resetting your personal data (▶ page 31).

### Importing/exporting data

You can export bookmarks, system settings that you have made and radio station lists, for example.

Mercedes-Benz is not liable for any loss of data.



P82.89-0562-31




Vehicles equipped with a Garmin® MAP PILOT navigation module: if you want to import or export data using an SD card, you must first remove the Garmin® MAP PILOT SD card (▶ page 82).

### Connecting a USB storage device

- ▶ Insert the SD memory card (▶ page 82).  
or
- ▶ Connect a USB device (e.g. a USB memory stick) (▶ page 82).

### Importing or exporting data

- i** If you import data, the existing data in the multimedia system is overwritten. You will see a message to this effect. The multimedia system is restarted after the data import.

- ▶ Press the  button.  
or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.  
A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Import Data** or **Export Data**.  
If PIN protection is activated, a PIN prompt appears when you select **Export Data**.
- ▶ To enter the 4-digit PIN and select  : turn and press the controller.  
PIN protection is deactivated.
- ▶ To select **Memory Card, USB 1** or **USB 2**: turn and press the controller.  
This function exports all the data to the selected disc.

## Reset function

### General information


You can reset the multimedia system to the factory settings. Resetting is recommended before handing over or selling the vehicle, for example. This includes the deletion of all of your personal data on the multimedia system. These include, for example:


- Station presets
- Entries in the destination memory
- Entries in the list of previous destinations in the navigation system
- Authorized telephone

In addition, an activated PIN protection, which you have used to protect your data against unwanted export, will be deactivated during a reset.

Mercedes-Benz is not liable for any loss of data.

### Resetting the multimedia system

- ▶ Press the  button.  
or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.  
A menu appears.
- ▶ To select **Reset**: turn and press the controller.  
A prompt appears asking whether you wish to reset.
- ▶ Select **Yes**.  
A prompt appears again asking whether you really wish to reset.
- ▶ Select **Yes**.  
A message appears. The multimedia system is reset to the factory settings and restarted.

## Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Important safety notes

### WARNING

 
If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

 
You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

## Vehicle settings

### Calling up vehicle settings

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Vehicle Settings**: press the controller. The **Vehicle Settings** menu is active.
- ▶ To select the desired vehicle setting: turn and press the controller. The main area with the setting element is active.

### Selecting a different vehicle setting:

- ▶ To activate the menu for selecting the vehicle setting: slide  the controller.

### Exiting the vehicle settings:

- ▶ To select : slide  and press the controller.

## Ambient lighting

### Setting the brightness

- ▶ Call up **Vehicle Settings** (> page 33).
- ▶ To select **Ambient Light Brightness**: turn and press the controller. The setting element is active. The brightness value is displayed.
- ▶ To change the brightness value: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

### Setting the color

- ▶ Call up **Vehicle Settings** (> page 33).
- ▶ To select **Ambient Light Color**: turn and press the controller. The setting element is active.
- ▶ To select a color: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

## Setting the easy entry and exit feature

This function makes getting in and out of your vehicle easier.

- ▶ Call up **Vehicle Settings** (> page 33).
- ▶ To select **Easy Entry/Exit**: turn and press the controller. The setting element is active.
- ▶ To change the setting: press the controller.

You can find further information on the easy entry and exit feature in the vehicle Operator's Manual.

## Activating/deactivating the acoustic locking verification signal

You can also set an audible signal to confirm that the vehicle has been locked.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Acoustic Lock Feedback**: turn and press the controller.  
The function switches on or off, depending on the previous setting.

You can find further information on the locking feature in the vehicle Operator's Manual.

#### Switching the seat belt adjustment on/off

The **Belt Adjustment** function adjusts the driver's and front-passenger seat belt to the upper body of the vehicle occupants.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Belt Adjustment**: turn and press the controller.  
The function switches on or off, depending on the previous setting.

You can find further information on seat belt adjustment in the vehicle Operator's Manual.

#### Switching the automatic mirror folding function on/off

When the **Automatic Mirror Folding** function is activated, the outside mirrors fold in automatically as soon as you lock the vehicle from the outside. The outside mirrors fold out automatically again as soon as you unlock the vehicle.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Automatic Mirror Folding**: turn and press the controller.  
The function switches on or off, depending on the previous setting.

You can find further information on the automatic folding mirror function in the vehicle Operator's Manual.

#### Switching locator lighting on/off

If you switch on the **Locator Lighting** function, the exterior lighting is switched on for a short time when it is dark. The light switch must be set to **AUTO**; see the vehicle Operator's Manual.

The exterior lighting remains lit for 40 seconds after the vehicle is unlocked. When you start the

engine, the locator lighting is switched off and the automatic driving lights are activated.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Locator Lighting**: turn and press the controller.
- ▶ Press the controller.  
The function is switched on or off, depending on the previous status.

You can find further information on the locator lighting in the vehicle Operator's Manual.

#### Activating/deactivating the automatic door locking mechanism

The vehicle is locked automatically when the ignition is switched on and the vehicle is traveling faster than walking pace.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Automatic Locking**: turn and press the controller.  
The function switches on or off, depending on the previous setting.

You can find further information on the locking feature in the vehicle Operator's Manual.

#### Setting the switch-off delay time

##### Interior lighting switch-off delay time

The interior lighting is activated for the duration of the switch-off delay time when the SmartKey is removed from the ignition lock.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Interior Lighting Delayed Switch-off**: turn and press the controller.  
The setting element is active.
- ▶ To change the delayed switch-off time: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

##### Exterior lighting switch-off delay time

If you switch on the **Exterior Lighting Delayed Switch-off** function, the exterior lighting is switched on for a short time after the engine is switched off. The light switch must be set to **AUTO**; see the vehicle Operator's Manual.

The exterior lighting remains lit for 60 seconds after the engine is switched off. If you close all

the doors and the tailgate, the exterior lighting switches off after the set time.

- ▶ Call up **Vehicle Settings** (▷ page 33).
- ▶ To select **Exterior Lighting Delayed Switch-off**: turn and press the controller. The setting element is active.
- ▶ To change the delayed switch-off time: turn and press the controller.

## 360° camera

### General notes

The 360° camera covers the immediate surroundings of the vehicle and assists you, for instance when parking or at exits with reduced visibility.

The 360° camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that no persons or animals are in the maneuvering range.

For more information on the 360° camera see the vehicle Operator's Manual.

### Displaying the 360° camera image

The 360° camera image can be displayed if:

- your vehicle is equipped with a 360° camera
- the **360° Camera** function is switched on (see the vehicle Operator's Manual)
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **360° Camera**: turn and press the controller. The 360° camera image appears in split-screen mode.

You will see the previous view on the display if, when the function is switched on:

- you turn the SmartKey to position **1** in the ignition lock
- you select transmission position **P**
- when you are driving at moderate speeds

### Switching the display off manually



- ▶ To select : slide  and press the controller.

### Switching the display on automatically

- ▶ You can automatically switch the 360° camera display using reverse gear (▷ page 35).

### Switching automatic mode of the 360° camera on/off

This function activates the 360° camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ **To switch to the menu bar**: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ To select **360° Camera**: turn and press the controller. The **360° Camera** menu appears.
- ▶ Select **Activation by R gear**. The function is switched on  or off .

### Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the 360° camera menu: turn the controller and press to confirm. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle exceeds a moderate speed

## Rear view camera

### General notes

The rear view camera covers the immediate surroundings behind the vehicle and assists you when parking.

 

The rear view camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that there are no persons, animals or objects in

the maneuvering area while maneuvering and parking in parking spaces.

You can find further information about the rear view camera in the vehicle Operator's Manual.

### Switching automatic mode of the rear view camera on/off

This function activates the rear view camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **Rear View Camera**.
- ▶ Select **Activation by R gear**. The function is switched on  or off , depending on the previous status.

When you start the vehicle and engage reverse gear, the camera cover opens automatically if the function is activated. The area behind the vehicle is shown with guide lines in the display; see the vehicle Operator's Manual.

For further information on the rear view camera; see the vehicle Operator's Manual.

### Object detection

The rear view camera can detect moving and stationary objects. If, for example, a pedestrian or another vehicle is detected, these objects are marked with bars. The system is able to detect and mark stationary objects when your vehicle is moving. Moving objects will always be detected and marked.

#### Switching object detection on/off

- ▶ To select **Object Detection** in the rear view camera menu: turn and press the controller. The function is switched on  or off , depending on the previous status.

### Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the rear view camera menu: turn and press the controller. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle pulls away

## Climate control settings

### Overview

You can adjust the climate control settings using the climate control bar (▶ page 36) or the climate control menu (▶ page 37).

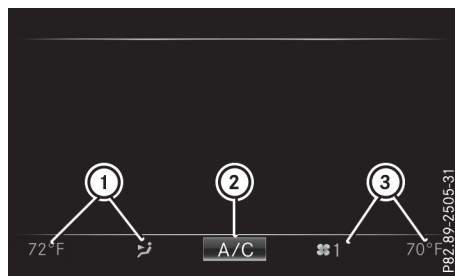
Using the climate control bar you can set the most important climate control functions, for example:

- Temperature (▶ page 36)
- Airflow (▶ page 37)
- Air distribution (▶ page 37)

You can find all available climate control functions in the climate control menu. You can use the climate control bar (▶ page 36) to switch to the climate control menu.

### Settings in the climate control bar

#### Overview

 



Example

- ① Adjusts temperature and air distribution and displays the current setting

- ② Calls up the climate control menu and displays the current cooling setting
- ③ Adjusts airflow and temperature and displays the current setting

 
### Calling up the climate control bar

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller repeatedly until the climate control bar is activated.

 
### Setting the temperature

- ▶ Call up the climate control bar (▷ page 37).
  - ▶ To select the current temperature on the left or right: turn and press the controller. The temperature setting scale appears.
  - ▶ To change the setting: turn the controller.
  - ▶ To close the temperature setting scale: press the controller.
- i** You can also use the climate control menu to set the temperature (▷ page 37).

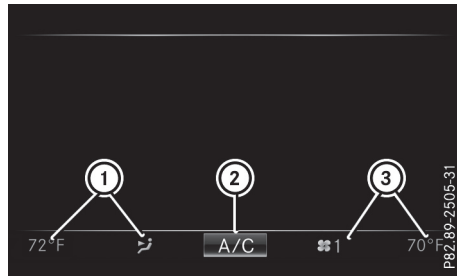
### Setting the air distribution

- ▶ Call up the climate control bar (▷ page 37).
  - ▶ To select the current air distribution display, e.g. : turn and press the controller. The air distribution setting scale appears.
  - ▶ To change the setting: turn the controller.
  - ▶ To close the temperature setting scale: press the controller.
- i** You can also use the climate control menu (▷ page 37) to set the air distribution.



### Setting the airflow

- ▶ Call up the climate control bar (▷ page 37).
  - ▶ To select : turn and press the controller. The airflow setting scale appears.
  - ▶ To change the setting: turn the controller.
  - ▶ To close the temperature setting scale: press the controller.
- i** You can also use the climate control menu (▷ page 37) to set the airflow.

### Calling up the climate control menu




#### Example

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller repeatedly until the climate control bar is activated.
- ▶ To select from climate control bar ②: turn and press the controller. The menu for selecting the climate control function is activated.
- ▶ To select the climate control function: turn and press the controller. The selected climate control function appears.

### Settings in the climate menu

#### Adjusting the climate mode settings

By setting the climate mode you determine the type of airflow. The setting is active when the air conditioning system is set to **AUTO**, see the vehicle Operator's Manual.


- ▶ Call up the climate control menu (▷ page 37).
- ▶ To select **Climate Mode**: turn and press the controller.
- ▶ To change the setting: turn the controller.
- ▶ To exit the menu: press the  button.

The current airflow setting is shown in the climate control bar: **DIFFUSE**, **MEDIUM** or **FOCUS** (▷ page 36).

#### Starting/stopping the perfume atomizer


The perfume atomizer makes it possible to scent the air in individual compartments in the vehicle

interior. Further information (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (▷ page 37).
- ▶ To select **Air Freshener**: turn and press the controller.  
The setting element is active.
- ▶ To start/stop the perfume atomizer: press the controller.
- ▶ To set the intensity: turn the controller when the atomizer is switched on.
- ▶ To exit the menu: press the  button.

### Switching ionization on/off


The ionization has a cleansing effect on the air in the vehicle interior. Further information (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (▷ page 37).
- ▶ To select **Ionization**: turn and press the controller.  
The setting element is active.
- ▶ To switch the ionization on or off: turn the controller.
- ▶ To exit the menu: press the  button.

### Pre-entry climate control via SmartKey

This function is available for plug-in hybrid vehicles.

 
Before getting in, the driver's seat area or the whole interior can be briefly warmed or ventilated in advance with the air from the air vents being pre-cooled.

- ▶ Call up the climate control menu (▷ page 37).
- ▶ To select **Pre-entry Climate Control via Key**: turn and press the controller.
- ▶ To switch on or off: turn the controller.
- ▶ To exit the menu: press the  button.

Further information on pre-entry climate control; see the vehicle Operator's Manual.

### Pre-entry climate control at time of departure


You can climatize the driver's seat and the vehicle interior in time for the departure time set.

- ▶ Call up the climate control menu (▷ page 37).
- ▶ To select **Pre-entry Climate Ctrl. at Departure Time**: turn and press the controller.  
A rotary menu appears.
- ▶ To select the setting: turn the controller.  
The menu symbol, text and image show the selected setting.
- ▶ To exit the menu: press the  button.

### Settings in the bottom bar of the climate control menu

#### Activating/deactivating climate control

This setting is made in the bottom bar of the climate control menu.


- ▶ Call up the climate control menu (▷ page 37).
- ▶ Slide  the controller repeatedly until the bottom bar is activated.
- ▶ To select  **Climate Ctrl On**: turn and press the controller.  
The climate control is switched on  or off  depending on the settings.

If the climate control is switched off:

- the climate control setting functions are deactivated.
- the blower is switched off.
- the air recirculation flaps are closed.

#### Switching cooling with air dehumidification on/off

This setting is made in the bottom bar of the climate control menu.

- ▶ Call up the climate control menu (▷ page 37).
- ▶ Slide  the controller repeatedly until the bottom bar is activated.
- ▶ To select  **A/C**: turn and press the controller.
- ▶ Switch cooling with air dehumidification on  or off .


- i** Deactivating the cooling with air dehumidification function reduces fuel consumption.



### Synchronizing the climate control settings

Use  **Sync** (synchronization) to select the climate control setting for all zones together  or separately .

This setting is made in the bottom bar of the climate control menu.

- ▶ Call up the climate control menu (▷ page 37).
- ▶ Slide  the controller repeatedly until the bottom bar is activated.
- ▶ To select  **Sync**: turn and press the controller.
- ▶ Switch the synchronization function on  or off .

For further information on synchronizing climate control settings (see the vehicle Operator's Manual).

## DYNAMIC SELECT

### General notes

You can use **DYNAMIC SELECT** to configure the following settings for the Individual drive program:

- Drive system
- Suspension
- Steering
- Climate control
- ECO start/stop function/ECO Assist
- ECO start/stop function

**i** In a few countries, the ECO start/stop function is deactivated at the factory due to the available fuel grade. In this case, the ECO start/stop function is not available regardless of the display in the multimedia system display.

The off-road program is only available on vehicles with the Off-Road Engineering package and is not available for plug-in hybrid vehicles. You can set the following programs in the **Offroad Settings** menu:

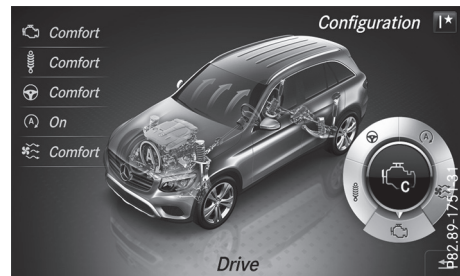
- Slippery
- Off-road
- Gradient
- Rocking free
- Trailer
- Off

In addition, current vehicle and engine data is visualized via the two further **Vehicle Data** and **Engine Data** menus.

There may be fewer settings depending on your vehicle's equipment.

For further information on the Individual drive program; see the vehicle Operator's Manual.

 
### Configuration via the DYNAMIC SELECT switch



**i** There may be fewer settings depending on your vehicle's equipment.

 
- ▶ Use the DYNAMIC SELECT switch to select the Individual drive program; see the vehicle Operator's Manual.  
A window appears after a short while.
- ▶ **To confirm Adjust**: press the controller.  
The **Individual Configuration** menu for setting the drive program appears.
- ▶ To select **Drive, Suspension, Steering, Climate Control, Eco Start/Stop Function** or **Eco Assist**: turn and press the controller.  
The menu symbol, text and image show the selected setting.
- ▶ To select **Drive, Suspension, Steering, Climate Control, Eco Start/Stop Function**: turn and press the controller.  
The menu symbol, text and image show the selected setting.

### Setting off-road program

- ▶ **To switch the off-road program on:** press the  button.  
A window appears after a short while.
- ▶ To confirm **Adjust**: press the controller. The **Offroad Settings** menu appears.
- ▶ To select **Slippery, Offroad, Incline, Rocking Assist, Trailer, or Off**: turn and press the controller.  
The menu symbol, text and image show the selected setting.

 
The Rocking free program can be selected up to a speed of approximately 12 mph (20 km/h). The Comfort drive program is selected automatically when you turn off the Off-road program. For further information on the off-road program; see the vehicle Operator's Manual.

### Displaying vehicle data

- ❗ There may be fewer displays depending on your vehicle's equipment.
- ▶ Press the  button.  
The vehicle menu is displayed.
- ▶ To select **DYNAMIC SELECT**: turn and press the controller.  
The **Individual Configuration, Offroad Settings, Vehicle Data** and **Engine Data** menus appear.
- ▶ Select **Vehicle Data**.  
Updates of the following data are displayed:
  - Off-road-/type of road to match the selected drive program
  - G-force display of longitudinal and lateral acceleration
  - Accelerator and brake pedal activity
  - Vehicle level setting animation
  - Vehicle level display
  - Activity of the suspension struts
  - Wheel angle
  - Overrun mode animation
  - Compass display
  - Longitudinal and latitudinal angle
  - DSR

Daytime or night-time view is shown depending on the automatic light sensor.

### Displaying engine data

- ❗ There may be fewer displays depending on your vehicle's equipment.
- ▶ Press the  button.  
The vehicle menu is displayed.
- ▶ To select **DYNAMIC SELECT**: turn and press the controller.  
The **Individual Configuration, Offroad Settings, Vehicle Data** and **Engine Data** menus appear.
- ▶ Select **Engine Data**.  
The following current data is displayed:
  - Engine output
  - Engine torque
  - Engine oil temperature
  - On-board electrical system voltage

### Individual configuration setting options

You can choose from the following settings for the drive:

C	Comfort
S	Sport
S+	Sport +
E	Eco

You can choose from the following settings for the suspension:

C	Comfort
S	Sport
S+	Sport +

You can make the following settings for the steering:

C	Comfort
S	Sport

You can choose from the following settings for climate control:

E	Eco
C	Comfort

You can choose from the following settings for the ECO start/stop function:

On	Switches the ECO start/stop function on
Off	Switches the ECO start/stop function off

You can choose from the following settings for ECO Assist:

On	Switches ECO Assist on
Off	Switches ECO Assist off

### Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

### Garmin® MAP PILOT navigation module

#### Important safety notes

##### WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

When using Garmin® MAP PILOT, please observe the legal requirements of the country in which you are currently driving.

Always observe the traffic regulations when driving. Road and traffic rules and regulations always have priority over Garmin® MAP PILOT driving recommendations.

##### WARNING

SD cards are small parts. They can be swallowed and cause choking. This poses an increased risk of injury or even fatal injury.

Keep the SD card out of the reach of children. If a SD card is swallowed, seek medical attention immediately.

#### General notes

The SD card box contains a quick guide to Garmin® MAP PILOT. The Garmin® MAP PILOT operating instructions are stored on the SD card as a PDF file.

Garmin® MAP PILOT can be operated using the controller or the touchpad.

#### SD card and updates

► **To insert the SD card:** insert the SD card into the multimedia connector unit until it engages. The side with the contacts must face downwards and point towards the slot.

**i** Ensure that the write protection on the SD card is deactivated. To do this, the switch on the side must be pushed in the direction of the contacts and not the LOCK position.

► Follow the steps as instructed; see the vehicle Operator's Manual.

You can obtain digital map and software updates from an authorized Mercedes-Benz Center.

For some countries, digital map and software updates are available in the form of a download or an SD card. To access them, visit the <http://shop.mercedes-benz.com> website and follow the instructions in the section "Garmin® MAP PILOT".

Further information; see the manufacturer's operating instructions.

#### Switching to navigation mode

► Press the **NAVI** button.  
The navigation main menu appears. Further information; see the manufacturer's operating instructions.

#### Adjusting the volume

During a navigation announcement:

► Turn the thumbwheel to the right of the controller.

or

► Press the **+** or **-** button on the multi-function steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

### Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

### Important safety notes

#### WARNING

If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

If you make a call on your mobile phone while driving, always use hands-free mode. Only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile phone while driving a vehicle.

Keep in mind that at a speed of 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 ft (approximately 14 m) per second.

Excessive levels of electromagnetic radiation may cause damage to your health and the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior antenna.

Therefore, connect your mobile communication equipment to the vehicle's exterior antenna wherever possible.

### General notes

#### Telephony

A Bluetooth® interface is available for telephony.

If your mobile phone supports the Bluetooth® profile PBAP (**P**hone **B**ook **A**ccess **P**rofile), the contacts are automatically displayed in the multimedia system.

You can use the message function if your mobile phone supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile).

With a suitable mobile phone, you can use the hands-free system and receive vCards via the Bluetooth® interface.

You can obtain more information about suitable mobile phones on the Internet at

**<http://www.mercedes-benz.com/connect>**.

Or call the Mercedes-Benz Service Center at 1-800-FOR-MERCEdes(1-800-367-6372) for the USA or at 1-800-387-0100 for Canada.

#### HD Voice®

The multimedia system supports telephone calls in HD Voice®. The voice quality can be improved with this procedure.

Requirements for HD Voice®:

- Your mobile phone and mobile phone network provider support HD Voice®.
- The mobile phone and mobile phone network provider of the person you are calling support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

 

#### Call disconnection while the vehicle is in motion

A call may be disconnected if:

- there is insufficient network coverage in certain areas
- you move from one transmitter/receiver area (cell) into another and no channels are free
- you use a SIM card that is not compatible with the network available

### Operating options

You can operate the telephone by:

- using the controller by turning, pressing, sliding ←○→ or ↑○↓
- using the touchpad (▷ page 19)
- using the  or  button on the multi-function steering wheel

### Function restrictions



You may have to wait to use telephony via the multimedia system in the following situations:

- if the mobile phone is switched off
- if Bluetooth® is switched off on the mobile phone
- if the mobile phone is not (or not yet) logged into a mobile phone network
- if the Bluetooth® function is switched off in the multimedia system

The telephone automatically tries to log on to a network. If no network is available, you may not be able to make a "911" emergency call. If you attempt to make an outgoing call, the **No Service** message will appear for a short while.

### Telephone menu





- ① Mobile phone network provider
- ② Signal strength of the mobile phone network
- ③ Receiver icon  or 
- ④ Bluetooth® device name of the currently connected mobile phone
- ⑤ Telephone menu character bar
- ⑥ Displays the phone book

Symbols ① to ④ and are not shown until after a mobile phone has been connected to the multimedia system. The symbols depend on your


mobile phone and your mobile phone network provider. Further information on connecting a mobile phone (▷ page 45).

Symbol ② shows the current signal strength of the mobile phone network for reception. If all bars are filled, you have optimum reception.

If the bars are not filled, you have very poor reception or no reception at all.


- Receiver icon shows whether a call is active/being connected  or not .


### Calling up the telephone menu

- ▶ Press .

### Showing the menu bar

- ▶ Slide  the controller.

If the mobile phone connected supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile), the  menu item is available. Further information on text messages and e-mail (▷ page 58).

If you have an unread message, the  mail symbol is displayed at the top in the status bar. The symbol disappears once you have read the message.

### Connecting/disconnecting a mobile phone

#### Requirements

For telephony via the Bluetooth® interface, you require a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above.

#### On the multimedia system

- ▶ Activate Bluetooth® (▷ page 29).

#### On the mobile phone

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, if necessary, Bluetooth® visibility for other devices (see the manufacturer's operating instructions).  
This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).
- ▶ Set the Bluetooth® device name for the mobile phone if necessary.

The Bluetooth® device names for all of one manufacturer's products might be identical. To make it possible to clearly identify your mobile phone, change the device name (see the manufacturer's operating instructions). The name can be freely selected.

If the mobile phone supports the PBAP (Phone Book Access Profile) and MAP (Message Access Profile) Bluetooth® profiles, the following information will be transmitted after you connect:

- Phone book
- Call lists
- Messages

Further information on allowing or suppressing the automatic download of the phone book (▷ page 55).

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

**i** Not all mobile phones available on the market are equally suitable. You can obtain further information about suitable mobile phones and about the connection between the mobile phone and the multimedia system on the Internet at <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

**i** Some displays (e.g. the signal strength) are shown depending on the supported version of the Hands-Free Profile.

### Procedure and general information

#### Searching for and authorizing (connecting) a mobile phone

Before using your mobile phone with the multimedia system for the first time, you will need to search for the phone (▷ page 46) and then authorize it (▷ page 47). Depending on the mobile phone, authorization either takes place by means of Secure Simple Pairing or by entering a passkey. The multimedia system automatically makes the procedure that is relevant for

your mobile phone available. You can recognize Secure Simple Pairing by the fact that a code is displayed on the mobile phone and on the multimedia system. You can recognize the passkey system by the fact that you have to enter a code on the mobile phone and on the multimedia system. The mobile phone is always connected automatically after authorization.

If the multimedia system does not detect your mobile phone, this may be due to particular security settings on your mobile phone. You can also start the search procedure and authorization on the mobile phone (▷ page 48).

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be found on the Internet at <http://www.mercedes-benz.com/connect>.

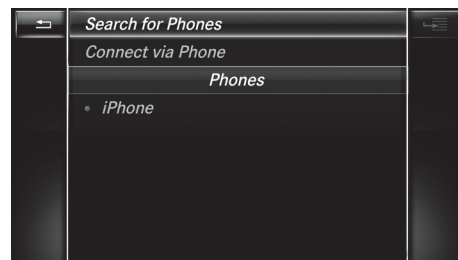
You can authorize up to 15 mobile phones. After authorization, the connection of the last two telephones used always functions automatically. Only one mobile phone can be connected to the multimedia system at any one time.

#### De-authorizing (disconnecting) a mobile phone

The connection is terminated automatically if you leave the receiver range of the multimedia system or deactivate Bluetooth® on your mobile phone.

If you no longer want the Bluetooth® connection to be established automatically, the mobile phone must be de-authorized (disconnected) (▷ page 49).

### Searching for a mobile phone




- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar in the telephone menu: slide **⊙** the controller.



- ▶ To select **Connect Device**: turn and press the controller.  
The device list is displayed.
- ▶ To select **Search for Phones**: turn and press the controller.  
A message is displayed that Bluetooth® must be activated on the mobile phone and must be made visible to other devices.
- ▶ To select **Start Search**: press the controller.  
The available mobile phones are displayed in the device list.


 
The duration of the search depends on the number of Bluetooth® telephones within range and their characteristics.

If a new phone is found, it appears in the device list with the  symbol. You can now authorize (connect) the mobile phone found (▷ page 47).

If the maximum number of authorized devices in the device list is reached, you will be requested to de-authorize a mobile phone (▷ page 49).

When you call up the device list again, de-authorized devices will be removed from the list. To update the device list, start the search again.

#### Symbols in the device list

Sym- bol	Explanation
	New mobile phone found, not yet authorized.
	Mobile phone is authorized, but is not connected.
•	Mobile phone is authorized and connected.

#### Authorizing a mobile phone (connecting)

##### Authorization via Secure Simple Pairing

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.  
A code is displayed in the multimedia system and on the mobile phone.

##### The code is the same

- ▶ **Multimedia system**: select **Yes**.
- ▶ **Mobile phone**: confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).  
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.


To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 49).

##### The code is different

- ▶ **Multimedia system**: select **No**.  
The process is canceled. Repeat the authorization.

##### Authorization via passkey entry (access code)

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select the Bluetooth® name of the desired mobile phone in the device list: turn and press the controller.  
The input menu for the passkey is displayed. The passkey is a one- to sixteen-digit number combination which you can choose yourself.
- ▶ **Multimedia system**: enter the passkey using the character bar.
- ▶ Select  once all the numbers have been entered.
- ▶ **Mobile phone**: enter the same passkey and confirm your entry. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).  
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.


To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 49).

If the **Authorization Failed** message appears, you may have entered a different passkey or exceeded the prescribed time limit. Repeat the procedure.

- ❗ Some mobile phones require a passkey with four or more digits.
- ❗ If you wish to re-authorize the mobile phone after de-authorizing it, you can choose another passkey for it.

### Establishing the connection from the mobile phone

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ **Multimedia system:** call up the telephone menu.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Connect Device:** turn and press the controller.  
The device list is displayed.
- ▶ To select **Connect via Phone:** turn and press the controller.  
A message is displayed, stating that you can start the search on your mobile phone.
- ▶ **Mobile phone:** start the search for a Bluetooth® device (see manufacturer's operating instructions).  
The multimedia system is displayed with the name **MB Bluetooth** in the mobile phone's device list.
- ▶ Select **MB Bluetooth**.  
A prompt appears in the multimedia system's display asking if the mobile phone should be authorized.
- ▶ **Multimedia system:** select **Yes**.  
If **No** is selected, the procedure is canceled.  
If your mobile phone supports Secure Simple Pairing, a code is now displayed on both devices.

#### The code is the same

- ▶ **Multimedia system:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia sys-

tem and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).

The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 49).

#### The code is different

- ▶ **Multimedia system:** select **No**.

The process is canceled. Repeat the procedure.

If your mobile phone does not support Secure Simple Pairing, an input menu is displayed for the passkey. The passkey is a one- to sixteen-digit number combination which you can choose yourself. Enter the same passkey in both the multimedia system and on the mobile phone and confirm. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles.



### Reconnecting automatically

The multimedia system always searches for the last connected mobile phone.

If no connection can be made to the most recently connected mobile phone, the system searches for the mobile phone that was connected before that one.

### Switching between mobile phones

If you have authorized more than one mobile phone, you can switch between the individual phones.

- ▶ To call up the telephone menu: press the  button.
- ▶ To show the menu bar: slide  the controller.

- ▶ To select **Connect Device**: turn and press the controller.  
The device list is displayed.
- ▶ To select the desired mobile phone: turn and press the controller.  
The selected mobile phone is searched for and connected if it is within Bluetooth® range and if Bluetooth® is activated.

Only one mobile phone can be connected at any one time. The currently connected mobile phone is indicated by the ● dot in the device list.

- ❗ You can only switch to another authorized mobile phone if you are not currently making a call.

### De-authorizing (disconnecting) a mobile phone

Mercedes-Benz USA, LLC recommends de-authorization in the multimedia system as well as on the mobile phone. Subsequent authorization may otherwise fail.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To show the menu bar: slide Ⓞ↓ the controller.
- ▶ To select **Connect Device**: turn and press the controller.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **☰**: slide Ⓞ➡ the controller.
- ▶ To select **Deauthorize**: turn and press the controller.  
A prompt appears, asking whether you really wish to de-authorize this device.
- ▶ To select **Yes**: turn and press the controller.  
The mobile phone is de-authorized.

- ❗ Before re-authorizing the mobile phone, you should also delete the device name **MB Bluetooth** from your mobile phone's Bluetooth® list.

### Displaying connection details

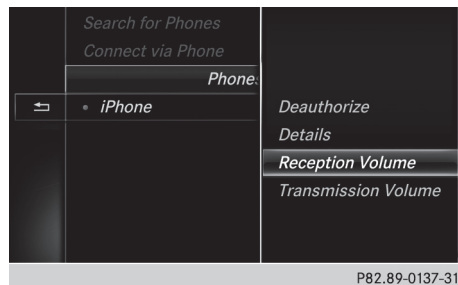
- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar in the telephone menu: slide Ⓞ↓ the controller.

- ▶ To select **Connect Device**: turn and press the controller.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **☰**: slide Ⓞ➡ the controller.
- ▶ To select **Details**: turn and press the controller.  
The following information concerning the selected mobile phone is shown:
  - Bluetooth® device name
  - Bluetooth® address
  - Availability status (shown after a new search)
  - Authorization status
- ▶ **To close the detailed display**: slide Ⓞ← the controller.

### Reception and transmission volume

Once the mobile phone has been authorized, you can optimize the transmission and reception volume settings. To find out about the best possible settings for your mobile phone, visit <http://www.mercedes-benz.com/connect>.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERcedes (1-800-367-6372) (USA) or Customer Relations at 1-800-387-0100 (Canada).





- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide Ⓞ↓ the controller.
- ▶ To select **Connect Device**: turn and press the controller.  
The device list appears.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **☰**: slide Ⓞ➡ the controller.

- ▶ To select **Reception Volume** or **Transmission Volume**: turn and press the controller.
- ▶ To select a volume setting: turn the controller.
- ▶ To accept changes: press the controller.

**i** Incorrect settings may have an impact on the quality of calls.

### Using the telephone

#### Accepting a call

- ▶ To select  **Accept**: press the controller.
- or
- ▶ Press  on the multifunction steering wheel.  
The call is accepted.



Additional functions available during a call (▷ page 51).

Adjusting the call volume (▷ page 49).

Further information about ending a call (▷ page 53).



**i** If the phone number of the caller is transferred, it appears in the display. If the phone number is saved in the phone book, the contact's name is also displayed. If the phone number is not transferred, **Unknown** is shown in the display.

#### Rejecting a call

- ▶ To select  **Reject**: turn and press the controller.
- or
- ▶ Press  on the multifunction steering wheel.

#### Making a call

##### Using the telephone menu

- ▶ To call up the telephone menu: press the  button.
- ▶ To select the sequence of numbers: turn and press the controller for each number.
- ▶ To select  in the telephone menu: turn and press the controller.  
The call is made.



Further information about ending a call (▷ page 53).

#### Using favorites

This function can be used when a telephone number has been added as a favorite. Further information about adding favorites (▷ page 25).

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ To select a telephone number: turn the controller.
- ▶ To make a call: press the controller.



#### Redial number

- ▶ To call up the telephone menu: press the  button.
- ▶ To select  in the telephone menu: turn and press the controller.  
The list of outgoing calls is displayed. The most recently dialed number is at the top.
- ▶ To select an entry and make a call: turn and press the controller.

For redialing using the multifunction steering wheel (see the vehicle Operator's Manual).

Further information about ending a call (▷ page 53).


#### Using call lists

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.  
The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 53).

## Using the phone book

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To select the  symbol in the telephone menu: turn and press the controller.
- ▶ Search for a contact (▷ page 54).
- ▶ To make a call: press the controller.

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 53).

## Using speed dial

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To highlight a number from the character bar: turn the controller.
- ▶ Press the controller for longer than two seconds. The telephone menu displays the selected entry. The number is dialed.

Further information on setting up speed dial (▷ page 57).

Further information about ending a call (▷ page 53).

## Functions available during a call

### Overview



- ① Person you are calling
- ② Symbol for active telephone connection
- ③ Ends a call
- ④ Switches the microphone on or off (▷ page 51)
- ⑤ Sends DTMF tones (not possible with all mobile phones) (▷ page 52)

Other functions:

- Accepting a waiting call (▷ page 53)
- Call waiting (▷ page 52)
- Conducting a conference call (▷ page 52)


Availability depends on the mobile phone network provider (only possible on GSM networks) and the Bluetooth® mobile phone.

## Adding a call

If the mobile phone network provider and the mobile phone support the function, you can make another call during an existing call. The previously active call is held.



 

① Adds a call

- ▶ To select  2: turn and press the controller.
- ▶ To make a call, for example:
  - using the telephone menu (▷ page 50)
  - using redial (▷ page 50)
  - using the call lists (▷ page 50)
  - using the phone book (▷ page 51)
  - using speed dial (▷ page 51)


## Switching the microphone on/off

This function is available in the telephone menu during an active phone call.

Switching off the microphone:

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Microphone Off**: turn and press the controller. If the microphone is switched off, the  symbol and the **The microphone is off.** message are displayed.

Switching on the microphone:

- ▶ Select **Microphone On**.  
The  symbol disappears. The **The microphone is on** message is shown.

### Sending DTMF tones

This function is not supported by all mobile phones.

Answering machines or other devices can be controlled by DTMF tones, e.g. for remote query functions.

- ▶ If you would like to listen to the messages on your answering machine, for example, dial the corresponding number.

Transmitting individual characters

- ▶ Once a connection has been established to the answer phone, select the desired characters in the telephone menu: turn and press the controller each time.  
Every character selected will be transmitted immediately.

### Calls with several participants



#### Switching between calls (call waiting)

If you make another call, you can switch between the two calls (call waiting). This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).


The calls are marked 1 and 2. The active call is highlighted.



Switching between the calls


- ▶ To select  or : turn and press the controller.

or


- ▶ Press  on the multifunction steering wheel.

The selected call is active. The other call is on hold.


Ending the active call


- ▶ To select  in the telephone menu: turn and press the controller.

or

- ▶ Press  on the multifunction steering wheel.

The other call is still on hold.

- ▶ To activate the call on hold: select  **Resume**.

The call on hold is activated. If you select  **Hang Up**, the call on hold is also ended.

- ▶ On some mobile phones, the call on hold is activated as soon as the active call is ended.

### Conference call

You can interconnect active and held calls. This permits several parties to hear one another and speak with one another. This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).



- ▶ Add a call (▷ page 51).

or

- ▶ Answer an incoming call (▷ page 53).
- ▶ To select **Conference** in the telephone menu: turn and press the controller.  
The new participant is included in the conference call. **Conference** is displayed in the telephone menu.

### Incoming call during an existing call (call waiting)


The call waiting function depends on your mobile phone network provider and your mobile phone. Depending on the mobile phone used, behavior when answering a call may vary (see the manufacturer's operating instructions).

**Call waiting:** if you receive a call while already in a call, a message is shown. You also hear a tone. You can decide whether to accept or reject the call.

#### Accepting

▶ To select  **Accept:** press the controller.

or

▶ Press  on the multifunction steering wheel.


The incoming call is active, the previously active call is on hold. You can switch back and forth between both calls (call waiting) (▷ page 52).

**i** Depending on the mobile phone, you may also be able to accept the incoming call (call waiting) on your mobile phone. This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

#### Rejecting

▶ To select  **Reject:** turn and press the controller.

or

▶ Press  on the multifunction steering wheel.


The behavior after the call is rejected depends on your mobile phone and mobile phone network provider.

Option 1: The originally active call is continued and the incoming call is rejected.


Option 2: The originally active call is ended and the incoming call is accepted.

Option 3: Both calls are ended.

### Ending an active call

▶ To select  in the telephone menu: turn and press the controller.

or

▶ Press  on the multifunction steering wheel.

The active call is ended.

## Phone book

### Introduction

The phone book displays all the contacts.

The phone book of the mobile phone is automatically displayed in the multimedia system after the connection is established (default setting). You can deactivate automatic calling up (▷ page 55).

In the phone book, you can:


- Search for contacts (▷ page 54)
- Store contacts (▷ page 55)
- Delete contacts (▷ page 55)

Further information on importing contacts (▷ page 55).

**i** Up to 2000 contacts may be permanently stored in the phone book.

When you import or save contacts, they will be permanently saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

### Calling up the phone book

▶ To call up the telephone menu: press the  button.

▶ To select the  symbol in the telephone menu: turn and press the controller.





If the phone book contains contacts, they will be displayed in alphabetical order. The character bar at the bottom of the display is active.

You can now search for a contact (▷ page 54).

Further information on the symbols shown (▷ page 54).

**i** You can also call up the phone book with the multifunction steering wheel; see the vehicle Operator's Manual.


### Symbol overview

Symbol	Explanation
	Contact stored in the multimedia system
	Contact that was called up from a mobile phone
	Contact imported from a USB device
	Contact imported via the Bluetooth® interface

### Searching for a contact

#### Using the character bar


You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ To select characters: turn the controller and press to confirm.  
The first contact with the selected first character is highlighted in the phone book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different character **A** and **O** are offered for selection.
- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To select : turn and press the controller. The contacts in the phone book are displayed.
- ▶ To select a contact: turn and press the controller.

If a contact contains more than one phone number:

- ▶ To select and call a telephone number: turn and press the controller.

Back to the character bar

- ▶ Press the  button repeatedly until the character bar is displayed.

### Using the touchpad

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw the letter on the touchpad surface.  
The first contact with the selected first character is highlighted in the phone book.  
Further information on handwriting recognition on the touchpad (▷ page 21).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ To complete the search and return to the phone book: press the touchpad.
- ▶ To select the contact: glide up or down and press.  
The contact's phone number is displayed.

If a contact contains more than one phone number:

- ▶ To select and call the sub-entry: glide up or down and press.

### Using the multifunction steering wheel

- ▶ Dial a number from the phone book; see the vehicle Operator's Manual.



### Displaying the details of a contact

- ▶ To select a contact in the phone book: turn and press the controller.
- ▶ To select **Contact Details**: turn and press the controller.  
The detailed view appears.

Closing the detailed display

- ▶ To select : slide  the controller.

### Changing the display and sorting criteria for contacts

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Display and Sorting**: turn and press the controller.




You have the following options:


- **Last Name, First Name** (default setting)  
The contacts are sorted by surname and displayed with a comma.
  - **Last Name First Name**  
The contacts are sorted by surname and displayed without a comma.
  - **First Name Last Name**  
The contacts are sorted by first name and displayed without a comma.
- ▶ To select the required option: turn and press the controller.  
The contacts are sorted and displayed according to the selection.

### Automatically importing contacts from the mobile phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to the multimedia system.



 

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts Automatically**: turn and press the controller.  
You can allow  or deactivate  the automatic download.


If the function is deactivated, the contacts can be called up manually:

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts**: turn and press the controller.  
The contacts are called up.

### Saving a contact


 
Saved contacts are indicated in the phone book by different symbols (▷ page 54).

- ▶ Search for a contact on the mobile phone  (▷ page 54).
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.  
The contact has now been saved. The contact is identified by the  symbol in the phone book.

**i** Saving the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic calling-up of phone contacts is activated, the multimedia system displays the copy  with the changed data.

### Deleting a name

You can delete contacts that have been saved or imported into the multimedia system.

- ▶ To highlight a contact in the phone book: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete Entry**: turn and press the controller.  
A prompt appears asking whether the contact should be deleted.
- ▶ To select **Yes**: turn and press the controller.  
The phone number is deleted.

### Importing contacts

#### Information and requirements


Contacts can be imported as vCards (vcf files). A vCard is an electronic business card. A memory card, USB device or a Bluetooth® connection can be used for importing.

**i** Up to 2000 contacts can be imported into the phone book. A message notifies you when the maximum number is reached. In order to be able to then import new contacts, you have to delete existing contacts (▷ page 55).

Source	Requirements
Memory card	The SD card is inserted. It contains importable contact details.

USB device	The USB device is inserted into the USB port. It contains importable contact details.
Bluetooth® connection	If the sending of vCards is supported via Bluetooth®, vCards can be received on mobile phones or netbooks, for example. Bluetooth® must be activated in the multimedia system and on the respective device; see the manufacturer's operating instructions.



### Importing from the memory card or USB device

Contacts imported from the memory card or from a USB device are identified by the  symbol.

The following conditions must be fulfilled in order to import vCards:



- vCards (vcf files) may be located in the main directory or in folders. The multimedia system allows for a targeted selection of the corresponding directories.
- vCards must have the file extension ".vcf".

**i** vcf files may also contain multiple vCards. The multimedia system supports vCards in versions 2.1 and 3.0.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Memory Card, USB 1** or **USB 2**: turn and press the controller.

### Receiving vCards via Bluetooth®

#### Multimedia system:

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.


- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Bluetooth Device**: turn and press the controller.  
If the multimedia system is connected to a mobile phone, the connection is terminated. vCards can now be received by a device (PC, mobile phone) via Bluetooth®.

#### External device:

- ▶ Start the data transfer; see the manufacturer's operating instructions.  
The number of vCards received is displayed in the multimedia system.



#### Multimedia system:

- ▶ To cancel the transfer: press the controller.  
If a mobile phone was connected, the connection to the mobile phone is established again.

vCards received via Bluetooth® are identified by the  symbol in the phone book.

**i** If you switch to another main function, e.g. radio, while receiving vCards, the reception of vCards will be terminated.

### Deleting imported contacts

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Contacts**: turn and press the controller.
- ▶ Select one of the following options:
  - **Internal Contacts**
  - **Downloaded from Phone**
  - **Imported from Storage Device**
  - **Imported from Bluetooth Devices**
 Turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.  
The contacts are deleted.

### Closing the phone book

- ▶ To select from the character bar: turn the controller and press to confirm.

or

- ▶ Press the button.

## Call lists

### Introduction

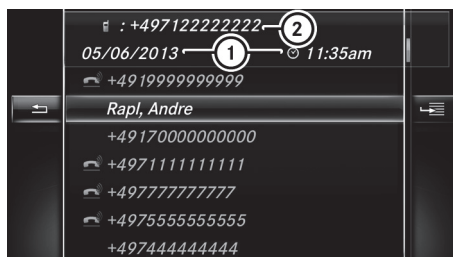
If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile phone are displayed in the multimedia system. When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If your mobile phone does not support the PBAP Bluetooth® profile, the multimedia system generates its own call lists. These are not the same as the call lists in your mobile phone.

The call lists option is not available unless a mobile phone is connected to the multimedia system.

- i** If you connect a different mobile phone to the multimedia system, the call lists from the new mobile phone are displayed.

### Opening the call list and selecting an entry



P82.89-0189-31

Example: list of selected phone numbers

- ① Date and time (if available)
- ② Telephone number of the highlighted entry and symbols (if assigned)

- ▶ To call up the telephone menu: press the button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

### Closing the call list

- ▶ To select to the left of the list: slide the controller and press to confirm.

or

- ▶ Press the button. The list is closed.

### Displaying details from a list entry

Abbreviated list entries can also be shown in full.

- ▶ To call up the telephone menu: press the button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide the controller.
- ▶ To select **Details**: turn and press the controller. The details are displayed.
- ▶ To go back to the list: slide the controller repeatedly until the list is highlighted.

## Speed dial lists

### Setting up

- ▶ Call up the phone book (▷ page 53).
- ▶ Search for and select a contact (▷ page 54).
- ▶ To highlight the telephone number: turn the controller.
- ▶ To select : slide the controller.

- ▶ To select **Assign Speed Dial Preset**: turn and press the controller.  
The speed dial list is displayed.
- ▶ To select a memory position for the speed dial: turn and press the controller.  
If you select an entry that already exists in the speed dial list, this is overwritten with the new entry.  
The phone number has been saved as a speed dial.

### Deleting

#### Deleting a speed dial preset

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **☉↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.  
The speed dial list is displayed.
- ▶ To highlight the memory position you want to delete: turn the controller.
- ▶ To select **[☐]**: slide **☉→** the controller.
- ▶ To select **Delete Speed Dial Preset**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.  
The speed dial preset has been deleted.

#### Deleting all speed dial presets

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **☉↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.  
The speed dial list is displayed.
- ▶ To select **[☐]**: slide **☉→** the controller.
- ▶ To select **Delete All Speed Dial Presets**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.  
All speed dials are deleted.

### Messages

#### General notes

New messages are identified by the **[✉]** symbol in the display of the multimedia system and an audible signal. Once you have read all the messages, the symbol is no longer displayed.

The multimedia system displays the 100 newest messages.

#### Requirements

To use the message functions, the connected mobile phone must support the MAP Bluetooth® profile; see the manufacturer's operating instructions. The prompt for the MAP Bluetooth® profile may have to be confirmed on the mobile phone.

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).

To read e-mails in the multimedia system, the e-mail account first needs to be configured (▷ page 59).

With some mobile phones, some settings still have to be made after connecting to the multimedia system (see the manufacturer's operating instructions). The messages are then displayed the next time you connect to the multimedia system.

Some mobile phones with the MAP Bluetooth® profile:

- only show new text messages
- do not support deleting of text messages
- do not support the e-mail function
- do not send messages when in a locked status

Not all mobile phones available on the market are equally suitable. You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones on the Internet at

**<http://www.mercedes-benz.com/connect>**.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

## Settings

### Calling up the settings menu for messages

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Sett.**: turn and press the controller. The text message settings and the available e-mail accounts of the connected mobile phone will be displayed.

### Configuring the text messages displayed

- ▶ Call up the settings menu for messages (▷ page 59).
- ▶ To highlight **Text Message**: turn the controller.
- ▶ To select **☒**: slide **⊙→** the controller. A menu with the following options is shown:
  - **All Messages**
  - **New Messages**
  - **Off**

The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.

### Configuring the e-mails displayed

- ▶ Call up the settings menu for messages (▷ page 59).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select **☒**: slide **⊙→** the controller. A menu with the following options is shown:
  - **All Messages**
  - **New Messages**
  - **Off**

The messages are not displayed automatically. You can also display the 100 newest

e-mails using the **Download** option in the message menu.

- ▶ To select the required option: turn and press the controller.

### Configuring an e-mail account

- ▶ Call up the settings menu for messages (▷ page 59).
- ▶ To select an e-mail account: turn and press the controller. The e-mail account is now configured. E-mails can now be received and sent in the multimedia system.

### Deactivating the e-mail function

- ▶ Call up the settings menu for messages (▷ page 59).
- ▶ To select **E-Mail Off**: turn and press the controller. E-mail reception is deactivated.


### Changing the displayed name of the e-mail account

Some mobile phones:

- do not support the changing of the displayed name
- support only the e-mail address of the e-mail account
- ▶ Call up the settings menu for messages (▷ page 59).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select **☒**: slide **⊙→** the controller.
- ▶ To select **Own E-Mail Address**: turn and press the controller. The input menu for entering your own e-mail address is displayed.

### Downloading messages manually

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Download**: turn and press the controller.

#### Downloading text messages and e-mails from the phone

- ▶ Select **From the Phone**.  
The messages are downloaded.  
If you have selected **Automatic Download** in the e-mail settings, manual downloading is not possible.  
If you have selected **New Messages** or **Off** in the text message settings, manual downloading is possible.





#### Updating from the e-mail server by the mobile phone

- ▶ Select **From the E-Mail Server**.  
The e-mails in the mobile phone are updated.  
This function is not supported by all mobile phones.

### Reading messages






#### In the message menu

The message menu contains all the unread text messages and e-mails. If the corresponding folder is called up, the messages are sorted by text messages and e-mails and displayed.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.  
The message menu is displayed with the unread messages.
- ▶ To select the message: turn and press the controller.  
The message text is displayed.
- ▶ **To close the message text**: press the  button.

If you want to read messages that have already been read again, you have to call up the corresponding message folder (▶ page 60).







#### In the message folder



- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.  
The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller.  
The selected folder is displayed.
- ▶ To select the message: turn and press the controller.  
The message is displayed.
- ▶ To scroll through the message or select phone numbers in the text: turn the controller.  
The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ **To return to the list**: press .

Depending on the mobile phone used, the subfolder function may be available.

#### Displaying details and phone numbers

The multimedia system can also show a shortened sender display in full.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.  
The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller.  
The selected folder is displayed.
- ▶ To highlight the desired message: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.  
The detailed view appears.

- ▶ **To close the detailed display:** slide ←  the controller.
- ▶ **To return to the telephone menu:** press the  button.

### Calling a text message sender

- ▶ Display a message in the message menu (▷ page 60) or message folder (▷ page 60).
- ▶ To call up a menu: press the controller.
- ▶ To select **Call Sender**: turn and press the controller.  
The call is made.



### Using a phone number in the text

Numbers in text messages that are highlighted can be used.

- ▶ To highlight and select a usable phone number while the message is displayed: turn and press the controller.
- ▶ To select **Call**: turn and press the controller.  
The call is made.

**i** It is possible that a highlighted numerical sequence may not contain a telephone number.

### Deleting messages

- ▶ Call up the message folder (▷ page 60).
- ▶ To select the message: turn and press the controller.
- ▶ To select : slide  → the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.  
The message is deleted.

**i** This delete function is not supported by all mobile phones. The **Delete failed**. message then appears.

### Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

### Important safety notes

#### WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are driving when operating the system.

### General notes

#### Connection difficulties while the vehicle is in motion.

If an Internet connection has been established via a data-enabled mobile phone, the connection may be lost in the following situations:

- the mobile phone network coverage is insufficient.
- the vehicle has moved into a mobile phone cell with no free channels.
- the SIM card used is not compatible with the network available.

### Function restrictions (Canada)

You will not be able to use the Mercedes-Benz Apps and Internet connection, or will no longer be able to use them, or may have to wait before using them, in the following situations:

- if your mobile phone is switched off
- if your mobile phone has not been enabled for Internet access
- if the Bluetooth® function is switched off on the multimedia system and the desired phone is supposed to be connected via Bluetooth®
- if the Bluetooth® function is switched off on the mobile phone and the phone is supposed to be connected via Bluetooth®
- if either the mobile phone network or the mobile phone does not allow simultaneous use of a phone and an Internet connection
- if the mobile phone has not been enabled for Internet access via Bluetooth®

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- i** It is possible that you may not be able to receive calls when an Internet connection is active. This depends on the mobile phone and the mobile phone network used.

### Conditions for access

**USA:** to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access.

Take note of the connection priorities. An emergency call has the highest priority. When a service call, e.g. a breakdown service call or the MB Info Call, is active, an emergency call can still be initiated. A service call, on the other hand, has priority over a current Internet connection. Therefore, you cannot establish an Internet connection during a service call.

**Canada:** a mobile phone must be connected via Bluetooth® (> page 45) with the multimedia system. Furthermore, you need a valid mobile service contract with a data option, which is used to calculate the associated connection costs.



**Conditions for a Bluetooth® connection**

- The mobile phone supports at least one of the Bluetooth® profiles DUN (Dial-Up Networking) or PAN (Personal Area Network).

The Bluetooth® profiles DUN and PAN enable the Internet connection of the mobile phone to be made available to the system.

The terms of use are shown when the system is used for the first time and then once a year thereafter. Only read and accept the terms of use when the vehicle is stationary.

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- ❗ The availability of individual Mercedes-Benz Apps may vary depending on the country.


**Setting up an Internet connection (Canada)****Procedure and general information**

In order to set up a mobile phone for Internet access, your mobile phone must be connected to the multimedia system via Bluetooth® (▷ page 45).

If you are using Internet access for the first time, you must enable the connected mobile phone for Internet access (▷ page 63). If the connected mobile phone supports the Bluetooth® PAN profile, you do not need to make additional settings. The Internet connection is established. If the connected mobile phone does not support the named Bluetooth® profile, predefined (▷ page 63) or manual access data (▷ page 64) must be set.

While initializing the mobile phone for the Internet connection, access data which is already on the mobile phone may be overwritten. You should therefore check the settings on the mobile phone (see the manufacturer's operating instructions).

**Enabling the mobile phone for Internet access**

- ▶ Call up Internet functions (▷ page 66).
- ▶ To switch to the menu bar: slide  the controller.

- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. If a mobile phone has already been enabled, the device list is displayed.
- ▶ To select **Start Search**: turn and press the controller. Mobile phones are displayed that:
  - are connected to the multimedia system
  - fulfill the conditions for the Internet functions
  - have not yet been set up for the Internet function
- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. If the mobile phone supports the Bluetooth® PAN profile, Internet access is set up. You can use the Internet functions. If the connected mobile phone does not support the named Bluetooth® profile, predefined (▷ page 63) or manual access data (▷ page 64) must be set.

**Setting access data of the mobile phone network provider****Selecting the predefined access data of the mobile phone network provider**

- ▶ To select **Predefined Settings**: turn and press the controller. A list of countries appears.

If the mobile phone network provider provides multiple access data options, the relevant access data still has to be selected. This depends on the data package used, for example.

To check whether the predetermined dial-in data corresponds with the dial-in data provided by your mobile phone network provider, proceed as follows (▷ page 65) and select **Manual Settings**. The access data is displayed.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 65).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The

access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

### Manually setting the access data of the mobile phone network provider

- ▶ To select **Manual Settings**: turn and press the controller.  
An overview of the provider settings appears.
- ▶ Set access data (> page 64).
- ▶ To select **Confirm Settings**: turn and press the controller.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (> page 65).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

### Setting access data

Set the access data in accordance with your data package. You can contact your mobile phone network provider to obtain the precise access data.


#### Explanation of the access data

Input field	Meaning
Phone Number:	Access number for establishing the connection The access number depends on the mobile phone used. For GSM/UMTS mobile phones, *99***1# is used as a standard.
Access Point:	APN network access point (Access Point Name) You can obtain this information from your mobile phone network provider. Entry is not necessary for all mobile phone network providers and mobile phones.

Input field	Meaning
PDP Type:	Internet protocol used. You can obtain this information from your mobile phone network provider.
User ID:	The user identification can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.
Password:	The password can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.
Auto DNS:	Automatic allocation of DNS servers is activated. If the function is deactivated, the DNS server addresses must be entered manually. DNS (Domain Name Service).
DNS1: DNS2:	Fields for entering the DNS server addresses manually. The address can be obtained from your mobile phone network provider.

### Managing existing access data



#### Calling up the device list

- ▶ Call up Internet functions (> page 66).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller.  
The device list is displayed.

### Editing the access data

The mobile phone must be connected with the system for the access data to be changed.

When the Internet connection is active, you cannot edit or delete the access data of the currently set mobile phone network provider.



- ▶ Call up the device list (▷ page 64).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Change Configuration**: turn and press the controller.
- ▶ Select **Predefined Settings** or **Manual Settings**.

The provider settings are displayed.

In order to edit the access data of the mobile phone network provider you have two options:

- Option 1: select the predefined access data of the mobile phone network provider (▷ page 63).
- Option 2: manually set the access data of the mobile phone network provider (▷ page 64).



### Canceling Internet access permission for a mobile phone

- ▶ Call up the device list (▷ page 64).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete Configuration**: turn and press the controller.  
A prompt appears asking whether you wish to delete the Internet configuration.
- ▶ To select **Yes**: turn and press the controller.  
The Internet access permission for the mobile phone is now canceled. The mobile phone can now no longer be used by the system for Internet functions.

### Setting automatic disconnection of the Internet connection

 



If a preset time has elapsed during which the Internet functions have not been used, the Internet automatically disconnects.

- ▶ Call up the device list (▷ page 64).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.

- ▶ To select : slide  the controller.
- ▶ To select **Disconnect Automatically When Inactive**: turn and press the controller.
- ▶ To select **5 Minutes**, **10 Minutes** or **20 Minutes**: turn and press the controller.

### Managing all Internet devices

If multiple mobile phones have been enabled for Internet usage, these can be given priorities. The system then selects the mobile phone with the highest priority to establish an Internet connection.

- ▶ Call up the device list (▷ page 64).
- ▶ To highlight the mobile phone: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Manage All Internet Devices**: turn and press the controller.  
A menu appears.
- ▶ To highlight a mobile telephone: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Change Device Priority**: turn and press the controller.
- ▶ To move the desired mobile phone up or down: turn and press the controller.  
The mobile phone's priority is changed.  
The priority of the mobile phones is determined by the hierarchy. The mobile phone at the top of the list has the highest priority.

### Establishing/ending the connection

#### Establishing a connection

Read the conditions for establishing a connection (▷ page 62).



A connection can be established, for example by:

- entering a web address (▷ page 67)
- calling up a Mercedes-Benz App (▷ page 66)
- calling up a favorite

#### Ending the connection

- ▶ Press **Cancel** in the connections window.

### Calling up Internet functions

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select **Tel/** : turn and press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.


### Connection status



- ① Display of existing connection and signal strength of the mobile phone network

In most cases, the current connection status is then shown in the status bar when you switch to another main function.


 
### Detailed connection status

- ▶ Call up Internet functions (▷ page 66).
- ▶ To switch to the menu bar: slide **⇩**  the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Connection Status**: turn and press the controller.  
The following information is displayed:
  - the volume of transferred data
  - connection status
  - the device name of the mobile phone

### Ending the connection

**USA:** you cannot cancel the connection yourself. The Internet connection is automatically terminated if the system does not recognize any user input within a five-minute time period.

#### Canada:

- ▶ Call up Internet functions (▷ page 66).
- ▶ To switch to the menu bar: slide **⇩**  the controller.
- ▶ To select **↔** : turn and press the controller.

If the mobile phone Internet connection is canceled, the multimedia system tries to reconnect. You should therefore always end the connection in the multimedia system.

### Mercedes-Benz Apps

#### General notes

To be able to use Mercedes-Benz Apps, you have to register and confirm the terms and conditions.

#### Calling up Mercedes-Benz Apps

- ▶ Call up Internet functions (▷ page 66).
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To call up the app: turn and press the controller.

You can find further Mercedes-Benz Apps and information under:

<http://apps.mercedes-benz.com/apps/>

- i** The available features are country-dependent.

License fees may be applicable.

### Web browser

#### Calling up a website

#### Function restrictions

Internet pages cannot be shown while the vehicle is in motion.

### Entering a web address



- ▶ Call up Internet functions (▶ page 66).
- ▶ To select **www**: turn and press the controller. An input menu for the web address is displayed.
- ▶ Enter characters using the controller or the number keypad.
- ▶ To finish entry and call up a website: select **ok**.

### Selecting a web address from the list

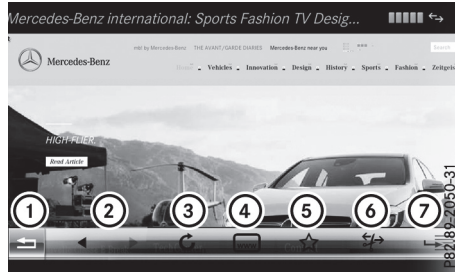
- ▶ When the character bar is displayed, slide **↑** the controller.
- ▶ To select the desired web address: turn and press the controller. The web address can still be changed as desired.
- ▶ To call up a website: select **ok**. The website is called up.

### Navigating the website

Step	Result
▶ Turn the controller.	Navigates from one selectable item (e.g. link, text field or menu) to the next and highlights the respective element on the website.
Sliding the controller:	Moves the pointer on the page.
▶ Left or right <b>←→</b>	
▶ Up or down <b>↑↓</b>	
▶ Diagonally <b>↖↗</b>	

Step	Result
▶ Press the controller.	Opens the selected item.
▶ Press <b>↵</b> .	Calls up the menu.

### Menu functions



- ① Closes the browser
- ② Goes back/forward
- ③ Refreshes/cancels
- ④ URL entry
- ⑤ Favorites
- ⑥ Disconnects
- ⑦ Options

- ▶ **To show the menu:** press the **↵** button.
- ▶ **To call up the Options menu:** select **☰** by turning and pressing the controller.
- ▶ **To close the website:** select **⏏**.
- ▶ **To call up the previous website:** select **⏪**.
- ▶ **To call up the next website:** select **⏩**.
- ▶ **To refresh the website:** select **🔄**. The website is refreshed. This procedure may take some time.



**i** While the website is loading, a cross appears in the menu. This can be used to cancel the loading procedure.

- ▶ **To enter a URL:** select **www**.
- ▶ Enter a web address (URL) (▶ page 67).
- ▶ **Favorites:** select **☆**.



## Options menu

### Adding to bookmarks

Adds the current website to the favorites. The website can then be called up using the menu. You can store up to 20 favorites in the menu.












- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Add to Bookmarks](#).  
The website is added to the bookmarks.

### Current URL

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Current URL](#).  
The URL appears.



### Zoom

You can use this function to enlarge web pages.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller. A menu appears. The • dot indicates the current setting.
- ▶ Select [Zoom](#).
- ▶ To navigate on the web page: slide   ,    or    the controller.
- ▶ To zoom in on the web page: turn the controller.



### Jumping from link to link

You can use this function to skip from one link to the next on a website.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller. A menu appears. The • dot indicates the current setting.
- ▶ Select [Jump From Link To Link](#).  
If a website has been called up and the controller is turned, the cursor jumps from link to link.



### Directional scrolling

You can use this function to scroll up and down on the web page.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller. A menu appears. The • dot indicates the current setting.
- ▶ Select [Directional Scrolling](#).  
If a website has been called up and the controller is turned, the cursor moves up or down depending on the direction of the turn.

## Settings

### Overview

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller. A menu appears.
- ▶ Select [Settings](#).

You can activate or deactivate the following settings:

- [Download Images Automatically](#)  
It may take some time to download the contents of websites that contain a large amount of images. Therefore, it may be useful to deactivate this option.
- [Block Pop-Ups](#)  
Popups are windows (usually with advertisements) which are displayed automatically when you call up a website. You can block these displays.
- [Activate Javascript](#)  
JavaScript makes it possible to display and interact with dynamic content on the website.
- [Allow Cookies](#)  
Some websites save information in small text files (cookies) on your system. You can determine whether cookies may be stored.
- [Show Link Target](#)  
You can display the link's URL here.
- [Character Size](#)  
You can select the font size which is used when displaying the website.
- [Character Code](#)  
You can select a different character set here, e.g. if the characters of a website appear distorted.

### Changing settings

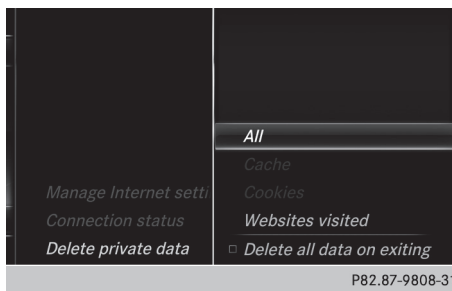
- ▶ To select the desired setting: turn and press the controller.  
Switch the setting on  or off .

### Changing the character size or character code

- ▶ Select **Character Size** or **Character Code**.
- ▶ To select the setting you require: turn and press the controller.

**i** If you change the settings, the websites may not be displayed correctly.

### Deleting private data



- ▶ Call up Internet functions (▷ page 66).
- ▶ To show the menu: slide the controller.
- ▶ To select **Settings**: slide , turn and press the controller.  
A menu appears.
- ▶ To select **Delete Private Data**: turn and press the controller.
- ▶ To select the setting you require: turn and press the controller.

or

- ▶ Select **Delete All Data On Exit**.  
Switch the setting on  or off .

Option	Function
All	Deletes all personal data.
Cache	Deletes data in the cache.
Cookies	Deletes cookies that are created by websites which you have called up.

Option	Function
URL History	Deletes all websites visited (path).
<input checked="" type="checkbox"/> Delete All Data On Exit	If this function is activated <input checked="" type="checkbox"/> , all personal data is deleted when you exit the Internet browser.

**i** If you reset the multimedia system to the factory settings (reset function), this data and the settings are deleted (▷ page 31).

### Favorites

#### Introduction

Favorites are frequently visited websites.

#### Creating favorites

Adding a favorite in the menu

- ▶ Call up Internet functions (▷ page 66).
- ▶ Select **www**.
- ▶ Enter the web address (URL) and name using the character bar and press .

Adding to favorites

 
 

 
- ▶ To call up the menu: press the button.
- ▶ To select : turn and press the controller.
- ▶ Select **Add to Bookmarks** (▷ page 68).

#### Selecting favorites


 
- ▶ Call up Internet functions (▷ page 66).
- ▶ To select the **Internet Favorites** menu: turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired bookmark.  
The favorite is opened in a new window.

#### Editing favorites


 
- ▶ Call up Internet functions (▷ page 66).
- ▶ To select the **Internet Favorites** menu: turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired favorites.

- ▶ To select : slide  and press the controller.
- ▶ Select **Edit**.  
An input menu appears.
- ▶ Enter a web address (URL).
- ▶ Press the touchpad or controller.
- ▶ Select .
- ▶ Press the touchpad or controller.
- ▶ Slide  the controller.
- ▶ Enter a name.

### Deleting favorites

- ▶ Call up Internet functions (> page 66).
- ▶ To select the **Internet Favorites** menu:  
turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired favorites.
- ▶ To select : slide  and press the controller.
- ▶ Select **Delete**.  
A prompt appears.
- ▶ Select **Yes**.  
The favorite is deleted.

### Closing the browser

- ▶ Select  in the browser menu  
(> page 67)
- or
- ▶ Press the  button for longer than two seconds.  
A prompt appears, asking whether you want to close the Internet browser.
  - ▶ Select **Yes**.  
The application is closed.



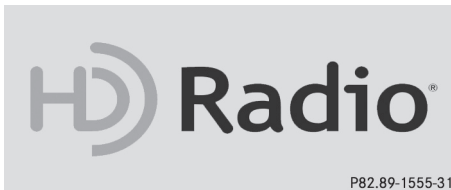
## Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Switching on the radio

- ▶ Press the **RADIO** button.  
The radio menu appears. You will hear the last station set on the waveband selected last.



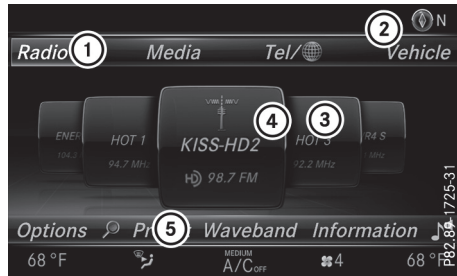
### Switching HD Radio on/off

- ▶ In radio mode: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Switch **HD Radio** on  or off .

If **HD Radio** is switched off, the system does not switch to digital radio and it is not possible to select any sub-channels.

- i** HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

## Overview



- 1 Main function bar
- 2 Status bar with compass display
- 3 Main display field with available stations and relevant information
- 4 Display of radio station selected
- 5 Radio menu bar

The following functions are available using the radio main function bar:

- **HD Radio FM**: HD FM radio mode
- **HD Radio AM**: HD MW radio mode
- **Sat Radio**: satellite radio
- **Radio Station Presets**: 100 preset positions for radio stations
- **Info on Radio**: information on radio in the Digital Operator's Manual

The following functions are available using the radio menu bar:


- **Options**: radio options
- : searches for stations by name
- **Preset**: station presets menu
- **Band**: waveband selection
- **Info**: displays additional information about the current station (radio text)
- : sound settings

## Setting the waveband


### Setting the waveband using the button

- ▶ Press the **RADIO** button.  
A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Info on Radio** and **Radio Station Presets**.
- ▶ To select the desired waveband: turn and press the controller.

### Setting the waveband using the main function bar

- ▶ In radio mode: slide  the controller. The radio main function bar and menu bar appear. **Radio** is active.
- ▶ Press the controller. A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Radio Station Presets** and **Info on Radio**.
- ▶ To select the desired waveband: turn and press the controller.

### Setting the waveband using the menu bar

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select **Band**: turn and press the controller. A menu appears with a selection of **HD Radio FM**, **HD Radio AM** and **Sat Radio**.
- ▶ To select the desired waveband: turn and press the controller.

## Station


### Selecting a station

#### Setting a station from the main display field


All currently available stations are displayed.

- ▶ In radio mode, turn the controller until the desired station is in the center.

#### Setting a station from the current station list

-  The station list is available in HD FM radio mode or HD AM radio mode. It includes all stations that can be received.
- ▶ In radio mode, press the controller. The station list appears with the stations currently available.
- ▶ To select the desired station: turn and press the controller.

### Entering the station frequency

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Direct Entry**. An additional menu appears.

HD FM radio mode:

- ▶ To select the **HD FM Frequency** option: turn and press the controller.
- ▶ Enter the frequency of the desired station in the entry field.

HD MW radio mode:

- ▶ To select the **HD AM Frequency** option: turn and press the controller.
- ▶ Enter the frequency of the desired station in the entry field.


 
Satellite radio operation

- ▶ To select the **SatRadio Channel** option: turn and press the controller.
- ▶ Enter the number of the desired channel in the entry field.


Station presets:

- ▶ To select the **Radio Station Presets** option: turn and press the controller.
- ▶ Enter the station preset of the desired station.

### Finding a station

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ Select  and enter the first letters of the required station using the controller.
- ▶ Press **OK** to confirm. The multimedia system displays a list of available stations.
- ▶ To select stations from the list: turn the controller and press to confirm.

### Entering a preset

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Enter Preset**: turn and press the controller.
- ▶ Enter the station preset of the desired station.

### Station list

- ▶ In radio mode, press the controller. The station list appears with the stations currently available.

### Saving a station

#### Storing current stations

- ▶ In radio mode: slide  $\odot\downarrow$  the controller. The radio menu bar appears.
- ▶ To select **Preset**: press the controller.
- ▶ To select the **Save Current Station/Channel** option: turn and press the controller.
- ▶ To select the position of the required preset entry: turn and press the controller. The currently set station is stored in the selected preset position. A tone signals a successful preset entry.

#### Storing a station using the controller

- ▶ Set the desired station in radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.
- ▶ **i** Frequencies have already been stored in the multimedia system. There are 100 preset positions available.

### Moving highlighted stations

- ▶ In radio mode: slide  $\odot\downarrow$  the controller. The radio menu bar appears.
- ▶ To select **Preset**: press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  $\odot\rightarrow$  the controller. An additional menu appears.
- ▶ To select **Move Highlighted Station/Channel**: turn and press the controller. The list of stored stations appears again.
- ▶ To move the highlighted station to the new position: turn the controller and press to confirm.

### Deleting highlighted stations

- ▶ In radio mode: slide  $\odot\downarrow$  the controller. The radio menu bar appears.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  $\odot\rightarrow$  the controller.
- ▶ To select **Delete Highlighted Station/Channel**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller. The highlighted station is deleted.

### Activating/deactivating the station presets display

You can use this function to change to the station presets display.

#### Activating


- ▶ In radio mode: slide  $\odot\downarrow$  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller. The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

#### Deactivating


- ▶ In radio mode: slide  $\odot\downarrow$  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller. The view of the last heard waveband appears.

### Tagging music tracks



If an Apple® device is connected, the music tracks and artist displayed in the radio text can be stored. You have the option of purchasing this track using iTunes Store®. Not all radio stations support this function.

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Tag This Track**.  
A message appears about storing the track information.

### Displaying station information

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Switch **Show Station Information** on  or off .  
If the function is activated, the artist, track or the name of the station will be displayed in the main display field.


### Calling up sound settings

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select : turn and press the controller. The sound menu appears (> page 93).

### Displaying information

This function is available in HD FM radio and HD AM radio mode.

Reception is only possible if the radio stations provide the relevant information.

- ▶ In radio mode: slide  the controller.
- ▶ To select **Info**: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the track that is currently being played
- the artist of the track that is currently being played
- the album name
- the channel abbreviation
- the logo of the station or Artist Experience®

### Returning to the radio menu:

- ▶ To select **Info**: slide  and press the controller.

## Satellite radio

### General notes

The satellite radio mode requires satellite radio equipment and registration with a satellite radio provider.

Note that the categories and channels shown in the illustrations depend on the program content offered by the provider. The illustrations and descriptions in these operating instructions may therefore differ from the channels and categories offered by the provider.

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons.

These include environmental or topographical conditions as well as other factors beyond the control of Mercedes-Benz USA, LLC. This means operation may not be possible in certain areas. These include:

- tunnels
- parking garages
- locations inside or next to buildings
- locations in the vicinity of other structures

Sirius XM® Satellite Radio offers more than 140 digital-quality radio channels, providing 100% commercial-free music, sports, news and entertainment.

Sirius XM® Satellite Radio uses a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada.

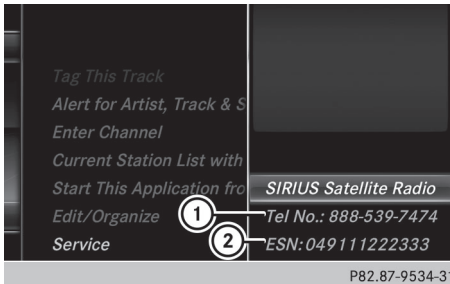
The satellite radio program is available for a monthly fee. Details are available from the SIRIUS XM® Service Center and at <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

Your new Mercedes-Benz vehicle comes with Sirius XM® Satellite Radio pre-installed at the factory. This service is free for a six-month trial period. About a month before the trial period ends, information will be provided on how to extend this subscription. An acoustic signal sounds and a message is shown, describing how the subscription can be extended.

- i** Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its

subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

### Registering satellite radio



P82.87-9534-31

- ① Phone number of provider
  - ② Sirius XM® ID of your satellite receiver
- ▶ Switch on satellite radio mode (▷ page 75). The satellite radio menu appears showing the preview channel. You cannot select any other stations.
  - ▶ Slide the controller. The radio menu bar appears.
  - ▶ To select **Options**: turn and press the controller.
  - ▶ To select **Service**: turn and press the controller. The service information screen appears.

Once the telephone connection has been established:

- ▶ Follow the instructions of the service staff. The activation process may take up to ten minutes. If the activation is completed successfully, the **Updating Channels...** message appears in the display, followed by the satellite radio menu.
- i** You can also have the satellite service activated online. To do this, visit <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).
- i** If registration is not included when purchasing the system, your credit card details will be required to activate your account.

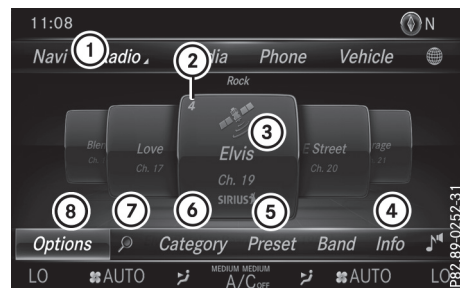
If the satellite receiver is not installed correctly, the **Device Unavailable** message will appear.

### Switching to satellite radio

- ▶ To show the main function bar: slide the controller.
- ▶ To select **Radio**: turn and press the controller. The Radio menu appears. You will hear the last station set on the waveband selected last.
- ▶ To select **Radio** in radio mode: slide and press the controller. The menu with the available radio modes appears.
- ▶ To select **Sat Radio**: turn and press the controller.

The **No Service** message appears if there is no signal.

### Satellite radio overview



- ① Main function bar
- ② Preset
- ③ Channel name and channel number
- ④ Channel information
- ⑤ Station presets menu
- ⑥ Category list
- ⑦ Keyword search
- ⑧ Options menu

Channel information ④ can be viewed in detail (▷ page 78).

### Selecting a category

Satellite radio channels are sorted into categories. You can choose between various categories such as News/Discussions, Sports and Country (if available). The category list is sorted alphabetically. The content of the categories is sorted by channel numbers.

- ▶ **To call up the category list:** select **Category** in the menu bar by turning and pressing the controller.  
The category list appears.
- ▶ **To select a category:** turn and press the controller.  
The category selected is shown in the display. You hear the channel last selected for this category.  
The • dot indicates the current setting.  
At the beginning of the category list, the **All Channels** category appears. This category enables you to browse all available channels.

### Selecting a channel

#### Channel search

- ▶ When the display/section window is selected, slide ◀⊙ or ⊙▶ the controller.  
The multimedia system searches in both directions (ascending and descending) and stops at the next channel found in the selected category.

#### Entering channel numbers directly

- ▶ To select **Options:** turn and press the controller.
- ▶ To select **Direct Entry:** turn and press the controller.  
An input menu appears.
- ▶ To select a channel number: turn and press the controller.
- ▶ The multimedia system sets the selected channel.


**i** You can only select currently permitted digits.

#### Selecting a channel via the satellite radio station list

You can select the channel using the station list displaying the artists and tracks that are currently playing.

- ▶ To select **Options:** turn and press the controller.
- ▶ To select **Current Station List with Artist & Title:** turn and press the controller.  
The channel list appears.
- ▶ Select the desired channel

#### Keyword search

- ▶ To select the keyword search  in the menu bar: turn and press the controller.
- ▶ To enter the required search term: turn and press the controller.  
Direct and indirect results are shown.
- ▶ Select the required result.  
The relevant channel is played.

### Memory functions

#### Quick save:

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.  
A tone confirms that the storing process was successful.

#### Saving a channel using the edit function:


- ▶ In satellite radio mode, slide ⊙↓ the controller.
- ▶ To select **Preset:** turn and press the controller.
- ▶ To select **Edit Station Preset:** turn and press the controller.  
The list of saved channels appears.
- ▶ To select the preset: turn the controller and press for about two seconds.  
The newly saved channel overwrites the existing preset.

**i** There are 100 presets available.


#### Activating/deactivating the station presets display

You can use this function to change to the station presets display.

### Activating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller.  
The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

### Deactivating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller.  
The view of the last heard waveband appears.

## Music and sports alerts

### General notes

This function makes it possible to store a program alert for your favorite artists, tracks or sporting events.

You can store up to 30 music and sports alerts (favorites).

Music alerts can only be saved whilst a track is being played. You can also specify sports alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a saved message, you will be informed. A window appears with the respective information.

### Setting a music alert

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.  
A menu appears.
- ▶ Select **Add New Alert**.  
A window with a prompt appears.
- ▶ Select **Artist** or **Track**.  
The alert is set for the current artist or track.

### The music alert window appears

- ▶ To select **Change To** or **Ignore**: turn and press the controller.  
If you select **Change To**, the channel is changed and the favorite artist or track is played.  
If you select **Ignore**, the current channel will continue playing.

### Setting a sports alert

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.  
A menu appears.
- ▶ Select **Manage Sports Alerts**.  
A menu appears.
- ▶ Select **Select New Alerts**.  
A menu appears.
- ▶ Select the desired team from a league, e.g. college, NBA, NHL, NFL or MLB.  
The alert function for the sports team is added.

### Editing music and sports alerts

- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.  
A menu appears.
- ▶ Select **Manage Music Alerts** or **Manage Sports Alerts**.  
A list of set alerts appears.

## Tagging music tracks

 
If the channel supports this function, you are able to transfer the music track currently playing to an Apple® device. You can then purchase it in the iTunes® store.

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Tag This Track**: turn and press the controller.  
A message about saving this music track on the Apple® device appears.

### Displaying information


- ▶ To select **Info** in the radio menu bar: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the channel logo
  - the channel abbreviation
  - the artist of the track that is currently being played
  - the track that is currently being played
- ▶ **To return to the radio menu:** select **Info** by sliding  and pressing the controller.

### Displaying service information

The satellite radio provider's customer service center is available by phone at any time to answer any general questions or questions on the versions available.

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Service**: turn and press the controller. The satellite radio provider's details appear.
- ▶ **To return to the main display:** press the  button.

### Channel list updates

During reception of a new channel list, the **Updating Channels...** message is shown. The channel last selected is switched to mute until the update has been completed. Satellite radio mode is not available during this process. Once the update has been completed, the satellite radio menu appears. If the channel last selected is available, this channel will be played.

### Sound settings

Information on sound settings (> page 93).



## Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

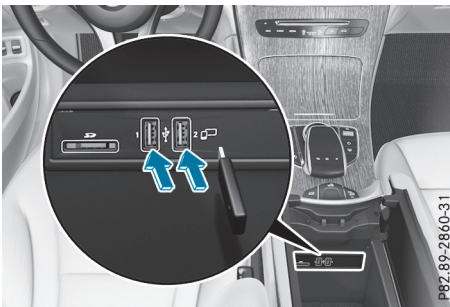
Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Activating media mode

### General notes

There are several ways to activate media sources using the multimedia system. The relevant sections of the Operator's Manual describe the simplest way to activate a media source. This section describes all options for activating media sources. If you wish to play external media sources, the associated media menu must already be turned on.

### Connections for external media sources



The following external media sources can be used:

- Apple® devices (e.g. iPhone®)
- USB devices (e.g. USB stick, MP3 player)
  - Two USB ports are located in the stowage space under the armrest.
- CD
- SD cards
- Devices with Bluetooth® connection

### Activating media using the button

- ▶ To call up the media menu: press the **MEDIA** button.
  - The last media source you have set is displayed.
- ▶ Press the **MEDIA** button again.
  - The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.

Depending on the vehicle equipment, the following media sources will be available:

- Disc
- Memory Card
- Media Interface 1
- Media Interface 2
- Bluetooth Audio

If playable music files are found, they will be played by the multimedia system.

### Activating media using the main function bar

- ▶ To show the main function bar in media mode: slide **↑** the controller.
- ▶ To select **Media**: press the controller.
  - A menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
  - If the media source contains music or video files, these will be played. The corresponding media menu appears.

### Activating media using the device list

- ▶ In media mode, slide **⊙** the controller.
  - The media menu bar is shown.
- ▶ To select **Devices**: turn and press the controller.
  - The available media sources will be shown. The **•** dot indicates the current setting.
- ▶ Select the media source.
  - If the media source contains music files, these will be played. The corresponding media menu is shown.

**Switching on automatically**

After inserting a CD or DVD, the corresponding media mode is automatically switched on by the multimedia system.

If playable music files are found, they will be played by the multimedia system.

If a media playback function is already switched on in the multimedia system, this will be interrupted and the CD or DVD mode menu will appear. If another function, such as navigation, is being operated, the media menu does not change. Only the music from the last inserted CD or DVD will be played.

**Audio mode****Important safety notes****⚠ WARNING**

The CD drive is a class 1 laser product. If you open the housing of the CD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

**⚠ WARNING**

If you handle a disc while driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only handle a disc when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 ft (approximately 14 m) per second.

**Notes on audio mode****Permissible data carriers**

- CD audio, CD-R and CD-RW
- SD card

- USB storage device
- Apple® devices

**Permissible file systems**

- ISO 9660/Joliet standard for CDs
- FAT16, FAT32, exFAT and NTFS for SD card and USB storage media
- HFS and HFS+ for Apple® devices

**i** Writing access is not possible on NTFS.

**Multisession CDs**

For multi-session CDs, the content of the first CD session determines how the multimedia system will process the CD. The multimedia system plays only one CD session and gives priority to CD sessions with audio files.

**File structure of a data carrier**

When you create a disc with compressed music files, the tracks can be organized in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels. Files beyond the eighth level will not be recognized by the system.

**i** The multimedia system supports data media with up to 15,000 files.

In the case of data media with more than 64 GB of stored data, only files in folders with the following names are supported: Music, Pictures, Video.

**Track and file names**

When you create a disc with compressed music files, you can assign names to the tracks and folders.

If MP3 or WMA files are stored in the root directory itself, the root directory will also be treated as a folder.

You should observe the following when assigning track names:

- track names must have at least one character
- track names must have an extension of a supported audio format, e.g. mp3 or aac
- there must be a dot between the track name and the extension

Example of a correct track name:  
"Track 1.mp3".

## Permissible formats

The multimedia system supports the following audio formats:

- MP3
- WMA
- CDA
- AAC formats: .aac, .mp4, .m4a and .m4b

Copy-protected iTunes® music files with the .m4p file extension are not supported.

## Permissible sampling and data rates

The multimedia system supports MP3 and WMA files of the following type:

Format	Data rate [kbit/s]	Sampling rates [kHz]
MP3	32-320 (fixed and variable data rates)	8-48
WMA	5-384 (fixed and variable data rates)	8-48

The multimedia system does not support WMA files of the following type:

 
- DRM (Digital Rights Management) encrypted files
- WMA Pro
- 5.1 surround sound

**i** Only use tracks with a data rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality. This is especially the case if you have activated a surround sound function.

## Selecting an active partition (USB mass storage devices only)

You can select this function for USB storage devices when the storage device is partitioned. Up to 9 partitions (primary or logical, FAT, FAT32 and NTFS) are supported.

### Selecting an active partition

- ▶ Select a USB storage device (▶ page 79).
- ▶ Slide  the controller.  
The media menu bar is shown.

- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Select Active Partition**.

## Notes on copyright

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection.

In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder.

Make sure that you know about the applicable copyright regulations and that you comply with these.

## Notes on compact discs

**!** Please bear the following in mind:

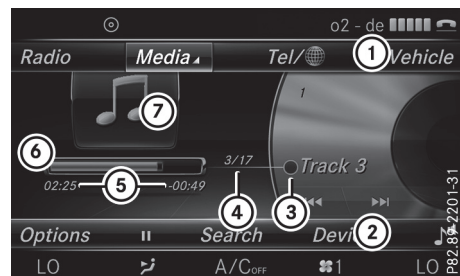
- Do not affix stickers or labels to the discs.
- CDs must not be thicker than 1.3 mm.
- CDs must be round with a diameter of 12 cm. Do not use an adapter.

Discs with copy protection are not compatible with the audio CD standard and therefore may not be able to be played.

Playback problems may occur when playing copied discs.

There may be playback problems if you play CDs that you have copied yourself with a storage capacity of more than 700 MB.

## Menu overview



- ① Main function bar
- ② Media menu bar
- ③ Track display on the disc
- ④ Track number and number of tracks in the track list
- ⑤ Numerical time display


- ⑥ Graphic time display
- ⑦ Cover view (if available)

### Inserting and removing a CD from the single CD drive

Before inserting or removing a CD, ensure that the cup holder is empty.


Before removing a disc, be aware that the CD can become hot.

#### Inserting

- ▶ Press the  button on the single drive. If there is a disc already inserted, it will be ejected.
- ▶ Insert a disc into the disc slot with the printed side facing up. The drive closes and the disc is played. If the CD is started in media mode, the corresponding media menu is shown. If the CD is started using another application (e.g. phone) the display does not change.

**i** The drive may not be able to play discs with copy protection.

#### Removing

- ▶ Press the  button. The drive ejects the disc.
- ▶ Remove the ejected disc from the slot. If you do not take the disc out of the slot, it is drawn in again automatically after a short while.

### Inserting and removing an SD card

#### Important safety notes

##### WARNING

SD cards are small parts. They can be swallowed and cause choking. This poses an increased risk of injury or even fatal injury.

Keep the SD card out of the reach of children. If a SD card is swallowed, seek medical attention immediately.

**!** If you are no longer using the SD card, you should remove it and store it outside the vehicle. High temperatures can damage the card.

The multimedia system supports the following memory cards:

- SD cards (**Secure Digital**)
- SDHC cards (**Secure Digital High Capacity**)
- SDXC cards (**Secure Digital eXtended Capacity**)

#### Inserting an SD card

- ▶ Insert the SD card into the SD card slot until the SD card engages. The side with the contacts must face down.
- ▶ Select the media source (▷ page 79). If **Memory Card** has been selected as a media source, the medium is played and the files are loaded in the background. If there are no supported audio files, you will see a message to this effect.

#### Removing an SD card

- ▶ Press the SD card. The SD card is ejected.
- ▶ Remove the SD card.

### Connecting USB devices

 
There are two USB ports in the stowage space under the armrest (▷ page 79).

- ▶ Connect the USB device to the USB port. If the corresponding media menu is visible, the medium is played and the files are loaded in the background. If there are no supported audio files, you will see a message to this effect.

**i** MP3 players must support Media Transfer Protocol (MTP).

### Selecting the playback option

#### Selecting Play mode

- ▶ In media mode, slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Playback Mode**: turn and press the controller.
- ▶ Select **Normal Track Sequence**.

The current track list is played in the order it is stored on the data medium.

▶ Select **Random Track List**.

The current track list is played in random order.

▶ Select **Random Medium**.

All tracks on the data medium are played in random order.

### Skipping to time

▶ In media mode, slide  the controller.

▶ To select **Options**: turn and press the controller.

▶ To select **Skip to Time**: turn and press the controller.

A menu appears.

▶ To set the time: turn the controller.

### Selecting an active partition

▶ In media mode, slide  the controller.

▶ To select **Options**: turn and press the controller.

▶ To select **Select Active Partition**: turn and press the controller.

You can select a partition on the USB data carrier.

### Showing track information

 
▶ In media mode, slide  the controller.

▶ To select **Options**: turn and press the controller.


▶ To switch **Show Track Information** on  or off : turn and press the controller.


You display or hide information for Track, Artist and Album in the main display field.


### Pausing/continuing playback

▶ **To pause playback**: in audio mode, slide  the controller.


The media menu bar is shown.


▶ To select  in the media menu bar: turn and press the controller.

Playback is interrupted. The display changes to .

▶ **To continue playback**: in audio mode, slide  the controller.

The media menu bar is shown.

▶ To select  in the media menu bar: turn and press the controller.

Playback is continued from the point of interruption. The symbol changes to .

### Selecting a track

#### Selecting a track using the current track list

▶ To display the current track list: press the controller in the media mode menu.

The category list appears.

▶ Select **Current Tracklist**.

▶ To select a track: turn the controller and press to confirm.

#### Selecting a track by skipping to a track

▶ To skip forwards or backwards to a track: in the media mode menu, turn or briefly slide

 or  the controller.

#### Entering a track number directly

▶ In media mode, slide  the controller.

 

▶ To select **Options**: turn and press the controller.

▶ To select **Direct Track Number Entry**: turn and press the controller.


A menu appears.

▶ Enter the desired track number.

### Fast-forwarding or rewinding a track

▶ In audio mode, press and hold the  or  button until the desired position is reached.

### Searching for a track

- ▶ In the media mode menu, slide  the controller.  
The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller.  
The category list is shown.
- ▶ Select a category, e.g. **Genres**.  
Sub-categories appear with the selection of the main category (depends on the multimedia system default settings and the music tracks available).
- ▶ Select a sub-category, for example **Rock**.  
If the selected sub-category contains music tracks, these will be displayed.

### Media search


#### General notes

The multimedia system plays back files from the following data media:


- Disc (audio CD)
- Memory card
- USB storage device
- Apple® devices (folder, year and photos are not available)

The categories are displayed according to the data available.

#### Starting the media search

- ▶ In the media mode menu, slide  the controller.  
The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller.  
The category list appears.

#### Category list

- ▶ In the media mode menu, slide  the controller.  
The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller.  
The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Track**
- **Genres**
- **Year**
- **Composers**
- **Photos**
- **Podcasts**
- **Audiobooks**

**i** The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

#### Searching a track using the current track list

- ▶ Select **Current Tracklist** from the category list (▷ page 84).  
The selection list appears.
- ▶ Select the required track.

#### Searching for a track via a folder

 
Playable files can be searched for in the active data medium's directories.

- ▶ To select **Folder** in the category list (▷ page 84): turn and press the controller.  
The folder list appears.
- ▶ Select the required folder.  
The track list appears.
- ▶ Select the required track.

 
### Searching for a track via cover view

- ▶ To select **Select By Cover** in the category list (> page 84): turn and press the controller. A menu with cover views appears.
- ▶ Select the required cover. The track list appears.
- ▶ Select the required track.

### Searching for a track via music genre

- ▶ To select **Genres** in the category list (> page 84): turn and press the controller. The multimedia system searches in all media sources. A selection list with Genre and media sources appears.
- ▶ Select the desired music genre. A selection list with music tracks from the selected genre appears.
- ▶ Select a music track. The track is played. The menu for the active media source is shown.
- ▶ To exit the selection list: press the  button.

### Searching for a track via a keyword

- ▶ To select **Keyword Search** in the category list (> page 84): turn and press the controller. The input field appears.
- ▶ To select the desired characters: turn and press the controller for each one. Entering just part of the name of a track or artist is enough. The search result then displays the entire text.
- ▶ Select  . The search results are displayed. The numbers behind the results, for example **Artists** (1/1), mean: 1 result that contains the exact keyword searched for and 1 result that is similar.
- ▶ Select one of the results. Keywords that have already been searched for are displayed in the "Search history" without having to enter them completely. They can be accepted directly and displayed in the search result.
- ▶ Select an entry. Albums and covers (if available) are shown.

The multimedia system searches in all media sources.

- ▶ Select an album. The tracks are listed.
- ▶ Select a track. The media mode menu appears and playback begins.

## Bluetooth® audio mode

### Requirements

The Bluetooth® function must be activated in the multimedia system (> page 29).

Bluetooth® audio mode requires a Bluetooth®-capable audio device.

Check your Bluetooth® audio device for the following; see the manufacturer's operating instructions:

- Bluetooth® audio profile
  - The Bluetooth® audio device must support the A2DP and AVRCP Bluetooth® audio profiles.
- Bluetooth® visibility
  - Certain Bluetooth® audio devices do not just require activation of the Bluetooth® function. In addition, your device must be made "visible" to other devices.
- Bluetooth® device name
  - This device name is predetermined but can usually be changed. For a clear selection of the Bluetooth® device, Mercedes-Benz recommends that you customize the device name.
- i** **A2DP (Advanced Audio Distribution Profile):** Bluetooth® audio profile for audio data transmission
  - AVRCP (Audio Video Remote Control Profile):** Bluetooth® audio profile for audio data playback
- i** The Bluetooth® device must be visible to the multimedia system for authorization. After authorization, the multimedia system even finds the Bluetooth® device when it is not visible.

### General notes

Before using your Bluetooth® audio device with the multimedia system for the first time, you will need to authorize it. When you authorize a new Bluetooth® audio device, it is connected automatically. Connection involves first searching for a Bluetooth® audio device and then authorizing it. You can authorize up to 15 Bluetooth® devices.



- i** If you authorize a mobile phone that supports Bluetooth® audio, the A2DP and AVRCP Bluetooth® audio profiles are connected automatically.

The mobile phone is then entered:

- in the Bluetooth® telephone list (▷ page 46)
- in the Bluetooth® device list (▷ page 86)

Mercedes-Benz recommends authorizing a mobile phone in Bluetooth® telephony (▷ page 47).

### Switching to Bluetooth® audio

- ▶ To call up the media menu: press the  button.  
The last media source you have set is displayed.
- ▶ To show the main function bar: slide  the controller.
- ▶ To select **Media**: turn and press the controller.
- ▶ To select **Bluetooth Audio**: turn and press the controller.



If the Bluetooth® audio device is already authorized, it is activated by the multimedia system. The Bluetooth® audio menu appears (▷ page 86). Playback starts.

If you see the **No Bluetooth Audio Device Connected** message, you will need to authorize the Bluetooth® audio device first (▷ page 86).

- i** If the Bluetooth® audio device connected supports metadata and corresponding data is available, then the artist, track and album name can be displayed.


### Bluetooth® audio menu



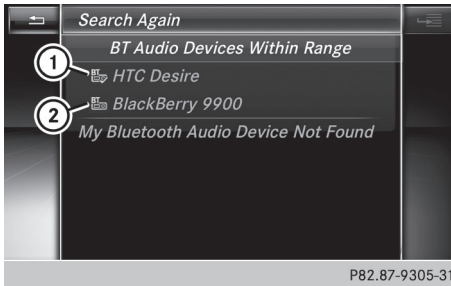
- ① Audio transmission status (depending on the Bluetooth® audio device, also title name and artist)
- ② Data medium position in the media list
- ③ Sound settings
- ④ Device list
- ⑤ Stops  or starts  playback
- ⑥ Options menu

### Searching for and authorizing a Bluetooth® audio device

#### Searching for a Bluetooth® audio device

- ▶ Switch on Bluetooth® audio mode (▷ page 86).
- ▶ Slide  the controller.  
The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
- ▶ To select **Search for Audio Devices**: press the controller.  
A message appears.
- ▶ Select **Start Search**.  
The multimedia system searches for Bluetooth® audio devices within range and adds them to the Bluetooth® device list.  
The duration of the search depends on the number of Bluetooth® audio devices within range and their characteristics.





- ① Bluetooth® audio device within range and already authorized
- ② Newly detected mobile phone with Bluetooth® audio mode in range

The Bluetooth® device list displays all authorized devices, whether they are within range or not. After a device search, devices which are within range but not authorized are also displayed.

If the multimedia system cannot find your Bluetooth® audio device, external authorization may follow (▷ page 87).

#### Authorizing a Bluetooth® audio device

- ▶ In the Bluetooth® device list, select a Bluetooth® audio device that has not yet been authorized: turn and press the controller. Authorization starts.

Depending on which Bluetooth® audio device is being used, the device can be authorized either by entering a passkey or by Secure Simple Pairing. You can find information on this in the "Authorizing (connecting) a mobile phone" section (▷ page 47). After successful authorization, the Bluetooth® audio device is connected and starts playing.


- i** With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data. For the audio device used, the output of the audio files has to be specified via Bluetooth®.
- i** The Bluetooth® audio device must support Bluetooth® version 2.1 for connection via Secure Simple Pairing. The multimedia system creates a six-digit code which is displayed simultaneously on both devices that are to be connected.

For some Bluetooth® audio devices, the pairing must also be confirmed within 10 seconds.

#### External authorization

If the multimedia system does not find your Bluetooth® audio device (▷ page 86), this may be due to particular security settings on your Bluetooth® audio device. In this case, check whether your Bluetooth® audio device can locate the multimedia system.


 
The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ Switch on Bluetooth® audio mode (▷ page 86).
- ▶ Slide  the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Bluetooth Audio Devices**: turn and press the controller.
- ▶ To select **Connect via Audio Device**: turn and press the controller.
- ▶ Start the authorization on your Bluetooth® audio device (see the manufacturer's operating instructions). After successful authorization, the Bluetooth® audio device is connected and starts playing.


- i** With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data.

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be found on the Internet at <http://www.mercedes-benz.com/connect>.

#### Displaying details

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▷ page 86).
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller. The following information concerning the selected mobile phone is shown:



- Bluetooth® name
- Bluetooth® address
- Availability status (shown after an update)
- Authorization status

► **To close the detailed display:** press the  button.



### Starting/stopping playback

Requirement: the Bluetooth® audio menu (▷ page 86) is shown.



#### Starting playback

► To select : turn and press the controller. Playback starts.  is selected.

#### Stopping playback

► Select .  
A message appears.  is selected.

#### Continuing playback

► Select .  
A message appears.  is selected.


 
### Starting playback if the Bluetooth® audio device has been stopped

During the search for mobile phones (▷ page 46), the connection with the Bluetooth® audio device is terminated. The **No Bluetooth Audio Device Connected** message appears in the Bluetooth® audio menu (▷ page 86). When the search is finished, the Bluetooth® audio device can be reconnected.

► To confirm the **Connect Last Used Player** message in the Bluetooth® audio menu: press the controller.

Depending on the Bluetooth® audio device used, playback starts immediately or you must start playback manually.



In this case, you will see the **Bluetooth Audio Device Paused** message.





► **To start playback:** To select : slide  and press the controller. Playback resumes from the beginning.

### Selecting a track

The function is not supported by all Bluetooth® audio devices.

Some mobile phones impair function with regard to the following criteria:

- the number of tracks that can be selected
  - the time period until the next or previous track is played
- Use the multifunction steering wheel to switch to the media menu in the on-board computer; see the vehicle Operator's Manual.
- **To skip forward or back to a track:** press the  or  button on the multifunction steering wheel.

► **To rapid scroll:** press and hold the  or  button on the multifunction steering wheel until the desired track is reached. If you press and hold the  or  buttons, the rapid scrolling speed increases after a short time.

**i** During rapid scrolling, track names are not displayed but only Track+1, Track+2, etc. (or Track-1, Track-2, etc.). There are no playback times shown for tracks that have been played. This is available as an optional function starting with AVRCP Version 1.3.

There is also no music search option available with Bluetooth® audio.

### Playback options

#### General notes

If the Bluetooth® audio device supports the corresponding function, the following options are available:

- **Normal Track Sequence:** the tracks are played in the normal order (e.g. track 1, 2, 3 etc.).


Audio data playback is determined by the order in which the tracks are written to the data medium. Alphabetical order is the most common. Once all the tracks in a folder have

been played, the tracks in the next folder are played.


- **Random Track List:** the current track list is played in random order (e.g. 3, 8, 5 etc.).
- **Random Medium:** all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).

Playback options are optional functions and are not, or only partially, supported by Bluetooth® audio devices.

### Selecting the playback option

- ▶ In the Bluetooth® audio menu, slide  the controller (> page 86).
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Playback Mode.**
  - A • dot indicates the current setting.
- ▶ Select the desired option.

### Increasing the volume in the multimedia system

- ▶ In the Bluetooth® audio menu, slide  the controller (> page 86).
- ▶ To select **Options:** turn and press the controller.
- ▶ To select **Volume:** turn and press the controller.
  - A menu appears. The • dot indicates the current setting.
- ▶ Select **Standard** or **Boost** .

- i** If playback on the Bluetooth® audio player is too quiet, the **Boost** function may be used. It is recommended, however, that you increase the volume on the Bluetooth® audio device directly.

### Reconnecting a Bluetooth® audio device

#### General notes

The Bluetooth® audio profiles are connected automatically under the following circumstances:

- one of the last two mobile phones to have been connected has also been used as a Blue-

tooth® audio device (if the function is supported by the mobile phone).

- the mobile phone is automatically connected. The Bluetooth® audio profiles are then also connected.

- i** For an automatic connection with the multimedia system, the mobile phone must be within range.

For most Bluetooth® audio devices, the "automatic connection" must be activated by ticking a box. Depending on the device used, this prompt often occurs during authorization (see the manufacturer's operating instructions).


### Connecting Bluetooth® audio devices

If the **No Bluetooth Audio Device Connected** message appears, you have two options to reconnect the Bluetooth® audio device.

#### Option 1:

- ▶ To confirm the **Connect Last Used Player** message in the Bluetooth® audio menu: press the controller.
  - If the multimedia system can locate the Bluetooth® audio device, it will be connected and start playing.

#### Option 2:



- ▶ Slide  the controller.
  - The media menu bar is shown.
- ▶ Select **Options.**
- ▶ Select **Bluetooth Audio Devices.**
- ▶ To select a Bluetooth® audio device: turn and press the controller.
  - If the Bluetooth® audio device has been authorized, playback starts.

### Bluetooth® audio device and simultaneous search for mobile phones

- i** When searching for a mobile phone or a new Bluetooth® audio device, the connection to an already activated Bluetooth® audio device is stopped.

The **No Bluetooth Audio Device Connected** message appears in the Bluetooth® audio menu.

### De-authorizing (deregistering) a Bluetooth® audio device

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▷ page 86).
- ▶ To select : slide  to the controller.
- ▶ To select **Deauthorize**: press the controller. A prompt appears asking whether you really wish to de-authorize this device.
- ▶ To select **Yes**: turn and press the controller. If you select **Yes**, the device will be deleted from the Bluetooth® device list.

**i** Before re-authorizing the Bluetooth® audio device, you should also delete the device name **MB Bluetooth** from your Bluetooth® audio device's Bluetooth® list (see the Bluetooth® audio device's operating instructions).

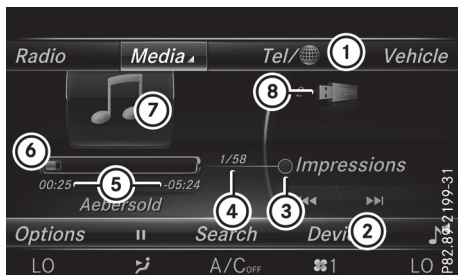
### Operation with the Media Interface

#### General notes

Media Interface is a universal interface for the connection of mobile audio devices. Media Interface in the multimedia system has two USB connections.

The USB ports are located in the stowage compartment under the armrest (▷ page 79).

#### Media Interface menu



- 1 Main function bar
- 2 Media menu bar
- 3 Track display on the disc
- 4 Track number and number of tracks in the track list
- 5 Numerical time display
- 6 Graphic time display

- 7 Cover view (if available)
- 8 Display for the active data medium

### Switching to Media Interface

- ▶ Connect the data medium to USB port 1 or USB port 2 (▷ page 82).
- ▶ Select the basic menu for Media Interface 1 or Media Interface 2 (▷ page 79). If playable media files are found, they will be played by the multimedia system.

### Supported devices

The following data media can be connected to the multimedia system via Media Interface:

- iPod®
- iPhone®
- MP3
- USB devices

**i** iPod® and iPhone® are registered trademarks of Apple Inc., Cupertino, California, USA.

For details and a list of supported devices, visit our website at <http://www.mercedes-benz.com/connect>. Then follow the instructions in the "Media Interface" section.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

### Supported data formats

Music	MP3, WMA, AAC
Images	JPG, JPEG, BMP, PNG

**i** Picture files from Apple® devices and MP3 players cannot be displayed (except cover pictures).

## Selecting a music file

### Selecting with the controller

- ▶ **To display the current track list:** press the controller in the Media Interface menu.
- ▶ Select **Current Tracklist**.  
The track list for the active data medium appears.
- ▶ To select a track: turn the controller and press to confirm.
- ▶ **To skip forwards or backwards to a track:** turn the controller in the Media Interface menu.  
The selected track is played.

### Fast-forwarding or rewinding a track

- ▶ With the media source active in the Media Interface menu, slide ◀⊙ or ⊙▶ the controller and hold it until the desired position has been reached.

## Searching for a track

### Overview

The following categories may be listed during the track search:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Track**
- **Year**
- **Composers**
- **Photos**
- **Podcasts**
- **Audiobooks**

**i** The functions are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these functions are available more quickly.

The audio books and podcasts categories are not available for USB devices.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

### Searching for a track

- ▶ In media mode, slide ⊙↓ the controller.  
The media menu bar is shown.
- ▶ To select **Search:** turn and press the controller.  
The category list appears.
- ▶ To select a category, e.g. **Current Tracklist:** turn and press the controller.  
A selection list appears.
- ▶ Select the required track.

### Using the keyword search

- ▶ To select **Keyword Search** in the category list: turn and press the controller.
- ▶ Enter and confirm the characters of the desired search using the controller (> page 85).

Search results are sorted according to the available categories, displayed and can then be selected.

## Selecting the playback option

- ▶ In media mode, slide ⊙↓ the controller.  
The media menu bar is shown.
- ▶ To select **Options:** turn and press the controller.
- ▶ To select the desired playback option: turn and press the controller.

Additional information on playback options (> page 82).

## Picture viewer

### General notes

If there are pictures on the active data medium, you can view them on the multimedia system.


The following data media and picture formats are supported:

- **Data media:** CD, USB devices, SD cards
- **Picture formats:** jpeg, jpg, bmp, png

The maximum image resolution is 20 megapixels.

It is not possible to view a picture while the vehicle is in motion.

### Displaying pictures

 
 



- ▶ In media mode, slide  the controller.
- ▶ To select **Search**: turn and press the controller.  
The category list appears.
- ▶ To select **Photos**: turn and press the controller.  
A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.  
If there is no picture on the data medium, an empty list is shown.

## Media

### Starting a slide show

- ▶ While viewing a picture, press the controller.  
The image menu appears.
- ▶ To select **Start Slideshow**: turn and press the controller.  
The slide show starts.
- ▶ To end the slide show: press the controller.  
The image menu appears.
- ▶ Select **End Slide Show**.

### Changing the picture view

- ▶ While viewing a picture, press the controller.  
The image menu appears.
  - ▶ To select **Turn Clockwise**: turn and press the controller.  
The picture rotates 90 degrees.
  - ▶ Select **Turn Counterclockwise**.  
The picture rotates -90 degrees.
  - ▶ Select **Zoom In**.  
The size of the picture increases. After you have zoomed into the picture, you can move the section of the picture.
  - ▶ To move the section of the picture: slide   and   the controller.
  - ▶ To revert to the original size: press the controller.
- or
- ▶ Press the  button.

### Closing the picture viewer

- ▶ While viewing a picture, press the controller.
- ▶ To select **Close Picture Viewer**: turn and press the controller.  
The last media mode selected is called up.

## Your multimedia system equipment

 
 
These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Sound settings

### Calling up the sound menu

 


The sound settings can be selected to suit a variety of different audio sources. This means that it is possible to set more bass for radio mode than for USB mode, for example. The respective sound menu can be called up from the menu of the desired mode.



- ▶ Switch to radio mode (▷ page 71).  
or
- ▶ Switch to media mode (▷ page 79).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Equalizer**.

Sound menu overview

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Moves the sound focus: left/right and front/rear

### Setting treble, mid-range and bass

 
 
 
 
 


- ▶ Call up the sound menu (▷ page 93).
- ▶ Turn the controller until **Equalizer** is brought to the front.
- ▶ To activate rotary menus for treble, mid-range and bass: slide  the controller.
- ▶ To switch between the rotary menus: slide  or  the controller.

- ▶ To make the desired settings: turn the controller.  
Rotary menus show the set values.
- ▶ To return to the sound menu: slide  the controller.
- ▶ To return to media mode: press the  button.

### Adjusting the balance/fader

Balance moves the focus of the sound between left and right.

Fader moves the focus of the sound between front and rear.

- ▶ Call up the sound menu (▷ page 93).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide  or  the controller.
- ▶ To adjust the fader: slide  or  the controller.  
An image shows the sound focus set.
- ▶ To return to the sound menu: press the  button.
- ▶ To return to media mode: press the  button.

## Burmester® surround sound system

### General notes

The Burmester® surround sound system is available for all functions in the radio and media modes.



For the best sound, we recommend that the **Automatic Volume Adjustment** function is deactivated (▷ page 29). For further information on automatic volume adjustment, see (▷ page 29).

If using Bluetooth® audio mode, we recommend you select the **Boost** setting (▷ page 89).

### Calling up the sound menu

The sound settings can be selected to suit a variety of different audio sources. This means

that it is possible to set more bass for radio mode than for USB mode, for example. The respective sound menu is called up from the menu of the desired mode.


 



- ▶ Switch to radio mode (▷ page 71).
- or
- ▶ Switch to media mode (▷ page 79).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Equalizer**.

Overview of Burmester® surround sound system

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Moves the sound focus: left/right and front/rear
Surround	Optimizes sound playback for all seats

## Sound

 
 
 
 



### Setting treble, mid-range and bass

- ▶ Call up the sound menu (▷ page 93).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ Slide  the controller. The rotary menus for treble, mid-range and bass are activated.
- ▶ To switch between the rotary menus: slide  or  the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. The rotary menus show the set values.
- ▶ To return to the sound menu: slide  the controller.
- ▶ To return to media mode: press the  button.

### Adjusting the balance/fader

Balance moves the focus of the sound between left and right.

 
Fader moves the focus of the sound between front and rear.

- ▶ Call up the sound menu (▷ page 93).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance focus: slide  or  the controller.
- ▶ To adjust the fader focus: slide  or  the controller. An image shows the sound focus set.
- ▶ To return to the sound menu: press the  button.
- ▶ To return to media mode: press the  button.



### Setting surround sound

The **Surround** setting enables a wide-ranging sound playback.

Activating/deactivating

- ▶ Call up the sound menu (▷ page 93).
- ▶ Turn the controller until **Surround** is in the center.
- ▶ Slide  the controller. The left-hand rotary menu to switch surround sound on and off is activated.
- ▶ To switch on **Surround**: turn the controller.

Setting the focus

- ▶ Slide  the controller. The right-hand rotary menu is activated.
- ▶ To set the focus: turn the controller. The menu symbol, text and image show the selected setting.
- i** The focus can be set regardless of whether or not surround sound is activated.
- ▶ To exit the menu: press the  button.





