



# Audio 20

## Operating Instructions



1175840501

Order no. 6515 7896 13 Part no. 117 584 05 01 Edition C-2015

Audio 20 Supplement



Mercedes-Benz

## Symbols


In this Operator's Manual you will find the following symbols:


### **WARNING**

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

### **Environmental note**

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 Practical tips or further information that could be helpful to you.

▶ This symbol indicates an instruction that must be followed.

▶ Several of these symbols in succession indicate an instruction with several steps.

(▷ This symbol tells you where you can find more information about a topic.

**Dis-** This text indicates a message on the multifunction/Audio 20 display.

Parts of the software in the vehicle are protected by copyright © 2005

The FreeType Project

<http://www.freetype.org>. All rights reserved.

## Publication details

### Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

### Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,  
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

### Vehicle manufacturer

Daimler AG  
Mercedesstraße 137  
70327 Stuttgart  
Germany

## **Welcome to the world of Mercedes-Benz**

First of all, familiarize yourself with your Audio 20. Read these operating instructions, particularly the safety and warning notes, before you drive off.

This will help you to obtain the maximum pleasure from your Audio 20 and avoid endangering yourself and others.

The equipment level and functions of your Audio 20 may differ depending on:

- model
- order
- country specification
- availability

Mercedes-Benz is constantly updating its vehicles to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

Please consult an authorized Mercedes-Benz Center should you have any questions.



The Operator's Manual is an integral part of the vehicle. You should always keep it in the vehicle and pass it on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

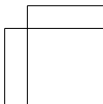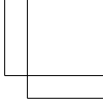

<b>Index</b> .....	<b>4</b>	<b>Overview and operation</b> .....	<b>13</b>
<b>Introduction</b> .....	<b>10</b>	<b>System settings</b> .....	<b>23</b>
		<b>Vehicle functions</b> .....	<b>33</b>
		<b>Navigation</b> .....	<b>41</b>
		<b>Telephone</b> .....	<b>45</b>
		<b>Online and Internet functions</b> .....	<b>67</b>
		<b>Radio</b> .....	<b>87</b>
		<b>Media</b> .....	<b>97</b>
		<b>Sound</b> .....	<b>117</b>

**1, 2, 3 ...****360° camera**

Settings ..... 38

**911 emergency call** ..... 47**A****Access data of the mobile phone network provider**

Deleting ..... 72

Editing ..... 72

Making entries ..... 71

Selecting ..... 70

**Adding bookmarks** ..... 83**Adjusting the volume**

Audio 20 ..... 18

Traffic announcements ..... 18

**Ambient light**

Settings (Audio 20) ..... 34

**Armrest**

Adjusting (Audio 20) ..... 36

**Audio 20**

Adjusting the display ..... 24

Basic functions ..... 18

Components ..... 14

Controller ..... 17

Display ..... 15

Functions ..... 14

Seat functions ..... 36

Switching on/off ..... 18

**Audio CD/MP3 mode**

Switching to ..... 98

**Automatic time**

Switching on/off ..... 25

**B****Back button** ..... 17**Bluetooth®**

Activating audio mode ..... 111

Activating/deactivating ..... 28

Connecting another mobile phone ..... 51

Connecting audio devices ..... 107

De-authorizing (de-registering) a device ..... 110

Device list ..... 108

Displaying connection details ..... 52

Entering the passcode ..... 50

External authorization (audio device) ..... 109

Interface ..... 46

Reconnecting an audio device ..... 109

Searching for a mobile phone ..... 49

Starting playback if the Bluetooth® audio device has been

stopped ..... 111

Telephony ..... 48

Telephony notes ..... 46

**Buttons and controller** ..... 17**C****Call lists**

Displaying details ..... 62

Opening and selecting an entry ..... 61

**Camera**

360° camera (Audio 20) ..... 38

Rear view camera ..... 39

**Category list (music search)** ..... 104**CD**

Fast forward/fast rewind ..... 104

Inserting ..... 101

Notes on discs ..... 101

Selecting a track ..... 103

Sound settings (balance, bass, fader, treble) ..... 118

**CD mode**

Playback options ..... 102

**Clear button** ..... 17**Climate control**

Ionization (Audio 20) ..... 36

**Contacts**

Importing ..... 59

**Control panel** ..... 16**Controller** ..... 17**Correct use** ..... 10**D****Date format, setting** ..... 27**Day design, setting** ..... 24**Declarations of conformity** ..... 11**Delayed switch-off**

Interior lighting ..... 35

Settings (Audio 20) ..... 35

**Destination/route download**

- Deleting a destination from the server ..... 77
- Displaying destinations in the vehicle ..... 76
- Displaying the vehicle identification number (VIN) ..... 78
- Placing a call at the destination ..... 77
- Procedure and general information ..... 75
- Sending destinations to the server ..... 76
- Using a destination for route guidance ..... 77
- Using destinations ..... 76

**Dialing a number (telephone) ..... 53****Display**

- Notes about cleaning ..... 15
- Selecting the design ..... 24
- Switching on/off ..... 25

**Displaying energy consumption and generated electrical energy (Audio20) ..... 35****E****E-mail**

- Calling up the settings menu ..... 63
- Changing the name of the e-mail account ..... 64
- Configuring an e-mail account ..... 64
- Configuring the e-mails displayed .... 64
- Deactivating the e-mail function ..... 64
- Deleting ..... 66
- Displaying details ..... 66
- Downloading e-mails manually ..... 65
- Inbox ..... 65
- Reading ..... 65
- Settings ..... 63
- Using a phone number in the text .... 66

**F****Factory setting (reset function) ..... 31****Favorites**

- Adding ..... 20
- Deleting ..... 21
- Displaying and calling up ..... 20

- Moving ..... 21
- Overview ..... 20
- Renaming ..... 20

**Favorites (Internet) ..... 85****Favorites button ..... 29****Fuel consumption (Audio 20) ..... 36****G****GARMIN® MAP PILOT ..... 42****Google™ Local Search**

- Calling up Local Search ..... 74
- Entering a search position and search term ..... 74
- Importing a destination/route ..... 75
- Popular Searches ..... 75
- Search history ..... 75
- Using as the destination ..... 75

**H****Harman kardon® Logic 7® surround sound system**

- Balance/Fader ..... 120
- Calling up the sound menu ..... 119
- Equalizer ..... 119
- Features ..... 119
- Surround sound ..... 120

**I****Internet**

- Conditions for access ..... 69
- Creating favorites ..... 85
- Entering the URL ..... 82
- Favorites manager ..... 85
- Favorites menu ..... 86
- Menu functions ..... 83
- Options menu ..... 83
- Selecting/setting access data ..... 69
- Setting automatic disconnection of the Internet connection ..... 72
- Setting up an Internet connection ... 69

**Internet radio**

- Calling up ..... 81
- Searching for stations ..... 81

## L

**Lights**

- Activating/deactivating the exterior lighting delayed switch-off ..... 35
- Ambient light settings (Audio 20) ..... 34

**List of access data**

- New provider ..... 70

**List of mobile phone network providers**

- With the selected provider ..... 70

**Locator lighting**

- Switching on/off (Audio 20) ..... 35

**Lumbar support**

- Adjusting (Audio 20) ..... 37

## M

**Message**

- Selecting a program ..... 37

**Media Interface**

- Mode ..... 113
- Playback options ..... 115
- Search ..... 114
- Selecting a music file ..... 114
- Switching to Media Interface ..... 113

**Media search**

- Category list ..... 104
- Current tracklist ..... 105
- Keyword search ..... 106
- Music genres ..... 106
- Selecting by cover ..... 105
- Starting the media search ..... 104

**Menu overview**

- CD audio and MP3 mode ..... 101

**Mercedes-Benz Apps** ..... 80**Microphone, switching on/off** ..... 55**Mobile phone**

- Authorizing ..... 50
- Connecting (Bluetooth® interface) ..... 48
- Connecting another mobile phone ..... 51
- De-authorizing ..... 52
- Displaying Bluetooth® connection details ..... 52
- Enabling for Internet access ..... 69

**MP3**

- Copyright ..... 100
- Fast forward/fast rewind ..... 104
- Notes ..... 99
- Safety notes ..... 99

**MP3 mode**

- Stop and playback function ..... 103

## N

**Navigation**

- Adjusting the volume of the navigation announcements ..... 18
- GARMIN® MAP PILOT ..... 42
- Overview ..... 42
- Switching to ..... 42

**Navigation announcements**

- Switching off ..... 18

## O

**Online and Internet functions**

- Calling up the device list ..... 71
- Destination/routes download ..... 75
- Enabling a mobile phone for Internet access ..... 69
- Ending the connection ..... 73
- Establishing a connection ..... 73
- Further Mercedes-Benz Apps ..... 80
- Manually setting the access data of the mobile phone network provider ..... 70
- Mercedes-Benz Mobile Website ..... 80
- Resetting settings ..... 80
- Selecting the access data of the mobile phone network provider ..... 70
- Setting automatic disconnection of the Internet connection ..... 72
- Setting up an Internet connection ... 69
- Web browser ..... 82

## P

**Phone book**

- Automatically importing contacts from the mobile phone ..... 58
- Calling up ..... 57
- Changing the display and sorting criteria for contacts ..... 58



- Deleting a contact ..... 59
  - Deleting imported contacts ..... 61
  - Displaying the details of an entry ..... 58
  - Importing contacts ..... 59
  - Receiving vCards ..... 60
  - Saving a contact ..... 59
  - Searching for a contact ..... 57
  - Symbol overview ..... 57
  - Phone call**
    - Dialing ..... 53
  - Picture viewer**
    - Changing view ..... 116
    - Displaying pictures ..... 115
    - Exiting the picture viewer ..... 116
- R**
- Radio**
    - Displaying information ..... 91
    - Displaying station information ..... 91
    - Displaying the artist and track ..... 91
    - Overview ..... 88
    - Setting the waveband ..... 89
    - Sound settings (balance, bass, treble) ..... 91
    - Storing stations ..... 89
    - Switching on ..... 88
    - Tagging music tracks (downloading/purchasing tracks from the iTunes Store®) ..... 90
  - Radio station**
    - Storing ..... 89
  - Rear view camera**
    - Displaying the image ..... 39
    - Settings ..... 39
  - Receiving vCards** ..... 60
  - Redialing (telephone)** ..... 53
  - Resetting (factory settings)** ..... 31
- S**
- Safety notes**
    - Audio CD and MP3 mode ..... 99
    - Operating safety ..... 10
    - Using the telephone ..... 46
  - Satellite radio**
    - Displaying information ..... 96
    - Overview ..... 93
  - Registering ..... 92
  - Switching to ..... 92
  - SatRadio**
    - Channel list updates ..... 96
    - Memory functions ..... 94
    - Music and sports alerts ..... 94
    - Notes ..... 91
    - Selecting a category ..... 93
    - Selecting a channel ..... 93
    - Tagging music tracks ..... 95
  - SD memory card**
    - Ejecting ..... 102
    - Inserting ..... 102
    - Inserting/removing ..... 101
  - Seat cushion**
    - Adjusting (Audio 20) ..... 37
  - Seats**
    - Active multicontour seat (Audio 20) ..... 37
    - Adjusting the lumbar support (Audio 20) ..... 37
    - Balance (seat heating) ..... 37
    - Massage function (Audio 20) ..... 37
    - Massage programs (Audio 20) ..... 37
    - Resetting settings ..... 38
    - Selecting for adjustment (Audio 20) ..... 36
    - Setting the driving dynamics (Audio 20) ..... 37
  - Selecting stations**
    - Radio ..... 89
  - Sending DTMF tones** ..... 55
  - Setting access data**
    - Online and Internet ..... 70
  - Setting the date** ..... 27
  - Setting the language**
    - Audio 20 ..... 28
  - Setting the night design** ..... 24
  - Setting the volume**
    - Telephone calls ..... 18
  - Settings**
    - Sound settings ..... 118
  - Short message**
    - see Text messages (SMS)
  - Sound**
    - Switching on/off ..... 18
  - Sound settings**
    - Balance/fader ..... 118

- Calling up the sound menu ..... 118
  - Equalizer ..... 118
  - Speed dial**
    - Deleting ..... 62
    - Setting up ..... 62
  - Station presets (radio)**
    - Deleting marked stations ..... 89
  - Storing stations**
    - Radio ..... 89
  - Switching between summer time and standard time** ..... 26
  - Switching on media mode**
    - Using the Media button ..... 98
    - Via the device list ..... 99
    - Via the main function bar ..... 99
  - System settings**
    - Bluetooth® ..... 28
    - Date ..... 25
    - Importing/exporting data ..... 29
    - Language ..... 28
    - Time ..... 25
    - Time zone ..... 25
- T**
- Telephone**
    - Accepting a call (Audio 20) ..... 53
    - Adding a call ..... 54
    - Adjusting the volume for calls ..... 18
    - Authorizing a mobile phone (connecting) ..... 50
    - Call lists ..... 61
    - Call waiting ..... 56
    - Calls with several participants ..... 55
    - Conference calls ..... 56
    - Connecting a mobile phone (general information) ..... 48
    - De-authorizing (disconnecting) a mobile phone ..... 52
    - Deleting a speed dial preset ..... 62
    - Deleting messages ..... 66
    - Displaying Bluetooth® connection details ..... 52
    - Downloading messages manually .... 65
    - E-mail ..... 63
    - E-mail conditions ..... 63
    - E-mail settings ..... 63
    - Ending an active call ..... 56
    - Entering a number ..... 53
    - Entering phone numbers ..... 53
    - Establishing the connection from the mobile phone ..... 51
    - Function restrictions ..... 47
    - Functions available during a call ..... 54
    - General notes ..... 46
    - Incoming call during an existing call ..... 56
    - Making a call ..... 53
    - Message conditions ..... 63
    - Message settings ..... 63
    - Operating options ..... 47
    - Phone book ..... 57
    - Reading messages ..... 65
    - Reception and transmission volume ..... 52
    - Reconnecting a mobile phone automatically ..... 51
    - Redialing ..... 53
    - Rejecting a call (Audio 20) ..... 53
    - Safety notes ..... 46
    - Sending DTMF tones ..... 55
    - Setting up a speed dial ..... 62
    - Switching between calls (call waiting) ..... 55
    - Switching between mobile phones ..... 51
    - Switching the microphone on/off .... 55
    - Telephone menu overview ..... 47
    - Text message conditions ..... 63
    - Text message settings ..... 63
    - Text messages (SMS) ..... 63
    - Toggling ..... 55
    - Using the telephone ..... 53
  - Telephone number**
    - Entering ..... 53
  - Text messages (SMS)**
    - Calling the sender ..... 66
    - Calling up the settings menu ..... 63
    - Configuring the text messages displayed ..... 64
    - Deleting ..... 66
    - Displaying details ..... 66
    - Downloading manually ..... 65
    - Inbox ..... 65
    - Reading ..... 65
    - Settings ..... 63

Using a phone number in the text .... 66

## **Time**

Setting ..... 27  
Setting the format ..... 27  
Setting the time ..... 27  
Setting the time manually ..... 26  
Setting the time zone ..... 25  
Setting the time/date format ..... 27  
Switching automatic time on/off ..... 25

## **U**

### **USB audio mode**

Selecting a track ..... 103

### **USB devices**

Connecting to the Media Inter-  
face ..... 102

## **V**

**Vehicle settings** ..... 34

### **Volume, adjusting**

Navigation messages ..... 18

## **W**

### **Weather forecast**

Calling up ..... 78  
Displaying a saved location ..... 79  
Information chart overview ..... 78  
Saving a location ..... 79  
Selecting a location from the  
information chart ..... 79  
Weather map overview ..... 79

### **Web browser**

Entering a web address ..... 82

## Operating safety

### Important safety notes

#### WARNING

If you operate integrated communication equipment in the vehicle when driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h) your vehicle covers a distance of 44 feet (approximately 14 m) per second.

#### WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

If you make any changes to the vehicle electronics, the general operating permit is rendered invalid.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation

(MPE). But it is desirable that it should be installed and operated with at least 8 inches (20 cm) and more between the radiator and a person's body (excluding extremities: hands, wrists, feet and legs.)

### Correct use

#### WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

Always observe the following when using Audio 20:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

Roof antenna functionality (telephone, satellite radio, GPS) can be affected by the use of roof carrier systems.

Attaching metalized retrofit film to the windshield may affect radio reception and have a negative impact on all other antennas (e.g. emergency antenna) in the vehicle interior.

**Protection against theft:** this device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

## Declarations of conformity

### Vehicle components which receive and/or transmit radio waves

**i USA only:** The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**i Canada only:** The wireless devices of this vehicle comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

## Qualified specialist workshop

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

## Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion. You will notice this, for example, because you will not be able to select certain menu items.

## Data stored in the vehicle

### Data recording

This vehicle is capable of recording diagnostic information relating to vehicle operation, malfunctions, and user settings. This may include information about the performance or status of various systems, including but not limited to, engine, throttle, steering or brake systems, that is stored and can be read out with suitable devices, particularly when the vehicle is serviced. The data obtained is used to properly diagnose and service your vehicle or to further optimize and develop vehicle functions.

### Audio 20/mbrace

If the vehicle is equipped with Audio 20 or mbrace, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled through Audio 20 or the mbrace system.

For additional information please refer to the Audio 20 operating instructions and/or the mbrace Terms and Conditions.

## Event data recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed in certain crash or near crash-like situations, such as during air bag deployment or when hitting a road obstacle. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- how various systems in your vehicle are operating
- whether or not the driver and passenger seat belts are fastened

- how far (if at all) the driver is depressing the accelerator and/or brake pedal and
- how fast the vehicle is traveling

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, can combine the EDR data with the type of personal identification data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Supplemental Restraint System ("SRS") Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the SRS Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of February 2013, 13 states have enacted laws relating to EDRs.

### Information on copyright

#### General information

Information on licenses for free and Open Source software used in your vehicle and in the electronic components can be found on this website: <http://www.mercedes-benz.com/opensource>.


### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

Overview .....	14
Basic functions .....	18
Favorites .....	20

## Overview

## Components

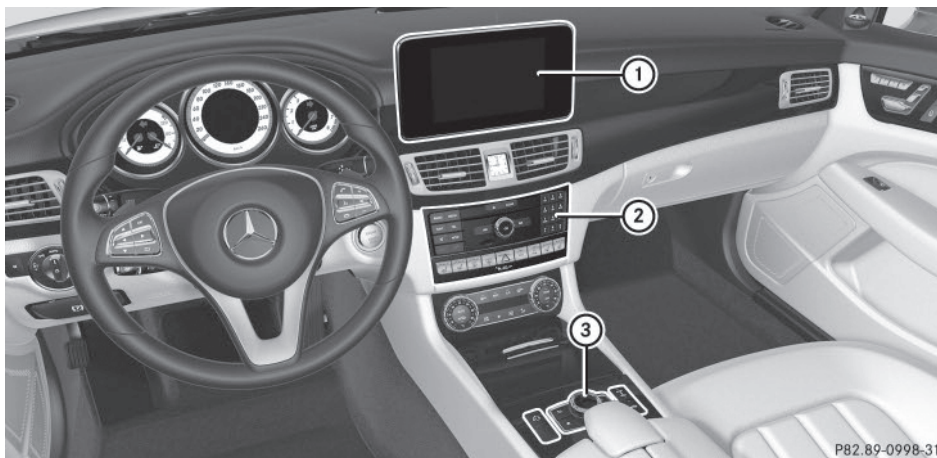

- ① Display (▷ page 15)
- ② Audio 20 control panel (▷ page 16)
- ③ Controller and buttons (▷ page 17)

Audio 20 consists of:

- the display
- Audio 20 control panel with a single drive (if available) and a slot for an SD card
- the controller
- two connection options via USB or Media Interface in the center console  
An iPod® is connected via USB cable.

## Functions

- **HD FM radio/HD AM radio/satellite radio**

Internet radio (called up via communication functions)

- **Media**

- Media support: audio and MP3 CD (if single drive available), two connection options for USB or via Media Interface, SD card, Bluetooth® audio

An iPod®, for example, can be connected directly to the USB via the integrated Media Interface.

- Music search using all media

- **Sound system**

You can select the harman/kardon® Logic7® surround sound system.

- **Navigation system**

- Navigation using SD memory card
- Realistic 3D map with textured city models

- **Communication**

- Reading text messages
- Internet browser
- Mercedes-Benz Apps with Google Local Search™, Destination/Route Download, Weather, Facebook, Google Street



View™, Internet radio, stock prices, news and much more

- Mercedes-Benz Mobile Website

- **Vehicle functions:**

- Vehicle settings, e.g. fuel consumption
- 360° camera
- Rear view camera
- Seat functions, e.g. Dynamic seat

- **Favorites button**

Fast access to favorites functions using the favorites button on the controller

## Display

### General notes

- ❗ Do not use the space in front of the display for storage. Objects placed here could damage the display or impair its function. Avoid any direct contact with the display surface. Pressure on the display surface may result in impairments to the display, which could be irreversible.

Wearing polarized sunglasses may impair your ability to read the display.

The display has an automatic temperature-controlled switch-off feature. The brightness is automatically reduced if the temperature is too high. The display may then temporarily switch off completely.

### Overview



- ① Status bar with traffic announcements, can show other displays
- ② Main display field

The climate control status display is briefly displayed when you operate the climate control system.

The example shows playback in audio CD mode.


### Cleaning instructions

- ❗ Do not touch the display. The display has a very sensitive high-gloss surface; there is a risk of scratching. If you have to clean the screen, however, use a mild cleaning agent and a soft, lint-free cloth.


The display must be switched off and have cooled down before you start cleaning. Clean the display screen, when necessary, with a commercially available microfiber cloth and cleaning agent for TFT/LCD displays. Do not apply pressure to the display surface when cleaning it, as this could cause irreversible damage to the display. Then, dry the surface with a dry microfiber cloth.


Avoid using alcoholic thinners, gasoline or abrasive cleaning agents. These could damage the display surface.

## Audio 20 control panel

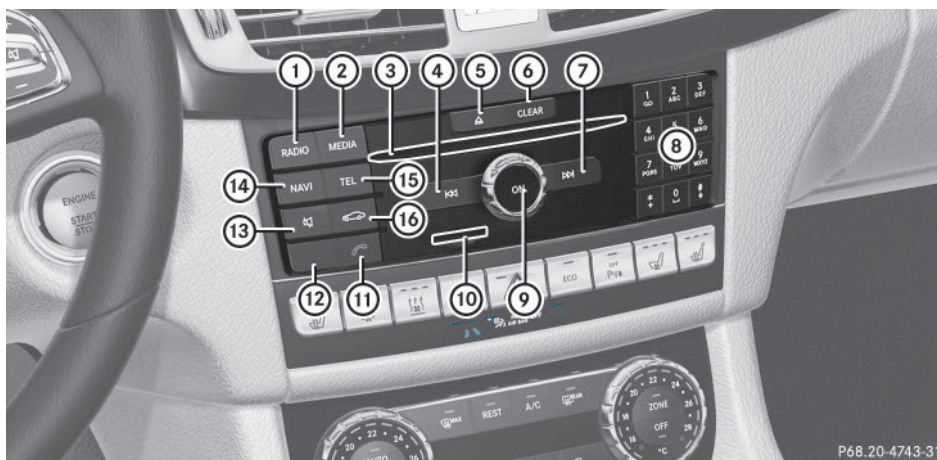

P68.20-4743-31


	Function	Page
①	Switches to radio mode	88
	Calls up the Radio menu	89
②	Switches to the last selected media mode	98
	Calls up the Media menu	98
③	Inserts and removes a CD from the single drive (if single drive available)	101
④	Selects the previous station from the station list	89
	Skips backwards to a track	103
⑤	Loads/ejects CDs (if button available)	
	 Single drive	101
⑥	Clear button	17
	Deletes characters	
	Deletes an entry	
⑦	Selects the next station from the station list	89
	Skips forwards to a track	103

	Function	Page
⑧	Number pad	
	• Saves a station	89
	• Authorizes (connects) a mobile phone	50
	• Telephone number entry	53
	• Searches for a contact	57
	Selects stations by entering the frequency manually	89
	Selects a track	103
⑨	Switches Audio 20 on/off	18
	Adjusts the volume	18
⑩	Inserts/removes an SD memory card	101
⑪	Accepts a call	53
	Makes a call	53
	Redial	53
	Accepts a new call when a call is being made (call waiting)	56
⑫	Rejects a call	53
	Ends an active call	56


	Function	Page
⑬	Switches the sound on or off	18
	Switches off navigation announcements	18
⑭	Calls up the sound menu	118
	Switches to navigation mode (if available)	42

## Buttons and controller

### Overview

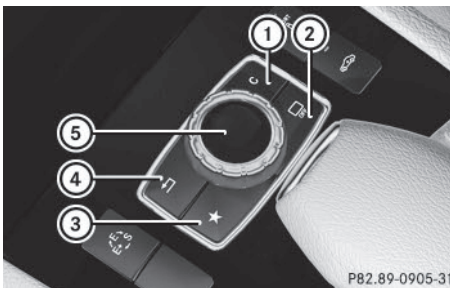

- ① Clear button
- ② Switches the display on/off
- ③ Favorites button (if available)
- ④ Back button
- ⑤ Controller

The vehicle may be equipped with the  button for seat settings instead of the display on/off button.

For AMG vehicles: the controller is equipped with buttons ① and ④.






### Controller

The controller in the center console lets you:


- select menu items on the display
- enter characters
- select a destination on the map
- save entries


	Function	Page
⑮	Calls up the telephone menu	47
⑯	Calls up vehicle settings	34


The controller can be:

- turned 
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held 



### Back button

You can use the  button to exit a menu or to call up the basic display of the current operating mode.


- ▶ **To exit the menu:** briefly press the  button.  
Audio 20 changes to the next higher menu level in the current operating mode.

- ▶ **To call up the basic display:** press the  button for longer than two seconds.  
Audio 20 changes to the basic display of the current operating mode.


### Clear button

- ▶ **To delete individual characters:** briefly press the  button.
- ▶ **To delete an entire entry:** press and hold the  button.


### Favorites button

You can assign predefined functions using the  favorites button and call them up by pressing the button (▷ page 29).

## Display off button


You can switch the display off/on using the  button (▷ page 25).

## Seat button

If the controller is equipped with the  button, you can call up the menu for the seat settings (▷ page 36).




## Basic functions

### Switching Audio 20 on/off

- ▶ Press the  control knob. When you switch on Audio 20, a warning message will appear. Audio 20 calls up the previously selected menu. If you switch off Audio 20, playback of the current media source will also be switched off.

### Adjusting the volume




#### Adjusting the volume for media sources

- ▶ Turn the  control knob. or
- ▶ Press the  or  button on the multifunction steering wheel. The volume of the media source currently selected changes.

#### Adjusting the volume for traffic announcements and navigation announcements

If your vehicle is equipped with GARMIN® MAP PILOT, you can adjust the volume of the navigation announcements.




During traffic or navigation announcements:

- ▶ Turn the  control knob. or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

#### Adjusting the volume for phone calls



You can adjust the volume for hands-free mode during a telephone call.

- ▶ Turn the  control knob. or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** If your vehicle is equipped with GARMIN® MAP PILOT, you can adjust the volume of the voice control system (see the manufacturer's operating instructions).


### Switching the sound on or off

#### Media source sound

- ▶ Press the  button on the Audio 20 control panel or the multifunction steering wheel. The sound is switched off. If the audio output is switched off, the status line will show the  symbol. If you switch the media source or change the volume, the sound is automatically switched on.
- i** Even if the sound is switched off, you will still hear navigation system announcements (if available).

#### Switching navigation announcements off and on again

If your vehicle is equipped with MARGIN® MAP PILOT, you can switch navigation announcements on and off.

- ▶ **To switch navigation announcements off:** press the  button during an announcement. The **Spoken driving recommendations have been deactivated.** message appears.

- ▶ **To switch navigation announcements on again:** switch Audio 20 off and then on again (▷ page 18).

or

- ▶ If navigation is available via an SD card, start a new route calculation.



- ▶ Press the **MEDIA** button or the **NAVI**, **RADIO**, **TEL**, or **Vehicle** button.

**Navigation (if available):** the display last called up appears.

**Radio:** the basic menu of the last radio mode set appears.

**Media:** the basic display for the last media source set appears.

**Communication:** the basic menu of the last communication function set appears (telephone, Internet).

**Vehicle functions:** the basic display appears.

- ▶ **To show the menu:** slide **↑** **⊙** **↓** the controller. The menu for the selected functions appears. Depending on the operation, the marking is shown in main function bar (top) or menu bar (bottom).
- ▶ To select a menu item: turn and press the controller. If you have selected a menu item from the main function bar, switch to the last menu set for the selected function.


The menu bar features options within the currently set function.

### Selecting the operating mode for a main function

For the main functions, e.g. communication or media, you can choose from the available operating modes.

In the communication menu, you can:

- switch to telephone mode
- call up the Internet
- call up the digital operating instructions for the telephone/

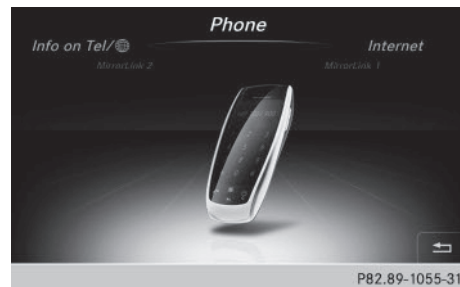

- ▶ Press the **TEL** button. The phone menu appears.


- ▶ **To call up the menu:** press the **TEL** button again.

or

- ▶ To select **Tel/**: slide **↑** **⊙** and press the controller. The communication menu appears. **Phone** is at the front.
- ▶ To select Internet, for instance, turn and press the controller.

## Favorites

### Overview of favorites

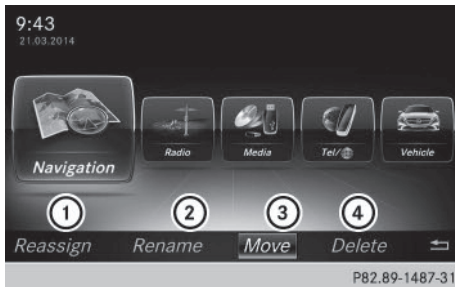

- ① To add a new favorite (▷ page 20)
- ② To rename a selected favorite (▷ page 20)
- ③ To move a selected favorite (▷ page 21)
- ④ To delete a selected favorite (▷ page 21)

### Displaying the favorites overview

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To show the menu bar: slide the controller.

You can manage a total of 20 favorites. Further information on how to select and display a favorite (▷ page 20).

### Displaying and selecting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select a favorite: turn the controller.
- ▶ To call up a favorite: press the controller.

### Adding favorites

#### Adding predefined favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To show the menu bar: slide the controller.

- ▶ To select **Assign New**: turn and press the controller. The categories for the available favorites are displayed.
  - Entertainment
  - Tel
  - Vehicle
  - Climate Control
- ▶ To select a category: turn the controller and press to confirm. The corresponding favorites are displayed.
- ▶ To select the desired favorite: turn and press the controller.
- ▶ To store the favorite in the desired order: turn and press the controller. The favorite has been added. If a favorite is stored over another favorite, the favorite underneath is deleted.

### Adding your own favorites


You can store phone numbers from the phone book or radio station as favorites.

A phone number from the phone book is used as an example.


- ▶ Call up the phone book (▷ page 57).
- ▶ Search for the contact and display the phone number: (▷ page 57).
- ▶ To store the phone number as a favorite: press and hold the favorites button on the controller until the favorites are displayed.
- ▶ To store the favorite in the desired order: turn and press the controller. The favorite has been added. If a favorite is stored over another favorite, the favorite underneath is deleted.


### Renaming favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select the favorite to be renamed: turn the controller.


- ▶ To show the menu bar: slide  the controller.
  - ▶ To select **Rename**: turn and press the controller.
  - ▶ Enter characters using the controller.
  - ▶ To finish the entry: select **OK**.  
The favorite has been renamed.
- ▶ To select **Yes**: turn and press the controller.  
The favorite is deleted.
- or
- ▶ To select **No**: turn and press the controller.  
The process is canceled.

### Moving favorites

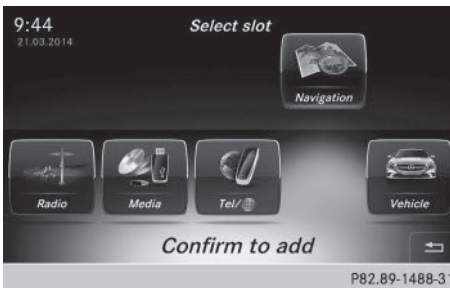

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ To select the favorite to be moved: turn the controller.
- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Move**: turn and press the controller.
- ▶ To store the favorite in the desired order: turn and press the controller.  
The favorite has been moved.  
If a favorite is stored over another favorite, the favorite underneath is deleted.

### Deleting favorites

- ▶ Press the favorites button on the controller.  
The favorites are displayed.
- ▶ To select the favorite to be deleted: turn the controller.
- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Delete**: turn and press the controller.





Features of your Audio 20 .....	24
Important safety notes .....	24
Display settings .....	24
Time settings .....	25
Bluetooth® settings .....	28
Setting the system language .....	28
Calling up the favorite functions .....	29
Importing/exporting data .....	29
Reset function .....	31

### Features of your Audio 20

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### Important safety notes

#### WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident. Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

#### WARNING


SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.



Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

### Display settings

#### Setting the brightness

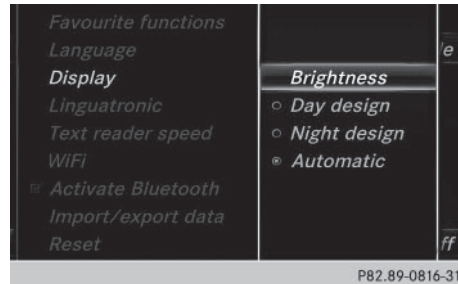
The brightness detected by the display light sensor affects the setting options for this function.





- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ Select **Brightness**. A control appears.
- ▶ To select the desired brightness: turn and press the controller.

#### Display design



The display features optimized designs for daytime and night-time operation. You can set the design by manually selecting day or night design or opt for an automatic setting.

- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ To select **Day Mode**, **Night Mode** or **Auto**: turn and press the controller. The  dot indicates the current setting.

Design	Explanation
Day Mode	The display is set permanently to day design.
Night Mode	The display is set permanently to night design.
Auto	In the <b>Auto</b> setting, Audio 20 evaluates the readings from the light sensor and automatically switches the display design.

#### Switching the display on/off

- ▶ Press the  button on the Audio 20 control panel.
- ▶ To select **Display Off**: slide , turn and press the controller to confirm. The display goes out.

or

- ▶ Press the  button on the controller. The display goes out.
- ▶ **To switch the display on again**: press the controller.

## Time settings

### General information

**Vehicles with a GPS module:** Audio 20 can automatically set the time and date.


The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival


**Vehicles without a GPS module:** you can manually set the time and date with Audio 20.

### Switching automatic time on and off

The **Automatic Time Settings** function is only available in vehicles with a GPS module. The **Automatic Time Settings** function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button on the Audio 20 control panel.

or

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Automatic Time Settings**: press the controller.
- ▶ To switch the function on  or off : press the controller.

### Setting the time zone


The **Time Zone**: function is only available in vehicles with a GPS module.

To set the time zone, the **Automatic Time Settings** function must be activated.

- ▶ Press the  button on the Audio 20 control panel.

or



- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To select **Time**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Time Zone**:: turn and press the controller. A list of countries appears. The ● dot indicates the current setting.
- ▶ Select the country you are currently in by turning and pressing the controller. The country is accepted. A time zone list may also be displayed, depending on the country selected.
- ▶ To select the desired time zone: turn and press the controller. The time zone is accepted. A list of available options for setting summer time appears (> page 26).

### Setting summer and standard time

The **Daylight Saving Time** menu is not available in all countries. The **Automatic** function is only available in vehicles with a GPS module.

You can use the **Daylight Saving Time** menu to set automatic summer time change-over or switch the summer time setting on or off. The changeover to summer time advances the time by one hour.



- ▶ Press the  button on the Audio20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Daylight Saving Time**: turn and press the controller. A list of available options for setting summer time appears.
- ▶ To select **Automatic, On** or **Off**: turn and press the controller.


Setting	Function
<b>Automatic</b>	The summer and standard time are automatically changed over.
<b>On</b>	The clock is advanced one hour ahead of standard time.
<b>Off</b>	The standard time for the chosen time zone is selected.

### Manual time setting

The **Set Time Manually** function is only available in vehicles with a GPS module.






- i** Using the manual time settings, you can set the time forwards or backwards by up to several hours.
- ▶ Press the  button on the Audio20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Time**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Set Time Manually**: turn and press the controller. A menu with an analog clock appears.
- ▶ To set the hour: turn the controller.

- ▶ To highlight the minutes: slide  the controller.
  - ▶ To set minutes: turn and press the controller.  
The time is accepted.  
The **Automatic Time Settings** function is deactivated .
- If **Automatic** is set for the summer time changeover, a prompt will appear asking whether the automatic changeover should be maintained between summer and winter time.

**i** If **Automatic Time Settings** is reactivated, the previous settings for time zone and summer time changeover are restored.





### Setting the time

The **Set Time** function is only available in vehicles without a GPS module.

- ▶ Press the  button on the Audio20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
  - ▶ To select **Time**: slide , turn and press the controller to confirm.  
A menu appears.
  - ▶ To select **Set Time**: press the controller.  
A menu appears.
  - ▶ To set the hour: turn the controller.
  - ▶ To highlight minutes: slide  the controller.
  - ▶ To set minutes: turn and press the controller.  
The time is accepted.



### Setting the date

The **Set Date** function is only available in vehicles without a GPS module.

- ▶ Press the  button on the Audio20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
  - ▶ To select **Time**: slide , turn and press the controller to confirm.  
A menu appears.
  - ▶ To select **Set Date**: turn and press the controller.  
A menu appears.
  - ▶ To set the day: turn the controller.
  - ▶ To highlight the month: slide  the controller.
  - ▶ To set the month: turn the controller.
  - ▶ To highlight the year: slide  the controller.
  - ▶ To set the year: turn and press the controller.  
The set date is accepted.

### Setting the time and date format

Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
  - ▶ To select **Time**: slide , turn and press the controller to confirm.  
A menu appears.
  - ▶ To select **Format**: turn and press the controller.
  - ▶ To select the desired date format: turn and press the controller.  
The • dot indicates the current setting.
  - ▶ To select the desired time format: turn and press the controller.  
The • dot indicates the current setting.

Abbreviation	Meaning
DD.MM.YYYY	Day.Month.Year date format, year (all four digits)
DD/MM/YYYY	Day/Month/ Year date format, year (all four digits)
MM/DD/YYYY	Month/Day/ Year date format, year (all four digits)
YY/MM/DD	Year/ Month/Day date format, year (two dig- its)
YYYY/MM/DD	Year/ Month/Day date format, year (all four digits)
YYYY-MM-DD	Day - Month - Year date format, year (all four digits)
HH:MM (24 hrs)	Hours : Minutes (24 hour time format)
HH:MM (AM/PM)	Hours : Minutes (AM/PM time format)

## Bluetooth® settings

### General information about Bluetooth®


Bluetooth®-capable devices, e.g. mobile phones, need to comply with a certain profile in order to be connected to Audio 20. Every Bluetooth® device has its own specific Bluetooth® name.

Bluetooth® technology is a standard for short-range wireless data transmissions up to approximately 10 meters. You can use Bluetooth® to connect your mobile phone to Audio 20 to, for example:


- use the hands-free system
- establish an Internet connection
- listen to music using Bluetooth® Audio
- exchange vCards

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

### Activating/deactivating Bluetooth®

- ▶ Press the  button on the Audio 20 control panel.


or

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller to confirm. A menu appears.
- ▶ To select **Activate Bluetooth**: turn and press the controller.  
This switches Bluetooth® on  or off .


## Setting the system language

This function allows you to determine the language for the menu displays and the navigation messages. The selected language affects the characters available for entry.

**i** The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

- ▶ Press the  button on the Audio 20 control panel.

or


- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Language**: turn and press the controller. The list of languages appears. The • dot indicates the current setting.
- ▶ Select the desired language. Audio 20 loads the selected language and stores the setting.

### Calling up the favorite functions


The Favorites function can, depending on the vehicle equipment, be called up as follows:

- via the **System Settings** menu
- via the Favorites button on the controller (> page 17)

#### Calling up the Favorites function via the system menu:

- ▶ Press the  button on the Audio 20 control panel.

or



- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , and press the controller. A menu appears.
- ▶ To select **Favorite Functions**: press the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller. A menu appears.

#### Calling up the Favorites function using the controller:

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller.

The Favorites function can be exited at any time.

#### To exit the Favorites function:

- ▶ Press the Favorites button again or
- ▶ Press  on the controller. or
- ▶ To select  in the display: turn and press the controller.

Further information on the Favorites function (> page 20).

### Importing/exporting data

#### General notes


**!** Never remove the stick or card when writing data to the USB stick or the memory card. You may otherwise lose data.

Using this function you can:

- transfer your personal Audio 20 data from one system/vehicle to another.
- make a backup copy of your personal data (export data) and load it again (import data).
- protect your data from unwanted export by activating a pin prompt (presetting: deactivated ).

You can either use an SD memory card or a USB storage device (e.g. a USB stick) as temporary storage.

### Activating/deactivating PIN protection

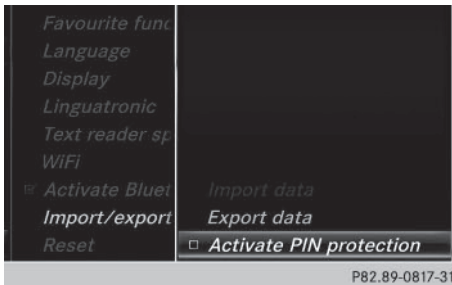


- ▶ Press the button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Activate PIN Protection**. Activate  or deactivate  PIN protection. When activating PIN protection, you will be prompted to enter a PIN.



- ▶ To enter the 4-digit PIN and select : turn and press the controller. You will be prompted to enter the PIN again.
- ▶ Enter the PIN again and select . The PIN prompt now protects your personal data from unwanted export.

- i** If you deactivate your PIN protection, you will first be prompted to enter your PIN. If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate your PIN protection for you. Alternatively, you can deactivate PIN protection by resetting your personal Audio 20 data (▷ page 31).

### Importing/exporting data

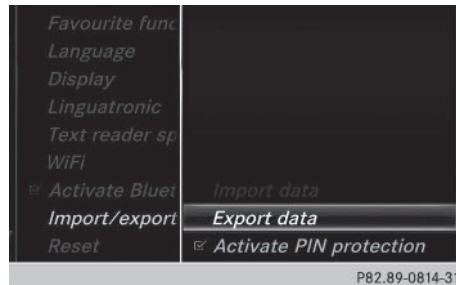

- ▶ Insert the SD memory card (▷ page 102).
- or
- ▶ Connect a USB device (e.g. a USB memory stick) (▷ page 102).
- ▶ Press the button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide and press the controller. A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Import Data** or **Export Data**.

- i** If you import data, such as address data, the existing data on Audio 20 is overwritten. You will see a message to this effect. Audio 20 is restarted after the data import.





If PIN protection is activated, a PIN prompt appears when you select **Export Data**.

- ▶ To enter the PIN: turn the controller and press **ok** .  
PIN protection is deactivated.
- ▶ To select **Memory Card, USB 1** or **USB 2**: turn and press the controller.  
This function exports all the data to the selected disc.  
A window appears with the message that the data has been exported.

**i** You can export address data, bookmarks, system settings that you have made and radio station lists, for example.  
Mercedes-Benz is not liable for any loss of data.


## Reset function

You can reset Audio 20 to the factory settings. This includes the deletion of all of your Audio 20 personal data. These include:

- Station presets
- Entries in the destination memory
- Entries in the list of previous destinations in the navigation system
- Authorized telephone

In addition, an activated PIN protection, which you have used to protect your data against unwanted export, will be deactivated. Resetting is recommended before selling or transferring ownership of your vehicle, for example.

Mercedes-Benz is not liable for any loss of data.

- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar.  
The vehicle menu is displayed.
- ▶ To select **System Settings**: slide **⊙↓**, turn and press the controller to confirm.  
A menu appears.
- ▶ To select **Reset**: turn and press the controller.  
A prompt appears asking whether you wish to reset.
- ▶ Select **Yes** or **No**.  
If you select **No** the process is canceled.  
If you select **Yes** a prompt will appear again asking whether you really wish to reset.
- ▶ Select **Yes** or **No**.  
If you select **Yes** a message will be shown.  
Audio 20 is reset to the factory settings and restarted.  
If you select **No** the process is canceled.



Features of your Audio 20 ..... 34  
Important safety notes ..... 34  
Vehicle settings ..... 34  
Seats ..... 36  
360° camera ..... 38  
Rear view camera ..... 39



### Features of your Audio 20

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### Important safety notes


#### WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident. Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.


### Vehicle settings

#### Calling up vehicle settings


- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To select **Vehicle Settings**: turn and press the controller.
- ▶ To select the desired vehicle setting: turn and press the controller. The main area with the setting element is active.

Selecting a different vehicle setting:

- ▶ To activate the menu for selecting the vehicle setting: slide  the controller.

Exiting the vehicle settings:

- ▶ To select : slide  and press the controller.

### Ambient lighting

#### General notes

You can set the following for the ambient lighting:

- Interior welcome light  
Ambient lighting is activated for a short time when the driver's door is opened.
- Brightness  
This setting makes an additional change to the brightness of the ambient lighting.
- Color  
This setting changes the color of the ambient lighting.

#### Setting the brightness

- ▶ Call up **Vehicle Settings** (> page 34).
- ▶ To select **Ambient Light: Brightness**: turn and press the controller. The setting element is active.
- ▶ Press the controller.
- ▶ To change the brightness value: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

### Setting the color

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Ambient Light: Color**: turn and press the controller.  
The setting element is active.
- ▶ To select a color: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

### Setting the interior welcome light

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Interior welcome light**: turn and press the controller.
- ▶ Press the controller.  
The function is switched on or off, depending on the previous status.

You can find further information on the interior lighting in the vehicle Operator's Manual.

### Switching locator lighting on/off

If you switch on the **Locator Lighting** function, the exterior lighting is switched on for a short time when it is dark. The light switch must be set to **AUTO**.

The exterior lighting remains on for 40 seconds after the vehicle is unlocked. When you start the engine, the locator lighting is switched off and automatic headlamp mode is activated.

You can find further information on the automatic headlamp mode in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Locator Lighting**: turn and press the controller.
- ▶ Press the controller.  
The function is switched on or off, depending on the previous status.

You can find further information on the locking feature in the vehicle Operator's Manual.

### Setting the delayed switch-off time

#### Interior lighting delayed switch-off

The interior lighting is activated for the duration of the delayed switch-off time when the SmartKey is removed from the ignition lock.

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Interior Lighting Delayed Switch-off**: turn and press the controller.  
The setting element is active.
- ▶ To change the delayed switch-off time: turn the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

#### Exterior lighting delayed switch-off

If you switch on the **Exterior Lighting Delayed Switch-off** function, the exterior lighting is switched on for a short time after the engine is switched off. The light switch must be set to **AUTO**.

The exterior lighting remains on for 60 seconds after the engine is switched off. If you close all the doors and the tailgate, the exterior lighting switches off after the set time.

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Exterior Lighting Delayed Switch-off**: turn and press the controller.  
The setting element is active.
- ▶ To change the delayed switch-off time: turn the controller.

### Displaying energy consumption and generated electrical energy


A bar graph displays the energy consumption and the generated electrical energy.

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Consumption**: turn and press the controller.

The energy consumption and the generated electrical energy for the last 15 minutes of the journey is shown.

You can find further information on energy consumption in the vehicle Operator's Manual.

### Displaying the fuel consumption

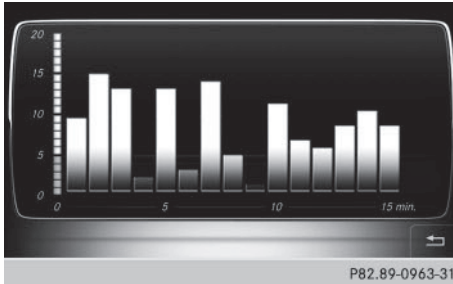

Every bar of the graph displays the average value for one minute.


- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Consumption**: turn and press the controller.  
The fuel consumption for the last 15 minutes of the journey is shown.

### Switching the ionization on/off

The ionization has a cleansing effect on the air in the vehicle interior. You can find further information on the ionization in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 34).
- ▶ To select **Ionization**: turn and press the controller.  
The ionization is switched on or off, depending on the previous status: press and turn the controller.

Exiting a menu

- ▶ Press the  button.




## Seats

### Overview

The following settings can be made in the menu:


- Backrest side bolsters
- Lumbar
- Seat cushion
- Massage
- Dynamics
- Seat heating balance

### Selecting the adjustment function and seat

- ▶ Press the  button on the Audio 20 control panel.
- or
- ▶ To select **Vehicle** from the main function bar: turn and press the controller.  
The vehicle menu is displayed.
- ▶ To select **Seat Settings**: turn and press the controller.  
The seat settings menu is shown.
- or
- ▶ Press the  button on the controller.  
The seat settings menu is shown.
- ▶ To select the required seat function: turn and press the controller.
- ▶ To switch between **Driver** and **Front Passenger**: slide  the controller.


### Adjustment functions

#### Adjusting the backrest side bolsters


- ▶ Call up the seat functions (▷ page 36).
- ▶ To select **Backrest Sides**: turn and press the controller.
- ▶ To change the setting: turn the controller.  
You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

### Adjusting the seat contour in the lumbar region of the seat backrest

This function allows you to adjust the air cushions in the lumbar region of the backrest (4-way lumbar support).

- ▶ Call up the seat functions (▷ page 36).
- ▶ To select **Lumbar**: turn and press the controller.
- ▶ To activate the setting element: press the controller.
- ▶ To change the setting: slide ↑⊙↓ or ←⊙→ the controller.  
The change will be visible in the setting element.
- ▶ **To exit the menu**: press the  button.


### Adjusting the seat cushion

- ▶ Call up the seat functions (▷ page 36).
- ▶ To select **Seat Surface**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To change the setting: turn the controller.  
You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

### Adjusting the driving dynamics

- ▶ Call up the seat functions (▷ page 36).
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To select **Dynamic Multicontour Seat**: turn and press the controller.

You can select:

- **0**: Off
- **1**: Level 1 (weak)
- **2**: Level 2 (strong)
- ▶ To select the setting: turn the controller.
- ▶ **To exit the menu**: press the  button.


### Massage programs

#### Overview

You can select the following massage programs:

- **Relaxing Massage**  
Relaxing massage program starting in the pelvic area, warm pressure points can be felt, full back massage, stretching the pelvic area, ending with gentle soothing movements
- **Activating Massage**  
Activating massage through increasing twin-waves and then soothing movements
- **Classic Massage**  
Massage with increasing waves, soothing movements
- **Mobilizing Massage**  
Mobilization of the spinal column and the complete upper body by means of pressure point mobilizing massage at chest height

#### Selecting a massage program

- ▶ Call up the seat functions (▷ page 36).
- ▶ To select **Massage**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To select massage programs: turn and press the controller.  
The massage program runs for approximately 15 to 25 minutes, depending on the setting.
- ▶ **To exit the menu**: press the  button.


### Seat heating balance

The balance function controls the distribution of heat on the seat backrest and cushion.

The balance function influences the currently set heating level of the seat heating (see the vehicle Operator's Manual).

- ▶ Call up the seat functions (▷ page 36).
- ▶ To select **Seat Heating Balance**: turn and press the controller.
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.

The settings represent the following:

- **0** – the backrest and seat cushion are evenly heated according to the setting selected with the seat heating button.
  - **1 to 3** – the heat output to the seat cushion is reduced one level at a time.
  - **-1 to -3** – the heat output to the backrest is reduced one level at a time.
- ▶ **To exit the menu**: press the  button.

### Resetting all adjustments

- ▶ Call up the seat functions (▷ page 36).
- ▶ Select a seat.
- ▶ To select **Reset**: turn and press the controller.
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To reset: press the controller. A prompt appears.
- ▶ To select **Yes** or **No**: turn and press the controller. If you select **No** the process is canceled. After selecting **Yes** all seat adjustments are reset to the default values (factory setting).

### 360° camera

#### General notes

The 360° camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that no persons or animals are in the maneuvering range.

#### Overview


The 360° camera surveys the vehicle surroundings and assists you, for example when parking or at exits with reduced visibility.

Further information on the 360° camera can be found in the vehicle Operator's Manual.

#### Settings for the 360° camera

When you activate the **Activation by R gear** function, the image from the 360° camera is displayed when you select reverse gear.

Activating/deactivating using the reverse gear:

- ▶ Press the  button on the Audio 20 control panel.

or

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide ⊙↓ the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **360° Camera**.
- ▶ Select **Activation by R gear**. The function is switched on  or off , depending on the previous status.

#### Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the 360° camera menu: turn the controller and press to confirm. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle exceeds a speed of approx. 30 km/h



## Rear view camera

### General notes

The rear view camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. When maneuvering or parking, make sure that there are no persons, animals or objects in the area in which you are maneuvering.

### Overview


The rear view camera covers the immediate surroundings of the vehicle and assists you when parking.

You can find further information about the rear view camera in the vehicle Operator's Manual.


### Settings for the rear view camera

When you activate the **Activation by R gear** function, the image from the rear view camera is displayed when you select reverse gear.

Activating/deactivating using the reverse gear:

- ▶ Press the  button on the Audio 20 control panel.

or

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **Rear View Camera**.
- ▶ Select **Activation by R gear**. The function is switched on  or off , depending on the previous status.

When you start the vehicle and engage reverse gear, the area behind the vehicle is shown with guide lines in the display. You can find further information about the rear

view camera in the vehicle Operator's Manual.



Audio 20 features ..... 42  
GARMIN® MAP PILOT navigation  
module ..... 42

### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### GARMIN® MAP PILOT navigation module

#### Important safety notes

##### WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

When using GARMIN® MAP PILOT, please observe the legal requirements of the country in which you are currently driving.

Always observe the traffic regulations when driving. Road and traffic rules and regulations always have priority over GARMIN® MAP PILOT driving recommendations.

##### WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.


#### General notes

The SD card box contains a quick guide to GARMIN® MAP PILOT. The GARMIN® MAP PILOT operating instructions are stored on the SD memory card as a PDF file.

GARMIN MAP PILOT can be operated using the controller.

#### SD memory card

► To insert the SD memory card: insert the SD memory card into the multimedia connector unit until it engages. The side with the contacts must face downwards and point towards the slot.

 Ensure that the write protection on the SD memory card is deactivated. To do this, the switch on the side must be pushed in the direction of the contacts and not the LOCK position.

► Follow the steps as instructed; see the vehicle Operator's Manual.

You can obtain digital map and software updates from an authorized Mercedes-Benz Center.

For some countries, digital map and software updates are available as download or SD memory card from <http://shop.mercedes-benz.com/garmin-map-pilot>.

Further information; see the manufacturer's operating instructions.

#### Switching to navigation mode



► Press the **NAVI** button.  
The last navigation display used appears.  
Further information; see the manufacturer's operating instructions.


### Adjusting the volume

During a navigation announcement:

▶ Turn the  control knob.

or

▶ Press the  or  button on the multifunction steering wheel.

 You can set the volume for navigation announcements to be different from the volume of the respective media source.



Audio 20 features .....	46
Important safety notes .....	46
General notes .....	46
Telephone menu overview .....	47
Connecting/disconnecting a mobile phone .....	48
Setting the reception and trans- mission volume .....	52
Using the telephone .....	53
Phone book .....	57
Importing contacts .....	59
Call lists .....	61
Speed dial lists .....	62
Messages (text messages and e- mails) .....	63

### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### Important safety notes

#### WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident. Only operate this equipment when the vehicle is stationary.

If you make a call on your mobile phone while driving, always use hands-free mode. Only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile phone while driving a vehicle.

Bear in mind that at a speed of 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 feet (approximately 14 m) per second.

Excessive levels of electromagnetic radiation may cause damage to your health and the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior antenna.

Therefore, connect your mobile communications equipment to the vehicle's exterior antenna wherever possible.

### General notes

#### Telephony

The Bluetooth® interface on Audio 20 is available for telephony.

If your mobile phone supports the PBAP Bluetooth® profile (**P**hone **B**ook **A**ccess **P**rofile), the contacts are automatically displayed in Audio 20.

You can use the text message and e-mail functions if your mobile phone supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile). Observe the other requirements for the e-mail and text message functions (▷ page 63).

With a suitable mobile phone, you can use the hands-free system and receive vCards via the Bluetooth® interface.

You can obtain more information about suitable mobile phones on the Internet at [www.mercedes-benz-mobile.com](http://www.mercedes-benz-mobile.com).

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

#### Call disconnection while the vehicle is in motion



A call may be disconnected if:

- there is insufficient network coverage in certain areas.
- you move from one transmitter/receiver area (cell) into another and no channels are free.
- you use a SIM card that is not compatible with the network available.



### Operating options

You can operate the telephone by:

- using the controller:
  - turning
  - sliding ←⊙→ or ↑⊙↓
  - pressing
- using the  or  button on the multifunction steering wheel

All descriptions and illustrations in this section refer to Audio 20, unless stated otherwise.

### Function restrictions

You may have to wait before using telephony via Audio 20 in the following situations:

- when the mobile phone is switched off
- if Bluetooth® is switched off on the mobile phone
- if the mobile phone has not logged on to a mobile phone network
- if the Bluetooth® function is switched off in Audio 20

The telephone automatically tries to log on to a network. If no network is available, you may not be able to make a "911" emergency call. If you attempt to make an outgoing call, the **No Service** message will appear for a short while.


### "911" emergency call

The following requirements must be fulfilled for a 911 emergency call:


- a valid and operational SIM card is inserted in the mobile phone
- the mobile phone is switched on
- the PIN has been entered in the mobile phone
- a mobile phone network is available
- the mobile phone is connected to Audio 20 via Bluetooth®



If you cannot make an emergency call, you must arrange rescue measures yourself.

Making an emergency call:

- ▶ Enter the telephone number (▷ page 53).
- ▶ Press .
  - The telephone makes the connection.
- ▶ Wait until the emergency call center answers and describe the emergency situation.

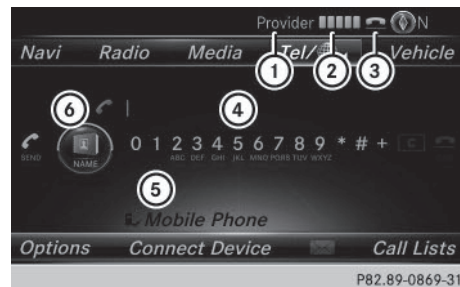

### Telephone menu overview




- ① Mobile phone network provider
- ② Signal strength of the mobile phone network
- ③ Receiver icon  or 
- ④ Telephone menu character bar
- ⑤ Bluetooth® device name of the currently connected mobile phone
- ⑥ To display the phone book

Symbol ② shows the current signal strength of the mobile phone network. If all bars are filled, you have optimum reception.

If no bars are shown, reception is either very poor or there is none at all.


Receiver icon shows whether a call is active/being connected  or not .



### Calling up the telephone menu

- ▶ Press .

### Showing the menu bar

- ▶ Slide  the controller.

If the mobile phone connected supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile), the  menu item is available. Further information on text messages and e-mail (▷ page 63).

If you have an unread text message or e-mail, the  mail symbol is displayed in the status bar. The symbol disappears once you have read the text message or e-mail. The  symbol is displayed as soon as the message memory on the connected mobile phone is full. The symbol disappears once you delete at least one message.

### Connecting/disconnecting a mobile phone

#### Prerequisites

For telephony via the Bluetooth® interface, you require a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above.

#### On Audio 20

- ▶ Activate Bluetooth® (▷ page 28).

#### On the mobile phone

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, if necessary, Bluetooth® visibility for other devices (see the manufacturer's operating instructions). This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).
- ▶ Set the Bluetooth® device name for the mobile phone if necessary.

The device names for all of one manufacturer's products might be identical. To make it possible to clearly identify your mobile phone, change the device name (see the manufacturer's operating instructions). The name can be freely selected.

If the mobile phone supports the PBAP (**P**hone **B**ook **A**ccess **P**rofile) and MAP (**M**essage **A**ccess **P**rofile) Bluetooth® profiles, the following information will be transmitted after you connect:

- Phone book
- Call lists
- Text messages and e-mails

Further information on allowing or suppressing the automatic download of the phone book (▷ page 58).

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

- i** Not all mobile phones available on the market are equally suitable. You can obtain more detailed information about suitable mobile phones and about the connection between the mobile phone and Audio 20 on the Internet at **www.mercedes-benz-mobile.com**.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERcedes (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

- i** Some displays (e.g. the signal strength) depend on the supported version of the Hands-Free Profile.

#### Procedure and general information

#### Authorizing a mobile phone (connecting)

Before using your mobile phone with Audio 20 for the first time, you will need to search for it (▷ page 49) and then authorize it (▷ page 50). Depending on the mobile phone, authorization either takes place by means of Secure Simple Pairing or by enter-

ing a passkey. Audio 20 automatically enables the procedure suited to your mobile phone. You can recognize Secure Simple Pairing by a code which is displayed in Audio 20 and on the mobile phone. You can recognize the passkey system by the fact that you have to enter a code on the mobile phone and in Audio 20. The mobile phone is connected automatically after authorization. Further information about automatically reconnecting authorized mobile phones (> page 51). If Audio 20 is unable to detect your mobile phone, this may be due to your mobile phone security settings. You can also start the search procedure and authorization on the mobile phone (> page 51).


Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be obtained from your authorized Mercedes-Benz Center or via the Internet at <http://www.mercedes-benz.com/connect>.



You can authorize up to 15 mobile phones. Only one mobile phone can be connected to Audio 20 at any one time for telephony.

### De-authorizing (disconnecting) a mobile phone


The connection is terminated automatically if you leave the receiver range of Audio 20 or deactivate Bluetooth® on your mobile phone. If you no longer want the Bluetooth® connection to be established automatically, the mobile phone must be de-authorized (disconnected) (> page 52).
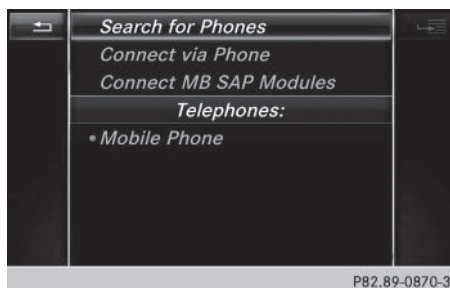
### Searching for a mobile phone



- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Connect Device**: turn the controller and press to confirm. The device list is displayed.
- ▶ To select **Search for Phones**: turn and press the controller. A message is displayed that Bluetooth® must be activated on the mobile phone and must be made visible to other devices.
- ▶ To select **Start Search**: press the controller. The available mobile phones are displayed in the device list.



The duration of the search depends on the number of Bluetooth® telephones within range and their characteristics.

If a new phone is found, it appears in the device list with the  symbol. You can now authorize (connect) the mobile phone found (> page 50).

If the maximum number of authorized devices in the device list is reached, you will be requested to de-authorize a mobile phone (> page 52).

When you call up the device list again, de-authorized devices will be removed from the list. To update the device list, start the search again.

### Symbols in the device list

Sym- bol	Explanation
	New mobile phone found, not yet authorized.
	Mobile phone is authorized, but is not connected.
•	Mobile phone is authorized and connected.

### Authorizing a mobile phone (connecting)

#### Authorization via Secure Simple Pairing

If Audio 20 has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.  
A code is displayed in Audio 20 and on the mobile phone.

#### The code is the same

- ▶ **Audio 20:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to Audio 20 and for the PBAP and MAP Bluetooth® profiles individually. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions). The mobile phone is now authorized and connected to Audio 20. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 52).

#### The code is different

- ▶ **Audio 20:** select **No**.  
The process is canceled. Repeat the authorization.

#### Authorization via passkey entry (access code)

If Audio 20 has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.  
The input menu for the passkey is displayed.  
The passkey is a one- to sixteen-digit number combination which you can choose yourself. Depending on the mobile phone used, you may have to enter a number sequence of four digits or more.
- ▶ **Audio 20:** enter the passkey using the character bar.
- ▶ Select  once all the numbers have been entered.
- ▶ **Mobile phone:** enter the same passkey and confirm your entry. Depending on the mobile phone used, you may have to confirm the connection to Audio 20 and for the PBAP and MAP Bluetooth® profiles individually. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).  
The mobile phone is now authorized and connected to Audio 20. You can now speak using the hands-free system.


To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 52).

If the **Authorization Failed** message appears, you may have entered a different passkey or exceeded the prescribed time limit. Repeat the procedure.

- i** If you wish to re-authorize the mobile phone after de-authorizing it, you can choose another passkey for it.
- i** Mercedes-Benz recommends de-authorization in Audio 20 as well as in the mobile phone (▷ page 52). Subsequent authorization may otherwise fail.

### Establishing the connection from the mobile phone

The Bluetooth® device name of Audio 20 is "MB Bluetooth".

- ▶ **Audio 20:** call up the telephone menu.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Connect Device:** turn the controller and press to confirm. The device list is displayed.
- ▶ To select **Connect via Phone:** turn and press the controller. A message is displayed, stating that you can start the search on your mobile phone.
- ▶ **Mobile phone:** start the search for a Bluetooth® device (see manufacturer's operating instructions). Audio 20 is displayed with the name "MB Bluetooth" in the mobile phone's device list.
- ▶ Select "MB Bluetooth". A prompt appears in the Audio 20 display asking if the mobile phone should be authorized.
- ▶ **Audio 20:** select **Yes**.  
If **No** is selected, the procedure is canceled. If your mobile phone supports Secure Simple Pairing, a code is now displayed on both devices.

### The code is the same

- ▶ **Audio 20:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to Audio 20 and for the PBAP and MAP Bluetooth® profiles individually. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions). The mobile phone is now authorized and connected to Audio 20. You can now speak using the hands-free system.  
To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (> page 52).

### The code is different

- ▶ **Audio 20:** select **No**.  
The process is canceled. Repeat the procedure.

If your mobile phone does not support Secure Simple Pairing, an input menu is displayed for the passkey. The passkey is a one- to sixteen-digit number combination which you can choose yourself. Enter the same passkey on both Audio 20 and the mobile phone and confirm. Depending on the mobile phone used, you may have to confirm the connection to Audio 20 and for the PBAP and MAP Bluetooth® profiles.



### Reconnecting automatically

Audio 20 always searches for the last mobile phone connected.

If no connection can be made to the most recently connected mobile phone, the system searches for the mobile phone that was connected before that one.

### Switching between mobile phones

If you have authorized more than one mobile phone, you can switch between the individual phones.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Connect Device:** turn the controller and press to confirm. The device list is displayed.
- ▶ To select the desired mobile phone: turn and press the controller. The selected mobile phone is connected if it is within Bluetooth® range and if Bluetooth® is activated.

Only one mobile phone can be connected at any one time for telephony. The currently

connected mobile phone is indicated by the • dot in the device list.

- ▶ You can only switch to another authorized mobile phone if you are not currently making a call.

### De-authorizing (disconnecting) a mobile phone

Mercedes-Benz USA, LLC recommends de-authorization in Audio 20 as well as in the mobile phone. Subsequent authorization may otherwise fail.

- ▶ To call up the telephone menu: press the **TEL** button.
  - ▶ To switch to the menu bar: slide **☉↓** the controller.
  - ▶ To select **Connect Device**: turn the controller and press to confirm. The device list is displayed.
  - ▶ To highlight the desired mobile phone in the device list: turn the controller.
  - ▶ To select **☐☐☐**: slide **☉→** the controller.
  - ▶ To select **Deauthorize**: turn and press the controller. A prompt appears, asking whether you really wish to de-authorize this device.
  - ▶ To select **Yes**: turn and press the controller. The mobile phone is de-authorized.
- or
- ▶ To select **No**: turn and press the controller. The process is canceled.

### Displaying connection details

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Connect Device**: turn and press the controller. The device list is displayed.
- ▶ To highlight the desired mobile phone: turn the controller.

- ▶ To select **☐☐☐**: slide **☉→** the controller.
- ▶ To select **Details**: turn and press the controller. The following information concerning the selected mobile phone is shown:
  - Bluetooth® device name
  - Bluetooth® address
  - authorization status
- ▶ **To close the detailed display**: slide **☉→** the controller.


### Setting the reception and transmission volume

Once the mobile phone has been authorized, you can optimize the transmission and reception volume settings. To find out about the best possible settings for your mobile phone, visit [www.mercedes-benz-mobile.com](http://www.mercedes-benz-mobile.com).

You can also obtain more information by calling.



In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

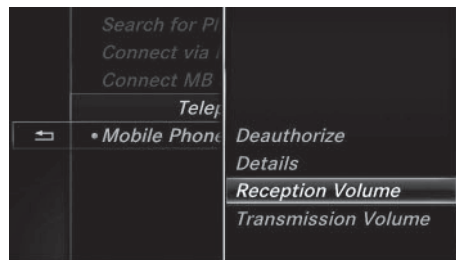In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.



P82.89-0871-31


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Connect Device**: turn and press the controller. The device list appears.

- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Reception Volume** or **Transmission Volume**: turn and press the controller.
- ▶ To select a volume setting: turn the controller.
- ▶ To accept changes: press the controller.

**i** Incorrect settings may have an impact on the quality of calls.

## Using the telephone

### Accepting a call

- ▶ To select **Accept**: press the controller.
- or
- ▶ Press  on the multifunction steering wheel.
- The call is accepted.


Additional functions available during a call (▷ page 54).

Adjusting the call volume (▷ page 52).

Further information about ending a call (▷ page 56).



**i** If the phone number of the caller is transferred, it appears in the display. If the phone number is saved in the phone book, the contact's name is also displayed. If the phone number is not transferred, **Unknown** is shown in the display.

### Rejecting a call

- ▶ To select **Reject**: turn the controller and press to confirm.
- or
- ▶ Press  on the multifunction steering wheel.



### Making a call

#### Using the telephone menu



- ▶ To call up the telephone menu: press the  button.
- ▶ To select all numbers one after the other in the telephone menu: turn and press the controller each time.
- ▶ To select  in the telephone menu: turn and press the controller.  
The call is made.

Further information about ending a call (▷ page 56).

#### Using the number keypad on the upper section of the center console



- ▶ To call up the telephone menu: press the  button.
- ▶ Enter the digits using the number keypad.
- ▶ To select  in the telephone menu: turn and press the controller.  
The call is made.

#### Redial

- ▶ To call up the telephone menu: press the  button.
- ▶ To select  in the telephone menu: turn and press the controller.  
The list of outgoing calls is displayed. The most recently dialed number is at the top.
- ▶ To select an entry and make a call: turn and press the controller.

Further information about ending a call (▷ page 56).

#### Using call lists

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.

- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

Further information about ending a call (▷ page 56).

### Using the phone book

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To select **Name** in the telephone menu: turn and press the controller.
- ▶ Search for and call a contact (▷ page 57).

Further information about ending a call (▷ page 56).

### Using speed dial

#### Option 1

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To highlight a number from the character bar: turn the controller.
- ▶ Press the controller for longer than two seconds. The telephone menu displays the selected entry. The number is dialed.

#### Option 2

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉**↓ the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Speed Dial Preset List**: turn and press the controller. The speed dial list is displayed.
- ▶ To select an entry and make a call: turn and press the controller. The telephone menu displays the selected entry. The number is dialed.

Further information on setting up speed dial (▷ page 62).

Further information about ending a call (▷ page 56).

### Functions available during a call

#### Overview



- ① To add a call (▷ page 54)
- ② Person you are calling
- ③ Symbol for active telephone connection
- ④ To end a call
- ⑤ To switch the microphone on/off (▷ page 55)
- ⑥ To send DTMF tones (not possible with all mobile phones) (▷ page 55)

Other functions:

- Accepting a waiting call (▷ page 56)
- Making a second call (▷ page 54)
- Call waiting (▷ page 55)

Availability depends on the network (only possible in the GSM network) and on the Bluetooth® mobile phone.


#### Adding a call



- ① To add a call




If the mobile phone network provider and the mobile phone support the function, you can make another call during an existing call. The previously active call is held.


- ▶ To select  2: turn and press the controller.
- ▶ Make a call:
  - Using the telephone menu (▷ page 53)
  - Redial (▷ page 53)
  - Using call lists (▷ page 61)
  - Using the phone book (▷ page 53)
  - Using speed dial (▷ page 53)

### Switching the microphone on/off


This function is available in the telephone menu during an active phone call.

Switching off the microphone:

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Microphone Off**: turn and press the controller.

If the microphone is switched off, the  symbol and the **The microphone is off.** message are displayed.

Switching on the microphone:

- ▶ Select **Microphone On**.  
The  symbol disappears. The **The microphone is on.** message is displayed.

### Sending DTMF tones

This function is not supported by all mobile phones.

Answering machines or other devices can be controlled by DTMF tones, e.g. for remote query functions.

- ▶ If you would like to listen to the messages on your answering machine, for example, dial the corresponding number.

Transmitting individual characters:

- ▶ Once a connection has been established to the answer phone, select the desired char-


acters in the telephone menu: turn and press the controller each time.

or

- ▶ Press the corresponding key on the number keypad.  
Every character selected will be transmitted immediately.

### Calls with several participants


#### Switching between calls (call waiting)

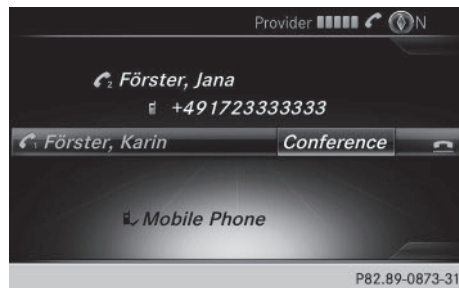



If you make another call, you can switch between the two calls (call waiting). This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

The calls are marked 1 and 2. The active call is highlighted.


#### Switching between the calls

- ▶ Press  on the multifunction steering wheel.


or

- ▶ To select  1 or  2: turn and press the controller.  
The selected call is active. The other call is on hold.

#### Ending the active call

- ▶ To select  in the telephone menu: turn and press the controller.


or

- ▶ Press  on the multifunction steering wheel.  
The other call is still on hold.

- ▶ To activate the call on hold: select **Continue**.  
The call on hold is activated. If you select **Hang Up**, the call on hold is also ended.
- i** On some mobile phones, the call on hold is activated as soon as the active call is ended.

### Conference call

This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions). You can interconnect active and held calls. This permits several parties to hear one another and speak with one another.

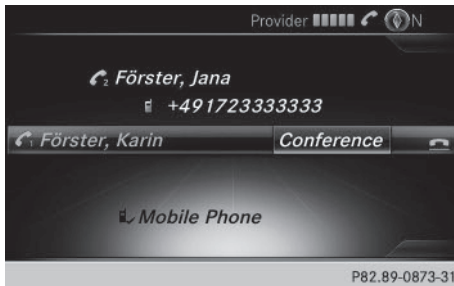

- ▶ Add a call (▷ page 54).
- or
- ▶ Answer an incoming call (▷ page 56).
- ▶ To select **Conference** in the telephone menu: turn and press the controller.  
The new participant is included in the conference call. **Conference** is displayed in the telephone menu.


### Incoming call during an existing call (call waiting)

The call waiting function depends on your mobile phone network provider and your mobile phone. Depending on the mobile phone used, behavior when answering a call may vary (see the manufacturer's operating instructions).

**Call waiting:** if you receive a call while already in a call, a message is shown. You also


hear a tone. You can decide whether to accept or reject the call.

#### Accepting:



- ▶ To select **Accept**: press the controller.
- or
- ▶ Press  on the multifunction steering wheel.  
The incoming call is active. Depending on the mobile phone used, the call which was previously active is put on hold or ended (see the manufacturer's operating instructions). If the call is on hold, you can switch back and forth between the two calls (call waiting) (▷ page 55).

**i** Depending on the mobile phone, you may also be able to accept the incoming call (call waiting) on your mobile phone. This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

#### Rejecting:

- ▶ To select **Reject**: turn the controller and press to confirm.
- or
- ▶ Press  on the multifunction steering wheel.  
The behavior after the call is rejected depends on your mobile phone and mobile phone network provider.  
Option 1: The originally active call is ended and the incoming call is accepted.  
Option 2: Both calls are ended.

### Ending an active call

- ▶ To select  in the telephone menu: turn and press the controller.
- or
- ▶ Press  on the multifunction steering wheel.  
The active call is ended.

## Phone book

### Introduction

The telephone book displays all the contacts. The mobile phone's telephone book is automatically displayed in Audio 20 after connection (default setting). You can deactivate automatic calling up (▷ page 58).

In the telephone book, you can:

- Search for contacts (▷ page 57)
- Store contacts (▷ page 59)
- Delete contacts (▷ page 59)

Further information on importing contacts (▷ page 59).

When you import or save contacts, they will be permanently saved in Audio 20. These contacts will remain there even when you connect Audio 20 to a different mobile phone. You can view these contacts even without a mobile phone.

### Calling up the phone book



- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To select **Name** in the telephone menu: turn and press the controller. If the phone book contains contacts, they will be displayed in alphabetical order. The character bar at the bottom of the display is active. You can now search for a contact (▷ page 57).

Further information on the symbols shown (▷ page 57).

- i** You can also call up the phone book with the multifunction steering wheel; see the separate operating instructions.

### Symbol overview

Symbol	Explanation
	Contact that was saved on Audio 20.
	Contact that was called up from a mobile phone
	Contact imported from the SD memory card or USB device.
	Contact imported via the Bluetooth® interface.

### Searching for a contact

#### Using the character bar




The description in the example uses the Latin character bar.


You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ To select characters: turn the controller and press to confirm. The first contact with the selected first character is highlighted in the phone book.

If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different character **A** and **O** are offered for selection.


- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select  .  
The contacts in the phone book are displayed.
- ▶ To select a contact: turn and press the controller.  
The contact's phone number is displayed.
- ▶ To call the contact: press the controller.

#### Back to the character bar

- ▶ Press the  button repeatedly until the character bar is displayed.

#### Using the number keypad on the upper section of the center console

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ For example, to enter the letter **C**: press the  number key briefly three times in succession.  
The character appears the first time the key is pressed and shows all the available characters. It switches to the next character each time the key is pressed.



#### Displaying the details of a contact

- ▶ Call up the phone book (▶ page 57).
- ▶ Search for and select a contact (▶ page 57).

#### Closing the detailed display

- ▶ To select : slide  the controller.

#### Changing the display and sorting criteria for contacts



- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Display and Sorting**: turn and press the controller.

You have the following options:

- **Last Name, First Name** (default setting)  
The contacts are sorted by surname and displayed with a comma.
- **Last Name First Name**  
The contacts are sorted by surname and displayed without a comma.
- **First Name Last Name**  
The contacts are sorted by first name and displayed without a comma.
- ▶ To select the required option: turn and press the controller.  
The contacts are sorted and displayed according to the selection.

#### Automatically importing contacts from the mobile phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to Audio 20.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Automatically Import Contacts from Phone**: turn and press the controller.  
You can allow  or deactivate  the automatic download. If the function is deactivated, contacts which have already been called up will continue to be displayed.

If the function is deactivated, the contacts can be called up manually:

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Call up Contacts**: turn the controller and press to confirm.  
The contacts are called up.

### Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 57).

- ▶ Call up the phone book (▷ page 57).
- ▶ Search for and highlight a contact from the mobile phone (▷ page 57).
- ▶ To select : slide the controller.
- ▶ To select **Save**: turn and press the controller.  
The contact has now been saved. The contact is identified by the symbol in the phone book.

**i** Saving the contact data on Audio 20 does not change the contacts on the mobile phone. If automatic calling up of phone contacts is activated, Audio 20 displays the copy with the changed data.

### Deleting a contact

You can delete contacts that have been saved or imported in Audio 20.

- ▶ Call up the phone book (▷ page 57).
  - ▶ Search for and highlight a contact in the phone book (▷ page 57).
  - ▶ To select : slide the controller.
  - ▶ To select **Delete**: turn and press the controller.  
A prompt appears asking whether the contact should be deleted.
  - ▶ To select **Yes**: turn and press the controller.  
The phone number is deleted.
- or
- ▶ To select **No**: turn and press the controller.  
The process is canceled.

### Closing the phone book

- ▶ To select from the character bar: turn the controller and press to confirm.
- or
- ▶ Press the button.

### Importing contacts

#### Information and requirements


Contacts can be imported as vCards (vcf files). A vCard is an electronic business card. A memory card, USB device or a Bluetooth® connection can be used for importing.

**i** Up to 2000 entries can be imported into the phone book. A message notifies you when the maximum number is reached. In order to be able to then import new contacts, you have to delete existing contacts (▷ page 59).

Source	Prerequisites
Memory card	The SD memory card is inserted. It contains importable contact details.

USB device	The USB device is inserted into the USB port. It contains importable contact details.
Bluetooth® connection	If the sending of vCards is supported via Bluetooth®, vCards can be received on mobile phones or net-books, for example.  Bluetooth® must be activated in Audio 20 and on the respective device (see the manufacturer's operating instructions).


### Importing from the memory card or USB device


Contacts imported from the memory card or from a USB device are identified by the  symbol.

The following conditions must be fulfilled in order to import vCards:

- vCards (vcf files) may be located in the main directory or in folders. Audio 20 allows you to select the relevant folders directly.
- vCards must have the file extension ".vcf".


**i** Audio 20 supports vCards in versions 2.1 and 3.0.

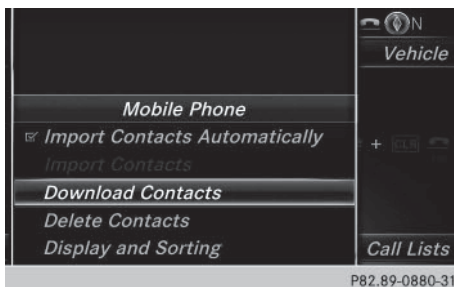


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide  the controller.

- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Memory Card, USB 1 or USB 2**: turn and press the controller.

### Receiving vCards via Bluetooth®

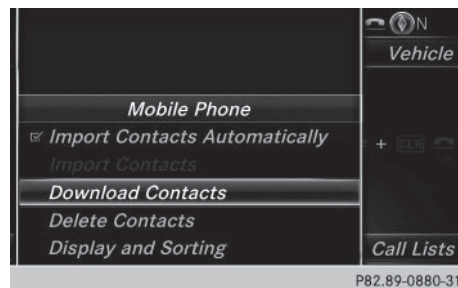

### Audio 20


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Bluetooth Device**: turn and press the controller.


If Audio 20 is connected to a mobile phone, all connections are terminated. vCards can now be received by a device (PC, mobile phone) via Bluetooth®.

### External device

- ▶ Start the data transfer (see the manufacturer's operating instructions).  
The number of vCards received is displayed in Audio 20.



**Audio 20**

- ▶ To end reception: press the controller or the  button.  
If a mobile phone was connected, the connection to the mobile phone is established again.

vCards received via Bluetooth® are identified by the  symbol in the phone book.

- i** If you switch to another main function, e.g. navigation, while receiving vCards, the reception of vCards will be terminated.

**Deleting imported contacts**

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Contacts**: turn and press the controller.
- ▶ Select one of the following options:
  - **Internal Contacts**
  - **Downloaded from Phone**
  - **Imported from Storage Device**
  - **Imported from Bluetooth Devices**
 Turn and press the controller.
- ▶ To select **Yes**: turn and press the controller. The contacts are deleted.

or

- ▶ To select **No**: turn and press the controller. The process is canceled.

- i** If automatic calling up of the contacts is deactivated (> page 58), the **Downloaded from Phone** option is available.

**Call lists****Introduction**

If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile



phone are displayed in Audio 20. When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If your mobile phone does not support the PBAP Bluetooth® profile, Audio 20 generates its own call lists. These are not the same as the call lists in your mobile phone.



The Call list option is not available unless a mobile phone is connected to Audio 20.

- i** If you connect a different mobile phone to Audio 20, the call lists from the new mobile phone are displayed.


**Opening the call list and selecting an entry**


- ① Date and time (if available)
- ② Telephone number of the highlighted entry and symbols (if assigned)
- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight an entry: turn the controller.
- ▶ To make a call: press the controller.

### Closing the call list

- ▶ To select : slide  the controller.






or

- ▶ Press the  button.  
The list is closed.

- i** You can also call up the list of dialed calls by pressing the  button when the telephone menu is shown. In this case, the list will only show names or phone numbers.



### Displaying details from a list entry

Abbreviated list entries can also be shown in full.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.  
The relevant list is displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.  
The details are displayed.
- ▶ To go back to the list: slide  the controller repeatedly until the list is highlighted.

### Speed dial lists





#### Setting up

- ▶ Call up the phone book (▶ page 57).
- ▶ Search for and select a contact (▶ page 57).
- ▶ To highlight the telephone number: turn the controller.
- ▶ To select : slide  the controller.



- ▶ To select **Assign Speed Dial Preset**: turn and press the controller.  
The speed dial list is displayed.
- ▶ To select a memory position for the speed dial: turn and press the controller.  
If you select an entry that already exists in the speed dial list, this is overwritten with the new entry.  
The phone number has been saved as a speed dial.

### Deleting



#### Deleting a speed dial preset

- ▶ To call up the telephone menu: press the  button.
  - ▶ To call up the menu bar: slide  the controller.
  - ▶ To select **Call Lists**: turn and press the controller.
  - ▶ Select **Speed Dial Preset List**.  
The speed dial list is displayed.
  - ▶ To highlight the memory position you want to delete: turn the controller.
  - ▶ To select : slide  the controller.
  - ▶ To select **Delete Speed Dial Preset**: turn and press the controller.
  - ▶ To select **Yes**: turn and press the controller.  
The speed dial preset has been deleted.
- or
- ▶ To select **No**: turn and press the controller.  
The process is canceled.

#### Deleting all speed dial presets


- ▶ To call up the telephone menu: press the  button.
- ▶ To call up the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.  
The speed dial list is displayed.




- ▶ To select : slide  the controller.
  - ▶ To select **Delete All Speed Dial Presets**: turn and press the controller.
  - ▶ To select **Yes**: turn and press the controller. All speed dials are deleted.
- or
- ▶ To select **No**: turn and press the controller. The process is canceled.

## Messages (text messages and e-mails)

### General notes

New messages are identified by an audible signal and the  symbol in the Audio display. Once you have read all the messages, the symbol is no longer displayed.

Audio 20 displays the 100 newest text messages.

The  symbol is displayed when the mobile phone's message memory is full. The symbol is no longer displayed if you delete messages.

### Prerequisites

To use the message functions, the connected mobile phone must support the MAP Bluetooth® profile. When connecting the mobile phone, you may have to accept the prompt for the MAP Bluetooth® profile.

With some mobile phones, some settings still have to be made after connecting to Audio 20 (see the manufacturer's operating instructions). The messages are displayed the next time you connect to Audio 20.

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).

To be able to read e-mails in Audio 20, the e-mail account first needs to be configured (▶ page 64).

### Some mobile phones with the MAP Bluetooth® profile:

- only show new text messages.
- do not support deleting of text messages.
- do not support the e-mail function.
- do not send messages in a locked status.

Not all mobile phones available on the market are equally suitable. You can obtain further information about settings and supported functions of Bluetooth®-capable mobile phones on the Internet at

<http://www.mbusa-mobile.com>.


You can also obtain more information by calling.




In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).


In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

### Settings

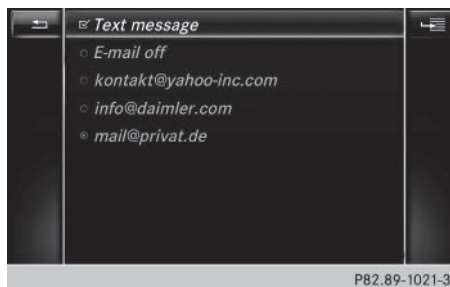

#### Calling up the settings menu for messages





- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Settings**: turn and press the controller.  
The text message settings and the available e-mail accounts of the connected mobile phone will be displayed.

### Configuring the text messages displayed

- ▶ Call up the settings menu for messages (▷ page 63).
- ▶ To highlight **Text Message**: turn the controller.
- ▶ To select : slide  the controller. A menu with the following options is shown:
  - **All Messages**  
All the messages are displayed.
  - **New Messages**  
Only the messages that are new on the mobile phone are displayed.
  - **Off**  
The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.

### Configuring the e-mails displayed

- ▶ Call up the settings menu for messages (▷ page 63).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Automatic Download**: turn and press the controller.  
A menu with the following options is shown:
  - **All Messages**  
All the messages are displayed.
  - **New Messages**

Only the messages that are new on the mobile phone are displayed.

- **Off**

The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.

- ▶ To select the required option: turn and press the controller.



### Configuring an e-mail account

- ▶ Call up the settings menu for messages (▷ page 63).
- ▶ To select an e-mail account: turn and press the controller.  
The e-mail account is now configured. E-mails can now be received in Audio 20.

### Deactivating the e-mail function

- ▶ Call up the settings menu for messages (▷ page 63).
- ▶ To select **E-Mail Off**: turn and press the controller.  
E-mail reception is deactivated.

### Changing the displayed name of the e-mail account

- ▶ Call up the settings menu for messages (▷ page 63).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Own E-Mail Address**: turn and press the controller.  
The input menu for entering your own e-mail address is displayed.

**Downloading messages manually**

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Download**: turn and press the controller.

**Downloading text messages and e-mails from the phone**

- ▶ Select **From the Phone**.  
The messages are downloaded. If you have selected **Automatic Download** in the e-mail settings, manual downloading is not possible.

**Updating from the e-mail server by the mobile phone**

- ▶ Select **From the E-Mail Server**.  
The e-mails in the mobile phone are updated.  
This function is not supported by all mobile phones.

**Reading messages**

**In the message menu**


The message menu contains all the unread text messages and e-mails. If the corresponding folder is called up, the messages are displayed sorted by text messages and e-mails.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed with the unread messages.

- ▶ To select the message: turn and press the controller.  
The message text is displayed.
- ▶ **To close the message text**: press the **☐←** button.

If you want to read messages that have already been read again, you have to call up the corresponding message folder (▷ page 65).

**In the message folder**

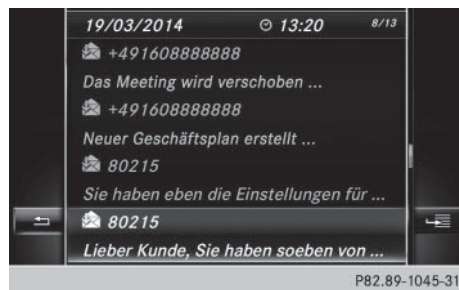








- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **☒**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller.  
The selected folder is displayed.
- ▶ To select the message: turn and press the controller.  
The message is displayed.
- ▶ To scroll through the message or select phone numbers in the text: turn the controller.  
The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ **To close the message text**: press the **☐←** button.

Depending on the mobile phone used, the sub-folder function may be available.

### Displaying details and phone numbers

Audio 20 can also show the full details instead of the shortened sender display.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The selected folder is displayed.
- ▶ To highlight the desired message: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller. The detailed view appears.
- ▶ **To close the detailed display**: slide  the controller.

### Calling a text message sender

- ▶ Display the message (> page 65).
- ▶ To call up a menu: press the controller.
- ▶ To select **Call Sender**: turn and press the controller. The call is made.

### Using a phone number in the text



Numbers in text messages that are highlighted can be used.

- ▶ To select a usable telephone number while the message is displayed: turn the controller.
- ▶ To select **Use**: press the controller.
- ▶ To select **Call**: turn and press the controller. The call is made.

**i** It is possible that a highlighted numerical sequence may not contain a telephone number.

**i** You can use the "New entry" or "Add no." functions to save this telephone number or to add it to an existing entry.

### Deleting messages

- ▶ Call up the message folder (> page 65).
  - ▶ To select the message: turn and press the controller.
  - ▶ To select : slide  the controller.
  - ▶ To select **Delete**: turn and press the controller.
  - ▶ To select **Yes**: turn and press the controller. The message is deleted from the mobile phone and Audio 20.
- or
- ▶ To select **No**: turn and press the controller. The process is canceled.

**i** This delete function is not supported by all mobile phones. The **Delete failed.** message then appears.

Audio 20 features .....	68
Important safety notes .....	68
General notes .....	68
Conditions for access .....	69
Setting up an Internet connection (Canada) .....	69
Establishing/ending the connection .....	73
Google™ local search .....	74
Destination/route download .....	75
Weather forecast .....	78
Further Mercedes-Benz Apps .....	80
Internet radio .....	81
Web browser .....	82

### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### Important safety notes

#### WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are driving when operating the system.

### General notes

#### Connection difficulties while the vehicle is in motion

The connection may be lost if:

- the mobile phone network coverage is insufficient
- the vehicle has moved into a mobile phone cell with no free channels
- the SIM card used is not compatible with the network available

#### Function restrictions (Canada)

You will not be able to use the Mercedes-Benz Apps and Internet connection, or will no longer be able to use them, or may have to wait before using them, in the following situations:

- when the mobile phone is switched off
- if your mobile phone has not been enabled for Internet access
- if the Bluetooth® function is switched off on Audio 20 and the desired phone is to be connected via Bluetooth®
- if the Bluetooth® function is switched off on the mobile phone and the phone is supposed to be connected via Bluetooth®
- if neither the mobile phone network nor the mobile phone allow simultaneous use of a phone and an Internet connection
- if the mobile phone has not been enabled for Internet access via Bluetooth®

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- i** It is possible that you may not be able to receive calls when an Internet connection is active. This depends on the mobile phone and the mobile phone network used.

### Conditions for access

**USA:** to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access. Take note of the connection priorities. An emergency call has the highest priority. When a service call, e.g. a breakdown service call or the MB Info Call, is active, an emergency call can still be initiated. A service call, on the other hand, has priority over a current Internet connection. Therefore, you cannot establish an Internet connection during a service call.

**Canada:** a mobile phone must be connected via Bluetooth® (> page 48) with Audio 20. Furthermore, you need a valid mobile service contract with a data option, which is used to calculate the associated connection costs.

#### Conditions for a Bluetooth® connection:

- The mobile phone supports at least one of the Bluetooth® profiles DUN (Dial-Up Networking) or PAN (Personal Area Network).

The Bluetooth® profiles DUN and PAN enable the Internet connection of the mobile phone to be made available to the system.

The terms of use are shown when the system is used for the first time and then once a year thereafter. Only read and accept the terms of use when the vehicle is stationary.

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- i** The availability of individual Mercedes-Benz Apps may vary depending on the country.



### Setting up an Internet connection (Canada)

#### Procedure and general information


**USA:** to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access. No further settings are required.

**Canada:** in order to set up a mobile phone for Internet access, your mobile phone must be connected via Bluetooth® (> page 48) to Audio 20. If you are using Internet access for the first time, you must enable the connected mobile phone for Internet access (> page 69). If the connected mobile phone supports the Bluetooth® PAN profile, you do not need to make additional settings. The Internet connection is established. If the connected mobile phone does not support the named Bluetooth® profile, predefined (> page 70) or manual access data (> page 70) must be set.

#### Enabling the mobile phone for Internet access

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑**  the controller.
- ▶ To select **TEL/** : press the controller.
- ▶ To select **Internet:** turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙** **↓** the controller.
- ▶ To select **Settings:** turn and press the controller.

- ▶ To select **Configure Internet Settings**: turn and press the controller. The device list is displayed.
- ▶ To select **Search for Internet Devices**: turn and press the controller. Mobile phones are displayed that:
  - are connected with Audio 20
  - fulfill the conditions for the Internet functions
  - have not yet been set up for the Internet function

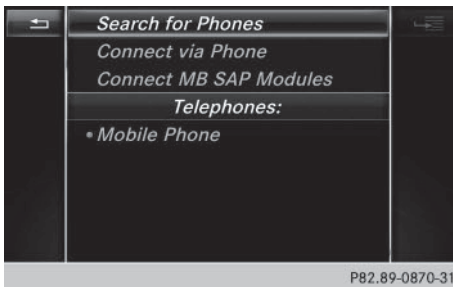

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. If the mobile phone supports the Bluetooth® PAN profile, Internet access is set up. You can use the Internet functions. If the connected mobile phone does not support the named Bluetooth® profile, predefined (▷ page 70) or personalized access data (▷ page 70) must be set.

#### Setting access data of the mobile phone network provider

##### Selecting the predefined access data of the mobile phone network provider

- ▶ To select **Predefined Settings**: turn and press the controller. A list of countries appears.
- ▶ To select **Confirm Settings**: turn and press the controller. If the data is not correct, you can edit the settings (▷ page 72).

If the mobile phone network provider provides multiple access data options, the relevant access data still has to be selected. This depends on the data package used, for example.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 73).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

##### Manually setting the access data of the mobile phone network provider

- ▶ To select **Manual Settings**: turn and press the controller. An overview of the provider settings appears.
- ▶ Set access data (▷ page 71).
- ▶ To confirm settings: select **Confirm Settings** and turn and press the controller.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 73).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.



**Setting access data**

Set the access data in accordance with your data package. You can contact your mobile phone network provider to obtain the precise access data.


**Explanation of the access data**

Input field	Meaning
Phone Number:	Access number for establishing the connection The access number depends on the mobile phone used. For GSM/UMTS mobile phones, *99**1# is used as a standard.
Access Point:	APN network access point (Access Point Name) You can obtain this information from your mobile phone network provider. Entry is not necessary for all mobile phone network providers and mobile phones.
PDP Type:	Internet protocol used. You can obtain this information from your mobile phone network provider.
User ID:	The user identification can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.
Password:	The password can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.

Input field	Meaning
Auto DNS:	Automatic allocation of DNS servers is activated. If the function is deactivated, the DNS server addresses must be entered manually. DNS (Domain Name Service)
DNS1: DNS2:	Fields for entering the DNS server addresses manually. The address can be obtained from your mobile phone network provider.

**Managing existing access data**


**Calling up the device list**

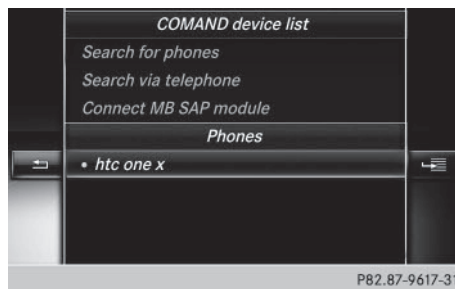



- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.

- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. The device list is displayed.
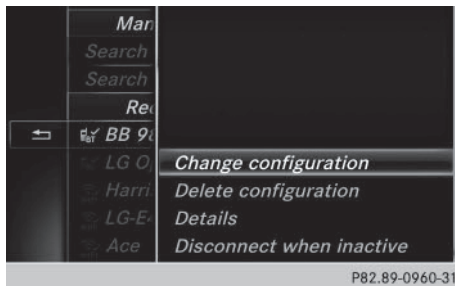
### Editing the access data



The mobile phone must be connected with the system for the access data to be changed. When the Internet connection is active, you cannot edit or delete the access data of the currently set mobile phone network provider.



- ▶ Call up the device list (▷ page 71).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Change Configuration**: turn and press the controller.
- ▶ Select **Predefined Settings** or **Manual Settings**.

The provider settings are displayed.

In order to edit the access data of the mobile phone network provider you have two options:

- Option 1: select the predefined access data of the mobile phone network provider (▷ page 70).
- Option 2: manually set the access data of the mobile phone network provider (▷ page 70).


### Canceling Internet access permissions for a mobile phone

- ▶ Call up the device list (▷ page 71).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete Configuration**: turn and press the controller. A prompt appears asking whether you wish to delete the Internet configuration.
- ▶ To select **Yes**: turn and press the controller. The Internet access permission for the mobile phone is now canceled. The mobile phone can now no longer be used by the system for Internet functions.



or

- ▶ To select **No**: turn and press the controller. The process is canceled.
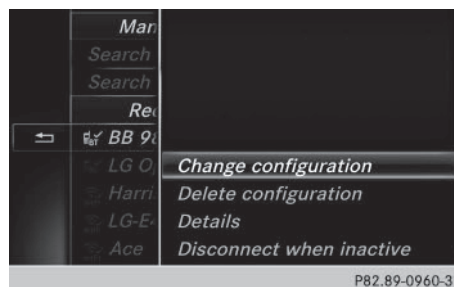
### Setting automatic disconnection of the Internet connection



If a preset time has elapsed during which the Internet functions have not been used, the Internet automatically disconnects.

- ▶ Call up the device list (▷ page 71).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.

- ▶ To select **Disconnect Automatically When Inactive**: turn and press the controller.
- ▶ To select **5 Minutes, 10 Minutes, 20 Minutes** or **Never**: turn and press the controller.

## Establishing/ending the connection

### Establishing the connection

Read the conditions for establishing a connection (▶ page 69).

A connection can be established by:

- entering a web address
- calling up the Mercedes-Benz mobile website
- calling up a Mercedes-Benz App
- calling up a favorite
- calling up the Internet radio

### Ending the connection

- ▶ Press **Cancel** in the connections window.

### Connection status



- ① Display of existing connection and signal strength of the mobile phone network

In most cases, the current connection status is then shown in the status bar when you switch to another main function.

### Detailed connection status

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **↓** the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Connection Status**: turn and press the controller.  
The following information is displayed:
  - the volume of transferred data
  - connection status
  - the device name of the mobile phone
  - name of provider

### Ending the connection

**USA:** you cannot cancel the connection yourself. The Internet connection is automatically terminated if the system does not recognize any user input within a five-minute time period.


#### Canada:

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **↓** the controller.
- ▶ To select the scissors symbol: turn and press the controller.

If the mobile phone Internet connection is disconnected, Audio 20 tries to reconnect. You should therefore always close the connection on Audio 20.

## Google™ local search

### Calling up Local Search

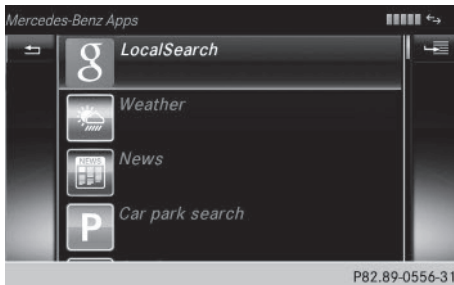


You do not need a Google™ account to use Local Search.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Local Search**: turn and press the controller.

Further information on how to enter the search position and search term (▶ page 74).

- i** You will first need to register Audio 20 before you can use the Internet functions. To do so, you have to enter your name and postal address once in the vehicle and confirm the general terms and conditions.

### Entering a search position and search term

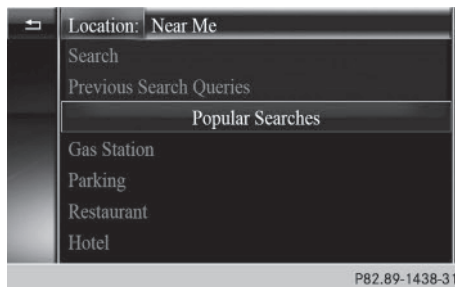

- ▶ Call up Local Search (▶ page 74).
  - ▶ To enter the search position: press the controller. The following options are available:
    - **Nearby**  
Searches for destinations near the current vehicle position
    - **In the Vicinity of the Destination**  
You can search for destinations in the vicinity of the destination if route guidance is active.
  - ▶ To select the search position: turn and press the controller.
  - ▶ To select **Search**: turn and press the controller. The input menu for the search term is displayed.
  - ▶ Enter characters using the controller or the number keypad.
  - ▶ To complete the entry and start the search, select **OK**: turn and press the controller. The search results are displayed.
  - i** Google™ determines how the search results are sorted; this is not necessarily based on the shortest distance.
- Further information on how to make use of a search result (▶ page 75).

### Using search results

- ▶ To select a search result: turn and press the controller.

The following options are available:

- **Details**

The address of the selected entry is displayed.

- **Set as Destination**

The navigation is called up. You can use the search result as the destination for route calculation. The search result is immediately stored in the **From Previous Destinations** memory. You can take the destination from this memory and save it permanently in the contacts.

- **Call**

The telephone menu is called up and a call is activated. If there is no phone number available, the menu item cannot be selected.

- **Google Street View**

Google Street View™ is called up. If no Google Street View™ information is available, a corresponding message appears.

- **Panoramio by Google**

You see pictures of places worth seeing in the vicinity of the search result.

- ▶ To select the option: turn and press the controller.

### Popular searches



P82.89-1438-31

- ▶ Call up Local Search (▷ page 74).
- ▶ To select a search position, e.g. **In the Vicinity of the Destination**: turn and press the controller.
- ▶ To select search queries in the **Popular Searches** section: turn and press the controller. The search results are displayed.

### Search history

You can use this function if search queries have already been carried out.

- ▶ Call up Local Search (▷ page 74).
- ▶ To select the search position, e.g. **At current location**: turn and press the controller.
- ▶ To select **Search history**: turn and press the controller. The most recent search queries are displayed.

### Destination/route download

#### Prerequisites

To download navigation locations you need a Google™ account and your vehicle identification number. Further information about the vehicle identification number (VIN) (▷ page 78).

**USA: to download navigation locations, the mbrace system must be**

- activated
- operational
- activated for the services of the system and for Internet access

#### Procedure and general information

Sign into your Google™ account on the Internet. Use the Google Maps™ website to send the destination to a server (▷ page 76).

Using the **Download POI** App, the destination is displayed in the vehicle (▷ page 76).

The destination can be:


- used for route guidance (▷ page 77)
- called up (▷ page 77)
- deleted from the server (▷ page 77).

### Sending destinations to the server

- ▶ Sign into your Google™ account.
- ▶ Call up the Google Maps™ website.
- ▶ Enter a destination.
- ▶ Click "More" at the destination.
- ▶ Click "Send".
- ▶ Enter the corresponding information in the boxes shown.
- ▶ Select "Send to car".
- ▶ Select Mercedes-Benz as the vehicle brand.
- ▶ Enter the mbrace e-mail address or the vehicle identification number.  
Further information about the vehicle identification number (▷ page 78).
- ▶ Click "Send".  
The destination is sent to the server.

The availability of the destination/route download function is country-dependent.

### Displaying destinations in the vehicle

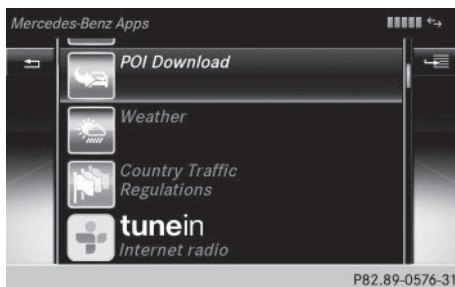

P82.89-0576-31

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Download POI**: turn and press the controller.  
Available destinations are shown in the list.
- ▶ To select and download a destination: turn and press the controller.
- ▶ To exit destination download: select **Close**.


Further information on how to use the destination for route guidance (▷ page 77).

Further information on deleting the destination (▷ page 77).

You can save up to 50 destinations for your vehicle on the server and display these in the list. If you send further destinations to the server, the oldest entries are deleted from the list.



### Using destinations
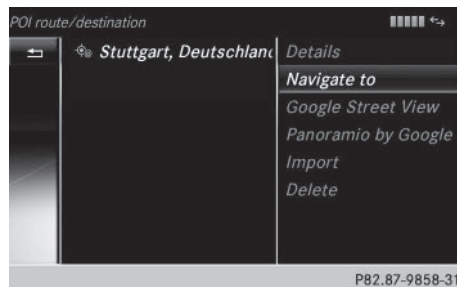
#### Displaying details






P82.87-9858-31

- ▶ Display the destination in the vehicle (▷ page 76).
- ▶ To highlight a destination: turn the controller.


- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.  
The destination address is shown.
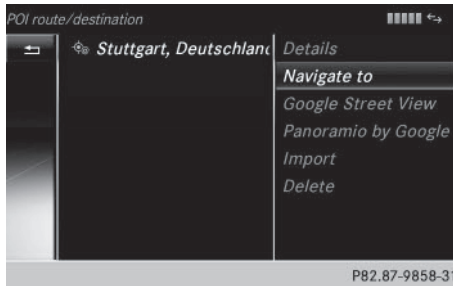
### Using a destination for route guidance





- ▶ Display the destination in the vehicle (▷ page 76).
- ▶ To highlight a destination: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Set as Destination**: turn and press the controller.  
You then switch to navigation mode and can start route calculation.  
The destination is entered in the list of last destinations.
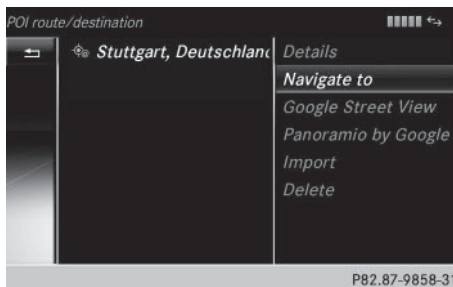
### Calling up the destination




You can use the function if:



- a mobile phone is connected (▷ page 48)
- the destination address contains a telephone number

- ▶ Display the destination in the vehicle (▷ page 76).
- ▶ To highlight a destination: turn the controller.
- ▶ To select : slide  the controller.
- ▶ Select **Call**.  
You then switch to the telephone function and make the call (▷ page 53).

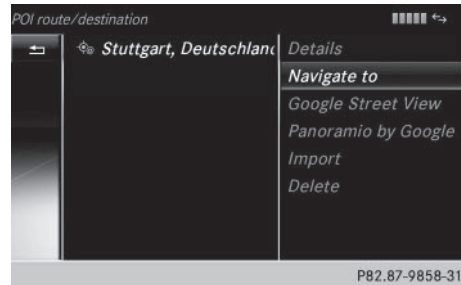
### Deleting a destination from the server



Destinations on the server are automatically deleted after seven days.

- ▶ Display the destination in the vehicle (▷ page 76).
  - ▶ To highlight a destination: turn the controller.
  - ▶ To select : slide  the controller.
  - ▶ Select **Delete**.  
A prompt appears asking whether the destination should be deleted.
  - ▶ To select **Yes**: turn and press the controller.  
The phone number is deleted.
- or
- ▶ To select **No**: turn and press the controller.  
The process is canceled.

### Displaying the vehicle identification number (VIN)

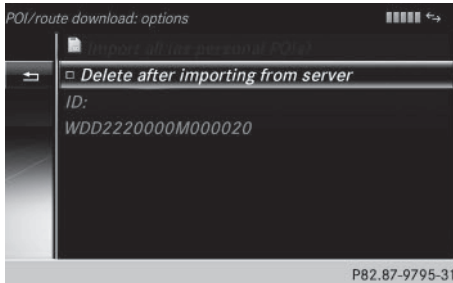

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** **⊙** the controller.
- ▶ To select **TEL/** **⊕**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To select **Download POI**: turn and press the controller.
- ▶ To select **☰**: slide **⊙** **→** the controller.  
The vehicle identification number is displayed.

#### Exiting a menu

- ▶ Press the **⏪** button.

## Weather forecast

### Introduction

You can call up the weather forecasts for a location of your choice. The weather forecast can be displayed in an information chart for the current day or as a 5-day forecast. Alternatively, the weather forecast can be displayed in a weather map.

### Calling up the weather forecast

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** **⊙** the controller.
- ▶ To select **TEL/** **⊕**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ Select **Weather**.

### Information chart overview

- ▶ Call up the weather forecast (▷ page 78). The following information is displayed:
  - the time when the weather report was updated
  - the current temperature
  - information on the weather (e.g. cloudy, rain)
  - the maximum daytime temperature
  - the minimum daytime temperature
  - the probability of rain
  - the forecast for the current day (three time intervals)

### Switching to the 5-day forecast

- ▶ To select **Current**: turn and press the controller.  
A menu appears.
- ▶ Select **5-Day**.  
The information chart displays the forecast for the next five days in the currently selected location.

### Returning to the current weather

- ▶ Select **5-Day**.  
A menu appears.
- ▶ Select **Current**.  
The information chart shows the current forecast at the currently selected location.



### Displaying detailed information

- ▶ Select **Current**.  
A menu appears.
- ▶ Select **Info**.  
The information chart shows detailed information for the selected area.

#### Selecting a location from the information chart

- ▶ Call up the weather forecast (▷ page 78).
- ▶ To select **Location** in the menu: turn and press the controller.  
A menu with the following options is shown:
  - **Current Position**
  - **Near Destination**  
You can select **Near Destination** if the route has been calculated. The menu item is otherwise grayed out.
  - **Other City**
- ▶ To select the required option: turn and press the controller.  
If **Current Position** or **Near Destination** has been selected, the weather forecast for the selected option is displayed.  
If **Other City** has been selected, you need to make more entries.

### Selecting another location

- ▶ Enter the search area.  
The information chart with the weather forecast appears when the search area has been entered.

#### Weather map overview

##### Calling up the weather map

- ▶ Call up the weather forecast (▷ page 78).  
The information chart is displayed (default setting).
- ▶ To select **Map**: turn and press the controller.  
The weather map is displayed.

### Moving the weather map

- ▶ Slide ←⊙→, ↑⊙↓ or ↻⊙↻ the controller.  
The weather map is shifted in the corresponding direction.

### Changing the scale

- ▶ Turn the controller.
- ⓘ The data is downloaded again from the server for these functions. This can delay the display of the weather map.

### Displaying the information chart for the selected location

- ▶ To call up a menu: press the controller.
- ▶ To select **Weather Table**: turn and press the controller.  
The information chart displays the current weather for the selected location.

#### Memory functions

##### Saving a location

You can save locations that are called up frequently in ten preset positions (0, 1 - 9).

- ▶ Select a location from the information chart (▷ page 79)
- ▶ To select **Location** in the menu: turn and press the controller.
- ▶ Select **Presets**.
- ▶ To select a preset and save a location: turn and press the controller.  
When the location is saved, the number of the selected preset comes before the name of the place in the caption.

##### Displaying a saved location

- ▶ To select **Location** in the information chart: turn and press the controller.
- ▶ Select **Presets**.
- ▶ Select desired preset.  
The information chart appears and displays the weather information.


## Further Mercedes-Benz Apps

### General notes

To be able to use Mercedes-Benz Apps, you first have to register. To do so, you have to enter your name and postal address once in the vehicle and confirm the general terms and conditions. A message to this effect appears the first time you call up the online and Internet functions.

For individual Mercedes-Benz Apps, it may be necessary to pay license fees before using. Use is then limited to a certain period of time. License fees must be paid again for use beyond this time period.

### Mercedes-Benz Mobile Website

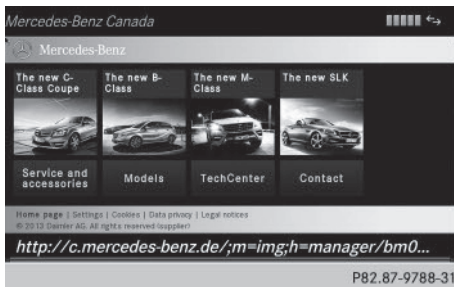

Connecting to the Internet: (▷ page 73)

The online functions contain the Mercedes-Benz Mobile Website as a predefined favorite.

- ▶ Press the **TEL** button.  
The last function called up appears.
- ▶ Select **TEL/** in the main function bar by sliding **↑**, turning and pressing the controller.  
A menu appears.
- ▶ To select **Internet**: turn the controller and press to confirm.  
The menu for the Internet functions appears.
- ▶ Select the **Mercedes-Benz Mobile Website** menu.  
The Mercedes-Benz home page appears.

**i** You cannot delete the **Mercedes-Benz Mobile Website** menu.

### Calling up Mercedes-Benz Apps

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **TEL/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.  
The available **Mercedes-Benz Apps** are displayed.
- ▶ To select the desired app: turn and press the controller.

Additional Mercedes-Benz Apps can be purchased on the Mercedes-Benz website. You can find further information at:

**<http://apps.mercedes-benz.com/apps/>**





The available features are country-dependent.

### Closing Mercedes-Benz Apps

- ▶ Press the **←** button.  
The Internet menu appears.
- or
- ▶ Press the **←** button for longer than two seconds.  
The Mercedes-Benz Apps menu or the Internet menu appears.

### Resetting adjustments

With the reset function, all Mercedes-Benz Apps settings are reset to the factory settings.

- ▶ To call up the telephone menu: press the **TEL** button.
  - ▶ To switch to the main function bar: slide **↑**  the controller.
  - ▶ To select **TEL/** : press the controller.
  - ▶ To select **Internet**: turn and press the controller.  
The menu with the Internet functions is displayed.
  - ▶ To select **Mercedes-Benz Apps**: turn and press the controller.  
The available **Mercedes-Benz Apps** are displayed.
  - ▶ To select : slide  **→** the controller.
  - ▶ To select **Reset**: turn and press the controller.  
A prompt appears asking whether you really wish to reset.
  - ▶ To select **Yes**: turn and press the controller.  
The settings are reset.
- or
- ▶ To select **No**: turn and press the controller.  
The process is canceled.

## Internet radio



### General notes

A good Internet connection is required for error-free audio data transmission. Connecting your mobile phone to the vehicle's exterior antenna via the phone bracket ensures the best possible reception.

- i** Bear in mind that a relatively large volume of data can be transmitted when using Internet radio. An average 128 kbit/s data transfer rate can transfer 56 MB of data in one hour.  
The data transfer rate of a station is displayed while receiving data.

### Calling up the Internet radio



- ▶ To call up the telephone menu: press the **TEL** button.
  - ▶ To switch to the main function bar: slide **↑**  the controller.
  - ▶ To select **TEL/** : press the controller.
  - ▶ To select **Internet Radio**: turn and press the controller.  
The Internet radio menu appears.
- i** You can also call up the Internet radio directly in radio mode (▶ page 89) or in the Mercedes-Benz Apps (▶ page 80).


### Searching for stations

- ▶ Call up the Internet radio (▶ page 81).
  - ▶ To select **Search** in the Internet radio menu: turn and press the controller.  
A list with search options appears.
  - ▶ Select the desired search option.
- i** For example, as a search option you can set an Internet radio station that is near to your navigation destination.

### Connecting to a station


- ▶ Search for a station (▶ page 81).  
The connection is established automatically.

Establishing a connection manually:


- ▶ To select  in the Internet radio menu: turn and press the controller.  
The connection is established.


If the connection is interrupted, the system will attempt to restore the connection automatically. If the connection can't be restored after three attempts, playback will stop.

Manually re-establishing a connection:

- ▶ Select  again in the Internet radio menu.

Ending data transfer:


- ▶ Select  in the Internet radio menu.
- or
- ▶ Change to another audio source, for example [Media](#).

If you change to a main function that is not an audio source, e.g. navigation, the data connection remains on. You can continue listening to the set station. Pressing the  button takes you back to Internet radio.


#### Saving a station as a favorite

- ▶ Call up the Internet radio (▷ page 81).
- ▶ To select [Favorites](#): turn and press the controller.
- ▶ Select [Save ... as Favorite](#).  
The set station is saved as a favorite.

#### Further options

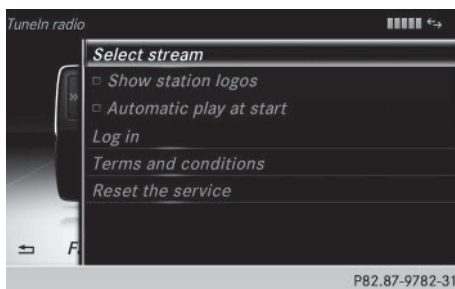

P82.87-9782-31

- ▶ Call up the Internet radio (▷ page 81).
- ▶ To select : turn and press the controller.  
A menu appears. You can load station logos, select a stream or automatic playback on starting, for example.
- ▶ To select [Show station logos](#): turn and press the controller.  
The function is activated  or deactivated .
- ▶ Select [Automatic playback at start](#).  
The function is activated  or deactivated .

## Web browser

### Calling up a website




#### Function restrictions


Internet pages cannot be shown while the vehicle is in motion.

#### Entering a web address






P82.87-9783-31








- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the main function bar: slide  the controller.
- ▶ To select [TEL](#)/: press the controller.
- ▶ To select [Internet](#): turn and press the controller.  
The menu with the Internet functions is displayed.

- ▶ To select [www](#): turn and press the controller. An input menu for the web address is displayed.
- ▶ Enter characters using the controller or the number keypad.
- ▶ To finish entry and call up a website: select .









### Selecting a web address from the list

- ▶ When the character bar is displayed, slide   the controller.
- ▶ To select the desired web address: turn and press the controller. The web address can still be changed as desired.
- ▶ To call up a website: select . The website is called up.

### Navigating the website

Step	Result
▶ Turn the controller.	Navigates from one selectable item (e.g. link, text field or menu) to the next and highlights the respective element on the website.
Sliding the controller: ▶ Left or right   ▶ Up or down   ▶ Diagonally  	Moves the pointer on the page.
▶ Press the controller.	Opens the selected item.
▶ Press  .	Calls up the menu.


### Menu functions

- ▶ **To show the menu:** press the  button.
- ▶ **To call up the Options menu:** select : turn and press the controller.
- ▶ **To close the website:** select .
- ▶ **To call up the previous website:** select .
- ▶ **To call up the next website:** select .
- ▶ **To refresh the website:** select . The website is refreshed. This procedure may take some time.
  - i** While the website is loading, a cross appears in the menu. This can be used to cancel the loading procedure.
- ▶ **To enter a URL:** select .
- ▶ Enter a web address (URL) (▷ page 82).
- ▶ **Favorites:** select . The Favorites menu appears (▷ page 85).



### Options menu

#### Adding to bookmarks

Adds the current website to the favorites. The website can then be called up using the menu. You can store up to 20 favorites in the menu.











- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Add to Bookmarks](#).
- ▶ Select [Save As Global Bookmark](#) or [Save As Local Bookmark](#). The message: [The website has been added to bookmarks](#) appears.

### Current URL

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select **Current URL**.  
The URL appears.



### Zoom

You can use this function to enlarge web pages.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.  
A menu appears. The • dot indicates the current setting.
- ▶ Select **Zoom**.
- ▶ To navigate on the web page: slide   ,    or   the controller.
- ▶ To zoom in on the web page: turn the controller.



### Jumping from link to link

You can use this function to skip from one link to the next on a website.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.  
A menu appears. The • dot indicates the current setting.
- ▶ Select **Jump From Link To Link**.  
If a website has been called up and the controller is turned, the cursor jumps from link to link.



### Directional scrolling

You can use this function to scroll up and down on the web page.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.  
A menu appears. The • dot indicates the current setting.
- ▶ Select **Directional Scrolling**.  
If a website has been called up and the controller is turned, the cursor moves up or down depending on the direction of the turn.

## Settings

### Settings overview

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press controller.  
A menu appears.
- ▶ Select **Settings**.

You can activate/deactivate the following settings:

- **Download Images Automatically**  
It may take some time to download the contents of websites that contain a large amount of images. Therefore, it may be useful to deactivate this option.
- **Block Pop-Ups**  
Pop-ups are windows (usually with advertisements) which are displayed automatically when you call up a website. You can block these displays.
- **Activate Javascript**  
Javascript makes it possible to display and interact with dynamic content on the website.
- **Allow Cookies**  
Some websites save information in small text files (cookies) on your system. You can determine whether cookies may be stored.
- **Show Link Target**  
You can display the link's URL here.
- **Character Size**

You can select the font size which is used when displaying the website.

- **Character Code**

You can select a different character set here, e.g. if the characters of a website appear distorted.

### Changing settings


- ▶ To select the desired setting: turn and press the controller.  
Switch the setting on  or off .

### Changing the character size or character code.

- ▶ Select **Character Size** or **Character Code**.
- ▶ To select the setting you require: turn and press the controller.

**i** If you change the settings, the websites may not be displayed correctly.

### Deleting private data

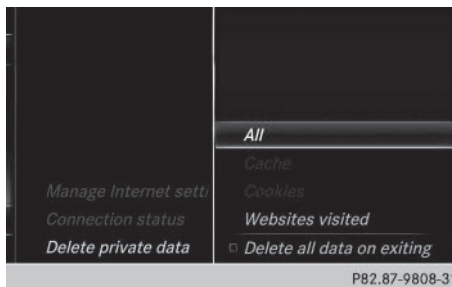

- ▶ Press the **TEL** button.
- ▶ Select **Internet**.
- ▶ To show the menu: slide **⊙↓** the controller.
- ▶ To select **Settings**: slide **⊙↓**, turn and press the controller to confirm.  
A menu appears.
- ▶ To select **Delete Private Data**: turn and press the controller.  
A menu appears. The **•** dot indicates the current setting.

- ▶ To select the setting you require: turn and press the controller.

or

- ▶ Select **Delete All Data On Exit**.  
Switch the setting on  or off .

Option	Function
All	Deletes all personal data.
Cache	Deletes data in the cache.
Cookies	Deletes cookies that are created by websites which you have called up.
URL History	Deletes all websites visited (path).
<input checked="" type="checkbox"/> Delete All Data On Exit	If this function is activated <input checked="" type="checkbox"/> , all personal data is deleted when you exit the Internet browser.

### Favorites

#### Introduction

Favorites/bookmarks are frequently visited websites.

#### Creating favorites

Adding a favorite in the menu

- ▶ Press the **TEL** button.  
The last function called up appears.
- ▶ Select **TEL/⊕** in the main function bar by sliding **↑⊙**, turning and pressing the controller.  
A menu appears.
- ▶ To select **Internet**: turn and press the controller.  
The menu for the Internet functions appears.

- ▶ Select **www**.
- ▶ Enter the web address (URL) and name using the character bar and press **ok**.

Adding to favorites

- ▶ To call up the menu: press the **☰** button.
- ▶ To select **☰**: turn and press the controller.
- ▶ Select **Add to Bookmarks**(▷ page 83).

### Selecting favorites

- ▶ Press the **TEL** button.  
The last function called up appears.
- ▶ Select **TEL/🌐** in the main function bar by sliding **↑☉**, turning and pressing the controller.  
A menu appears.
- ▶ To select **Internet**: turn and press the controller.  
The menu for the Internet functions appears.
- ▶ To select the **Internet Favorites** menu: turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired bookmark.  
The favorite is opened in a new window.

### Editing favorites

- ▶ Press the **TEL** button.  
The last function called up appears.
- ▶ Select **TEL/🌐** in the main function bar by sliding **↑☉**, turning and pressing the controller.  
A menu appears.
- ▶ To select **Internet**: turn and press the controller.  
The menu for the Internet functions appears.
- ▶ To select the **Internet Favorites** menu: turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired favorites.

- ▶ To select **☰**: slide **☉→** and press the controller.
- ▶ Select **Edit**.  
An input menu appears.
- ▶ Enter the web address (URL) and name using the character bar.

### Deleting favorites

- ▶ Press the **TEL** button.  
The last function called up appears.
- ▶ Select **TEL/🌐** in the main function bar by sliding **↑☉**, turning and pressing the controller.  
A menu appears.
- ▶ To select **Internet**: turn and press the controller.  
The menu for the Internet functions appears.
- ▶ To select the **Internet Favorites** menu: turn and press the controller.  
The Favorites menu appears.
- ▶ Select the desired favorites.
- ▶ Select **Delete**.  
A prompt appears.
- ▶ Select **Yes** or **No**.  
If you select **Yes** the favorite is deleted.  
If you select **No** the process is canceled.

### Closing the browser

- ▶ Select **☰** in the browser menu (▷ page 83)
- or
- ▶ Press the **☰** button for longer than two seconds.  
A prompt appears, asking whether you want to close the Internet browser.
  - ▶ Select **Yes** or **No**.  
If you select **Yes** the application is closed.  
If you select **No** the process is canceled.




Audio 20 features .....	88
Switching on the radio .....	88
Overview .....	88
Setting the waveband .....	89
Station .....	89
Tagging music tracks .....	90
Displaying the artist and track .....	91
Calling up sound settings .....	91
Displaying information .....	91
Satellite radio .....	91

## Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

## Switching on the radio

- ▶ Press the **RADIO** button.  
The radio display appears. You will hear the last station played on the last waveband selected.

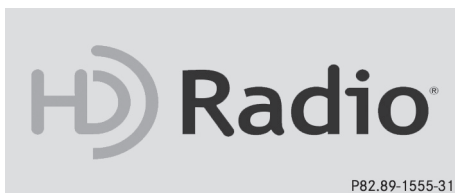


### Switching HD Radio on/off

- ▶ In radio mode: slide **⊕/⊖** the controller.
- ▶ Select **Options**.
- ▶ By selecting  or  before **HD Radio**, you determine whether HD radio is switched on or off.

If HD radio is switched off, the system does not switch to digital radio and it is not possible to select any sub-channels.

- i** HD Radio™ Technology Manufactured Under License From iBiquity Digital Corp. U.S. and Foreign Patents. The HD and HD Radio logos are proprietary trademarks of iBiquity Digital Corp.

## Overview

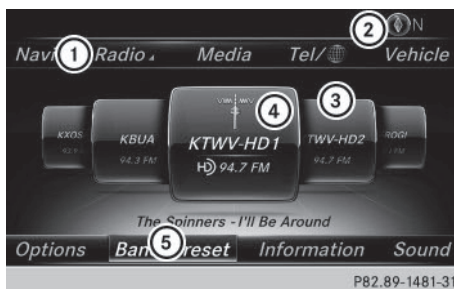

- ① Main function bar
- ② Status bar with compass display
- ③ Main display field with available stations and relevant information
- ④ Display of radio station selected
- ⑤ Radio menu bar


### Radio main function bar

- **HD Radio FM:** HD FM radio mode
- **HD Radio AM:** HD MW radio mode
- **Sat Radio:** satellite radio
- **Internet Radio:** Internet radio
- **Info on Radio:** Digital Operator's Manual
- **Radio Station Presets:** 100 preset positions for radio stations

### Radio menu bar

- **Band/Preset:** selects wavebands
- **Info:** displays additional information about the current station (radio text or Artist Experience®)
- **Sound:** sound settings, harman/kardon® Logic 7® Surround

## Setting the waveband

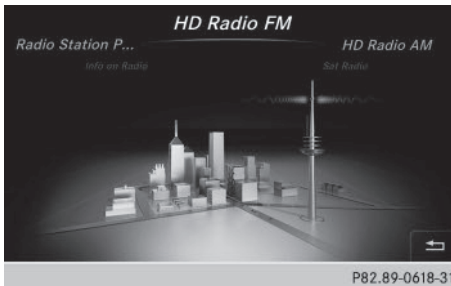

- ▶ In radio mode: press the **RADIO** button. A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Internet Radio**, **Info on Radio** and **Radio Station Presets**.
- ▶ Turn the controller until the required waveband is in the center. Press the controller.

## Station

### Selecting a station

#### From the main display field



All currently available stations are displayed.

- ▶ In radio mode, turn the controller until the desired station is in the center.

## Using the current station list



- ▶ In radio mode, press the controller. The station list appears with the stations currently available. The loudspeaker symbol in front of a station indicates the currently set station.
- ▶ To select the desired station: turn and press the controller.

## Using frequency entry


- ▶ In radio mode: slide **⊙** the controller. The radio menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Enter Frequency**.
- ▶ Enter the frequency of the desired station in the entry field.

or

- ▶ Press the **\*** key on the number keypad. An input field appears.
- ▶ Enter the frequency of the desired station in the entry field.

## Saving/deleting a station

- i** Frequencies are already stored in Audio 20. There are 100 preset positions available.

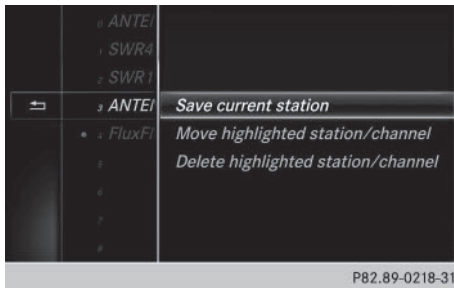

### Storing current stations

- ▶ In radio mode: slide  $\odot \downarrow$  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ Select the position of the required preset: turn the controller.

This can also be a preset position that is already occupied, which is then overwritten by the current station.

- ▶ Slide  $\odot \rightarrow$  the controller.  
An additional menu appears.
- ▶ To select the **Save Current Station/Channel** option: turn and press the controller.

The currently set station is stored in the selected preset position.

or

- ▶ Set the desired station in radio mode.
- ▶ Press and hold down the preset number to be assigned on the number keypad until a tone confirms the storing process.
- ▶ If the preset number has two digits, press the first digit briefly and then press and hold down the second digit.

or

- ▶ Set the desired station in radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.  
A tone confirms that the storing process was successful.

### Moving highlighted stations

- ▶ In radio mode: slide  $\odot \downarrow$  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  $\odot \rightarrow$  the controller.  
An additional menu appears.
- ▶ To select the **Move Highlighted Station/Channel** option: turn and press the controller.  
The list of stored stations appears again.
- ▶ To move the highlighted station to the new position: turn the controller and press to confirm.

### Deleting highlighted stations

- ▶ In radio mode: slide  $\odot \downarrow$  the controller.
- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  $\odot \rightarrow$  the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

or


- ▶ Press the **CLEAR** button.  
The prompt **Do you want to delete the preset?** appears
- ▶ To select **Yes**: turn and press the controller.  
The highlighted station is deleted.

or


- ▶ To select **No**: press the controller.  
The process is canceled.

### Tagging music tracks


This function allows you to transfer the music track currently playing to an Apple® device and then purchase it in the iTunes store®.

- ▶ In radio mode: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Tag This Track**.  
A message appears in Audio 20 about storing track information.

### Displaying the artist and track

- ▶ In radio mode: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ With  or  in front of **Show Station Information** you can determine whether the station name should be displayed. If the function is active, the artist and track will also be displayed in the main display field.

### Calling up sound settings

- ▶ In radio mode: slide  the controller.
- ▶ To select **Sound** in the radio menu bar: turn and press the controller.  
The sound menu appears (▶ page 118).

### Displaying information



This function is available in HD FM radio and HD AM radio mode.


Reception is only possible if the radio stations provide the relevant information.

- ▶ To select **Info** in the radio menu bar: turn and press the controller.  
Information on the currently received program is displayed.


If available, you will see:

- the track that is currently being played
- the artist of the track that is currently being played
- the album name
- the channel abbreviation
- the logo of the station or Artist Experience<sup>®</sup>

### Back to radio display:

- ▶ To select **Info**: slide  and press the controller.

or

- ▶ Press the  button.

### Satellite radio

#### General notes

The satellite radio mode requires satellite radio equipment and registration with a satellite radio provider.

Note that the categories and channels shown in the illustrations depend on the program content offered by the provider. The illustrations and descriptions in these operating instructions may therefore differ from the channels and categories offered by the provider.

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons. These include environmental or topographical conditions as well as other factors beyond the control of Mercedes-Benz USA, LLC. This means operation may not be possible in certain areas.

These include:

- tunnels
- parking garages
- locations inside or next to buildings
- locations in the vicinity of other structures


SIRIUS XM Satellite Radio offers more than 140 digital-quality radio channels providing 100% commercial-free music, sports, news and entertainment.

SIRIUS XM Satellite Radio employs a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada.

The satellite radio program is available for a monthly fee. Details are available from the SIRIUS XM Service Center and at <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

Your new Mercedes-Benz vehicle comes with SIRIUS XM Satellite Radio pre-installed at the factory. This service is free for a six-month trial period. About a month before the trial period ends, information will be provided on how to extend this subscription. An acoustic signal sounds and a message is shown, describing how the subscription can be extended.

### Registering satellite radio

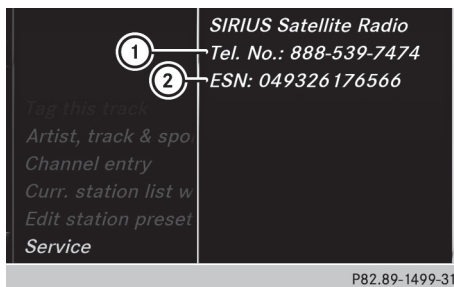

- ① Phone number of provider
  - ② SIRIUS XM ID of your satellite receiver
- ▶ Switch on satellite radio mode (▷ page 92).  
The satellite radio main menu appears showing the preview channel. You cannot select any other stations.

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Service**: turn and press the controller.  
The service information screen appears.

Once the telephone connection has been established:



- ▶ Follow the instructions of the service staff. The activation process may take up to ten minutes. If activation is completed successfully, the **Updating Channels...** message appears in the display, followed by the satellite radio main menu.

**i** You can also have the satellite service activated online. To do so, visit the SIRIUS XM Radio website at <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

**i** If registration is not included when purchasing the system, your credit card details will be required to activate your account.


If the satellite receiver is not installed correctly, the **Device Unavailable** message will appear.

### Switching to satellite radio

- ▶ To show the main function bar: slide **↑**  the controller.
- ▶ To select **Radio**: turn and press the controller.  
The radio display appears. You will hear the last station played on the last waveband selected.
- ▶ To select **Radio** in radio mode: slide **↑**  and press the controller.  
The menu appears with the available radio modes.
- ▶ To select **Sat Radio**: turn and press the controller.

The **No Service** message appears if there is no signal.

### Satellite radio overview

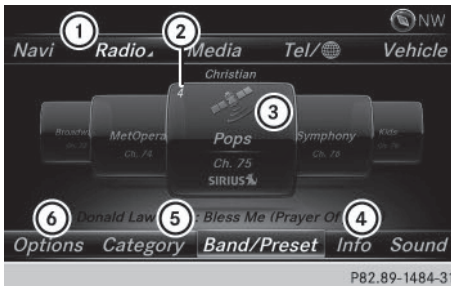

- ① Main function bar
- ② Preset
- ③ Channel name and channel number
- ④ Channel information
- ⑤ Category list
- ⑥ Options menu

### Selecting a category

Satellite radio channels are sorted into various categories. You can choose between various categories such as News/Discussions, Sports and Country (if available). The content of the categories is sorted by channel numbers.

- ▶ **To call up the category list:** select **Category** in the menu bar by turning and pressing the controller. The category list appears.
- ▶ **To select a category:** turn the controller and press to confirm. The category selected is shown in the display. You hear the station last selected for this category.

The • dot indicates the current setting.

When you select a specific category, the channels are filtered exclusively according to this category. Select the **All Channels** category in order to see all of the available channels. Only this category enables you to browse all available stations.

### Selecting a channel

#### Changing channels

- ▶ When the display/selection window in the satellite radio display is selected, slide ←○→ or turn the controller. Audio 20 switches to the next available channel.

#### Entering channel numbers directly

- ▶ To select **Options** in the radio menu bar: turn and press the controller. The satellite radio menu appears.
- ▶ To select **Enter Channel**: turn and press the controller. An input menu appears.
- ▶ Enter the frequency of the desired station in the entry field.

or

- ▶ Press the  key on the number keypad. An input menu appears.
  - ▶ Enter the frequency of the desired station in the entry field.
  - ▶ For the channel number, press the corresponding number keys on the control panel one after the other.
  - ▶ Press the  key on the number keypad. Audio 20 sets the selected channel.
- i** You can only select currently permitted digits.

#### Selecting a channel via the satellite radio station list

Station list with artist and title	
	◦ Hits 1 Ch. 1
	• Beatles-Let It Be '70
	◦ TheBlend Ch. 2
Ar	Steely Dan-Bad Sneakers
Ch	Love Ch. 3
Cu	Crosby, Stills & Suite: Judy Blue
Ea	40s on 4 Ch. 4
Se	James Taylor-Steamroller

P82.89-1501-31

You can select the channel using the station list displaying the artists and tracks that are currently playing.

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Current Station List with Artist & Title**: turn and press the controller. The channel list appears.

or

- ▶ Press the controller in the main display field.
- ▶ Select the desired channel

### Memory functions

**i** There are 100 presets available.

- ▶ **To store a channel using the edit function**: select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Edit Station Preset**: turn and press the controller. The list of saved channels appears.
- ▶ To select the preset: turn the controller and press for about 2 seconds. The newly saved station overwrites the existing preset.

or

- ▶ To **quick store**: press and hold number key 2, for example. The channel is saved to the second position in the radio channel presets.

or

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller. A tone confirms that the storing process was successful.

### Deleting highlighted stations

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide **⊙→** the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

or

- ▶ Press the **CLEAR** button. The prompt **Do you want to delete the preset?** appears
- ▶ To select **Yes**: turn and press the controller. The highlighted station is deleted.

or

- ▶ To select **No**: press the controller. The process is canceled.

### Music and sport alerts

#### General notes


This function makes it possible to store a program alert for your favorite artists, tracks or sporting events.

You can store up to 30 music and sports alerts (favorites).

Music alerts can only be saved whilst a track is being played. You can also specify sport alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a saved message, you will be informed. A window appears with the respective information.



## Setting a music alert

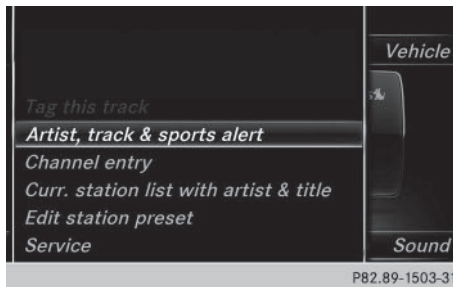

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller. A menu appears.
- ▶ Select **Add New Alert**. A window with a prompt appears.
- ▶ Select **Artist** or **Tracks**. The alert is set for the current artist or track.

## Setting a sport alert

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller. A menu appears.
- ▶ Select **Manage Sport Alerts**. A menu appears.
- ▶ Select **Select New Alerts**. A menu appears.
- ▶ Select the desired team from a league, e.g. college, NBA, NHL, NFL or MLB. The alert function for the sports team is added.

## A window with music and sport alerts appears

- ▶ To select **Change to** or **Ignore**: turn and press the controller. If you select **Change to**, the channel is changed and the favorite artist or track is played. If you select **Ignore**, the current channel will continue playing.

## Editing music and sport alerts

- ▶ Select **Edit Alert**. A list of set sport alerts appears.
- ▶ Select **Manage Music Alerts**. A list of set artists and tracks (artist) appears.

## Switching music and sport alerts on/off


- ▶ With  or  in front of **Activate Music Alerts** you can determine whether music alerts should be switched on or off.
- ▶ With  or  in front of **Activate Sports Alerts** you can determine whether sport alerts should be switched on or off.

## Tagging music tracks

This function allows you to transfer the music track currently playing to an Apple® device and then purchase it in the iTunes store®.


- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Tag This Track**: turn and press the controller. A message about saving this music track on the Apple® device appears.

### Displaying information

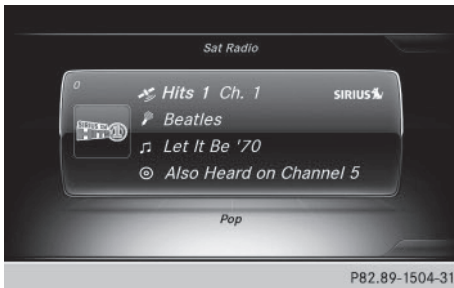


- ▶ To select **Info** in the radio menu bar: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the channel logo
- the channel abbreviation
- the artist of the track that is currently being played
- the track that is currently being played
- category
- composer
- ▶ **To return to the radio display:** select **Info**: slide  and press the controller.

### Displaying service information

The provider's customer service center is available by phone at any time to answer any general questions or questions on the versions available.

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Service**: turn and press the controller. The SIRIUS XM ID of your satellite receiver and the telephone number of the provider appear.
- ▶ **To return to the main display:** press the  button.

### Channel list updates

During reception of a new channel list, the **Updating Channels** message is shown.

The station last selected is switched to mute until the update has been completed. Satellite radio mode is not available during this process.

Once the update has been completed, the satellite radio basic menu appears. If the station previously selected is still available, it will be played.

### Sound settings

Information on sound settings (▷ page 118).

Audio 20 features .....	98
Activating media mode .....	98
Audio mode .....	99
Media search .....	104
Bluetooth® audio mode .....	107
Operation with the Media Inter- face .....	113
Picture viewer .....	115

### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

### Activating media mode



#### General notes

There are several ways to activate media sources using Audio 20.

The relevant sections of the Operator's Manual describe the simplest way to activate a media source.

This section describes all options for activating media sources.


#### Using the MEDIA button

- ▶ To call up the media menu: press the  button.  
The last media source you have set is displayed.
- ▶ Press the  button again.  
The menu appears with the available media sources.
- ▶ To select media sources: turn the controller until the desired media source is in the center. Press the controller.

The media sources are available in the following order:

- CD
- Memory card

- Vehicles without Media Interface: USB 1 and USB 2
- Vehicles with Media Interface: Media Interface 1 and Media Interface 2
- BT audio

- If playable media files are found, they will be played by Audio 20.
- ▶ To show the menu bar: slide  the controller.

#### Switching on automatically

After an external media source has been connected, Audio 20 will activate the corresponding media mode automatically in the case of CDs and SD cards. Depending on the vehicle equipment, you must change to the default display of the Media Interface 1, 2 or USB 1, 2 when using with USB devices.

External media sources:

- Apple® devices (e.g. iPhone®)
- USB devices (e.g. USB stick, MP3 player)
- CD
- SD cards
- via devices connected by Bluetooth®

If playable media files are found, they will be played by Audio 20.

- i** If a media function is already switched on in Audio 20, this will be interrupted and the basic display of the newly connected device will appear (except when using with USB/iPod®).

If another function, such as navigation, is operating, the basic display will not change. Only the music from the newly connected media source will play (except when using with USB/iPod®).

### Using the main function bar



- ▶ To display the main function bar: slide  $\uparrow$ ⊙ the controller.
- ▶ To select **Media**: turn and press the controller. The last media source you have set is displayed.
- ▶ To select **Media** in media mode: slide  $\uparrow$ ⊙ and press the controller. The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm. If the media source contains music files, these will be played. The corresponding basic menu will be shown.

### Using the device list



- ▶ In Media mode, slide  $\odot$ ↓ the controller. The media menu bar appears.
- ▶ To select **Devices**: turn the controller and press to confirm. The available media sources will be shown. The • dot indicates the current setting.
- ▶ Select the media source. If the media source contains music files, these will be played. The corresponding basic menu will be shown.

### Audio mode

#### Important safety notes

##### **WARNING**

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

##### **WARNING**

Handling discs while driving may distract you from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Handle discs only when the vehicle is stationary.

#### Notes on audio mode

##### Permissible data carriers

- CD audio, CD-R and CD-RW
- SD memory card
- USB storage device

##### Permissible file systems

- ISO 9660/Joliet standard for CDs
- FAT16, FAT32, exFAT and NTFS for SD memory card and USB storage media

### Multisession CDs

For multisession CDs, the content of the first session determines how Audio 20 will process the CD. Audio 20 only plays back one session and gives priority to the first session on the CD.

### File structure of a data carrier

When you create a disc with compressed music files, the tracks can be organized in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels (a root and seven sub-levels). Files beyond the eighth level will not be recognized by the system.

- i** Audio 20 supports up to 15,000 files for all of the connected sources.

### Track and file names

When you create a disc with compressed music files, you can assign names to the tracks and folders.

You should observe the following when assigning track names:

- track names must have at least one character.
- track names must have an extension of a supported audio format, e.g. mp3 or aac.
- there must be a dot between the track name and the extension.

Example of a correct track name:  
"Track 1.mp3".

### Permissible formats

Audio 20 supports the following audio formats:

- MP3
- WMA
- CD-A
- AAC formats: .aac, .mp4, .m4a and .m4b

Copy-protected iTunes® music files with the .m4p file extension are not supported.

### Permissible bit and sampling rates

Audio 20 supports the following types of MP3 files:

- fixed and variable bit rates from 32 kbit/s to 320 kbit/s
- sampling rates of 8 kHz to 48 kHz

Audio 20 supports the following types of WMA files:

- fixed bit rates from 5 kbit/s to 384 kbit/s
- sampling rates of 8 kHz to 48 kHz

Audio 20 does not support the following types of WMA files:

- DRM (Digital Rights Management) encrypted files
- variable bit rate
- WMA Pro
- 5.1 surround sound

- i** Only use tracks with a bit rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality. This is especially the case if you have activated a surround sound function.

### Selecting an active partition (USB mass storage devices only)

You can select this function for USB storage devices when the storage device is partitioned. Up to 9 partitions (primary or logical, FAT, FAT32, exFAT and NTFS) are supported.

#### Selecting an active partition

- ▶ To select **Options** in the media menu bar: turn and press the controller.
- ▶ Select **Select Active Partition**.

### Notes on copyright

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection.

In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder.

Make sure that you know about the applicable copyright regulations and that you comply with these.

### Notes on compact discs

**!** Do not affix stickers or labels to the discs.

They could peel off and damage the drive.

The drive is designed to hold discs which comply with the EN 60908 standard. Therefore, you can only use discs with a maximum thickness of 1.3 mm.


If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.

Do not use discs with a diameter of 8 cm, even with an adapter. Only use round discs with a diameter of 12 cm.

Discs with copy protection are not compatible with the audio CD standard. Consequently, it may not be possible to play them on the Audio 20 system.

Playback problems may occur when playing copied discs.

There may be playback problems if you play CDs that you have copied yourself with a storage capacity of more than 700 MB.

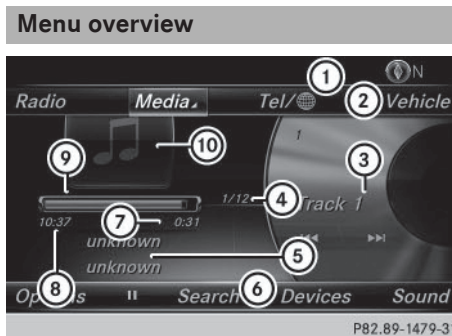

CD mode basic display

- ① Status bar
- ② Main function bar
- ③ Name of the track currently playing

- ④ Track number / number of songs in the track list
- ⑤ Artist and album
- ⑥ Media menu bar
- ⑦ Remaining playing time of the current track
- ⑧ Elapsed playback time for the current track
- ⑨ Graphic time display
- ⑩ Album cover (if available)

### Inserting and removing a CD from the single CD drive

► **To insert:** press the button on the single drive.

If there is a disc already inserted, it will be ejected.

► Insert a disc into the disc slot with the printed side facing upwards.

The drive closes and the disc is played.

If the CD is operated in Media mode, the corresponding basic menu will be shown. If the CD is started using another application (e.g. navigation) the display will not change.

**i** The drive may not be able to play discs with copy protection.

► **To remove:** press the button.

The drive ejects the disc.

► Remove the ejected disc from the slot.

If you do not take the disc out of the slot, it is drawn in again automatically after a short while.

### Inserting and ejecting an SD memory card

### Important safety notes

#### WARNING

SD memory cards are small parts. They can be swallowed and cause asphyxiation. This poses an increased risk of injury or even fatal injury.

Keep SD memory cards out of the reach of children. If an SD memory card is swallowed, seek immediate medical attention.

- ❗ If you are no longer using the SD memory card, you should remove it and take it out of the vehicle. High temperatures can damage the card.

Audio 20 supports SD memory cards (**Secure Digital**), SDHC memory cards (**Secure Digital High Capacity**), and SDXC memory cards (**Secure Digital eXtended Capacity**).

### Inserting an SD memory card

- ▶ Insert the SD memory card into the slot on the control panel until it engages in place. The side with the contacts must face downwards.

The music is played while the files are loaded in the background. If there are no supported audio files, you will see a message to this effect.

- ❗ If the SD memory card for navigation is inserted into the SD card slot, you can still select the memory card as a media source. The **No Playable Files** message then appears.

### Ejecting an SD memory card

- ▶ Press the memory card.  
The memory card is ejected.
- ▶ Remove the memory card.


### Connecting USB devices


There are two USB ports in the stowage space under the armrest.

- ▶ Connect the USB device to the USB port. If the corresponding media display is visible, the medium is played and the files are loaded in the background. Otherwise, the system does not automatically switch to USB. If there are no supported audio files, you will see a message to this effect.

- ❗ MP3 players must support Media Transfer Protocol (MTP).

### Playback options

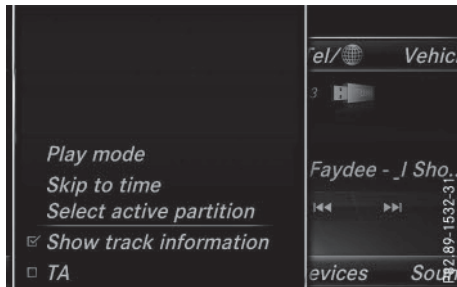

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.


### Playing similar tracks (Apple® devices)

- ▶ To select **Play More Like This**: turn and press the controller.
- ▶ Select the required track.

### Play mode

- ▶ To select **Playback Mode**: turn and press the controller.
- ▶ Select **Normal Track Sequence**.  
The current track list is played in the order it appears on the data medium.
- ▶ Select **Random Track List**.  
The current track list is played in random order.
- ▶ Select **Random Medium**.  
All tracks on the data medium are played in random order.



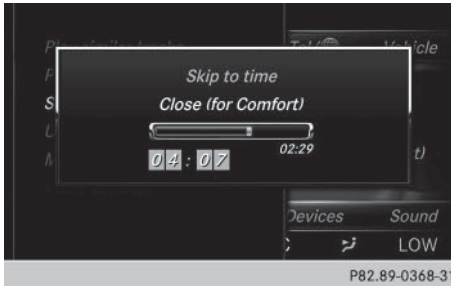

P82.89-0368-31

### Skip to time

- ▶ To select **Skip to Time**: turn and press the controller.  
A menu appears.
- ▶ To set the time: turn the controller or
- ▶ Set the desired time using the number keypad.

### Selecting an active partition

- ▶ To select **Select Active Partition**: turn and press the controller.  
With the **Select Active Partition** option, you can select a partition in the current USB data medium.

### Showing track information

Ticking or removing the tick from the box in front of **Show Track Information** displays or hides the information on the track, artist and album in the main display field. If it is deactivated, the file name and the folder name of the track are displayed.

### Direct track entry



P82.89-0356-31

- ▶ To enter the track number: press the button.  
A menu appears.
- ▶ To select **Track Number::**: turn and press the controller.  
A menu appears.
- ▶ Use the number keypad to enter the desired track number.

### Pause and playback function

- ▶ **To pause playback**: in audio mode, slide the controller.  
The media menu bar is shown.
- ▶ To activate in the Media menu bar: turn and press the controller.  
Playback is interrupted here. The display changes to .
- ▶ **To continue playback**: in audio mode, slide the controller.  
The media menu bar is shown.
- ▶ To activate in the Media menu bar: turn and press the controller.  
Playback is continued from the point of interruption. The symbol changes to .

### Selecting a track

#### Selecting using the current track list

- ▶ **To display the current track list**: press the controller in the basic display.  
The category list appears.  
Select the current track list.
- ▶ To select a track: turn the controller and press to confirm.



#### Selecting by skipping to a track

- ▶ To skip forwards or backwards to a track: turn or briefly slide the controller in the media basic display.

or


- ▶ Press the or button.


### Fast forwarding/rewinding

- ▶ In the media basic display, press and hold the  or  button until the desired position is reached.

### Search




- ▶ In Media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.
- ▶ Select a category, e.g. **Genres**. After the category has been chosen, sub-categories appear depending on the available music tracks.

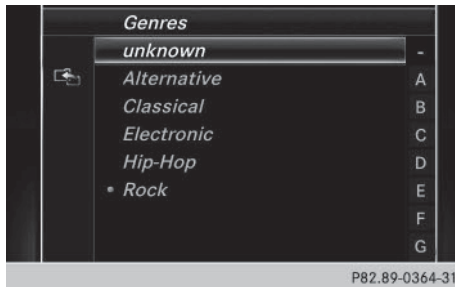

- ▶ Select a sub-category, e.g. **Rock**.
- ▶ Select a track in the sub-category for playing. All of the tracks in this sub-category are played.

### Media search

#### Starting the media search

- ▶ In Media mode, slide  the controller. The media menu bar appears.
- ▶ To select **Search**: turn and press the controller. The category list appears.

#### General information


Audio 20 plays back files from the following data media:

- Disc (audio CD)
- Memory card
- USB storage device
- Apple® devices (folder, year and photos are not available)

The categories are shown according to the data available, whereby a database is created for iPod® and for all the other media sources (CD, USB, SD card) respectively. During the search the relevant database is accessed depending on the active media source.

#### Category list



- ▶ In Media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Tracklist**;
- **Folder**;
- **Select By Cover**;
- **Keyword Search**;
- **Playlists**;
- **Artists**;
- **Albums**;
- **Tracks**;
- **Genres**;
- **Year**;
- **Composers**;
- **Photos**.

**i** The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

### Searching by current track list




- ▶ To select **Current Tracklist** in the category list: turn and press the controller. The selection list appears.
- ▶ Select the required track.

### Searching by folder

Playable files can be searched for in the active data medium's directories.

- ▶ To select **Folder** in the category list: turn and press the controller. The folder list appears.
- ▶ Select the required folder. Either the desired track list appears or continue searching in the folder directory until the desired track list has been found.
- ▶ Select the required track.

### Selecting by cover

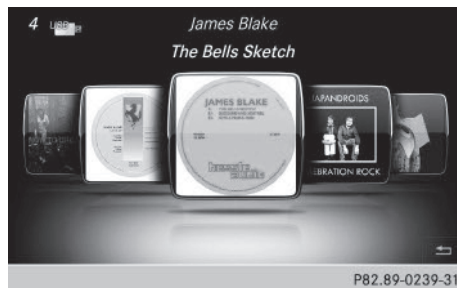



- ▶ To select **Select By Cover** in the category list: turn and press the controller. An album list sorted by artist appears. Audio 20 searches all media sources.

**i** There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.


- ▶ To turn the desired album to the front and then select: turn and press the controller.
- ▶ The desired album is played.

### Searching by genre

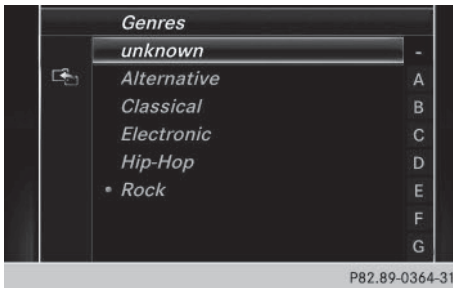

- ▶ To select **Genres** in the category list: turn and press the controller.
- Audio 20 searches all media sources. A selection list with **Genres** and media sources appears.
- ▶ Select the desired **Genres**.
- A selection list with music tracks from the selected genre appears.
- ▶ Select a music track.
- The track is played. The basic menu for the active media source is shown.
- ▶ To exit the selection list: press the  button.
- i** The list is closed automatically once a selection has been made.


### Keyword search

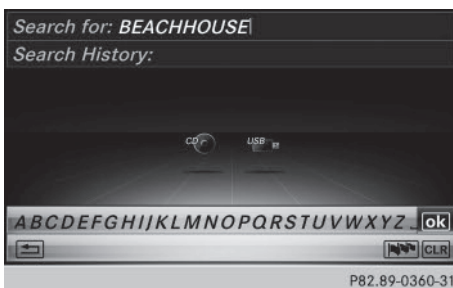


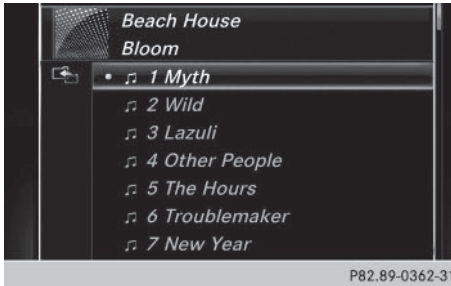
- ▶ To select **Keyword Search** in the category list: turn and press the controller.

The input field appears.

- ▶ To select the desired characters: turn and press the controller for each one. Entering just part of the name of a track or artist is enough. The search result then displays the entire text .

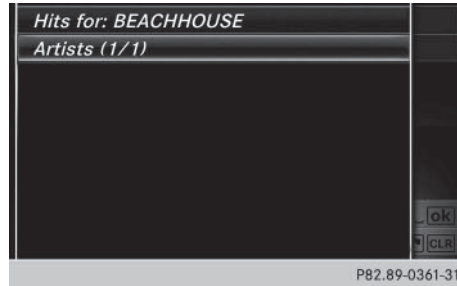

- ▶ Select  .
- The search results are displayed.
- The numbers behind the results, as shown in the example **Artists** (1/1) mean: 1 result that contains the exact keyword searched for and 1 result is similar.
- ▶ Select one of the results.
- Keywords that have already been searched for are displayed in the "Search history" without having to enter them completely. They can be accepted directly and displayed in the search result.
- ▶ Select one entry, e.g. **Artists**.
- Album list and covers (if available) are shown.
- i** There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.
- ▶ Select an album.
- The tracks are listed.



- ▶ Select a track.  
The basic display appears and playback starts.

## Bluetooth® audio mode

### Connecting Bluetooth® audio devices

#### Prerequisites

- ▶ Activate the Bluetooth® function in Audio 20 (▷ page 28).

Bluetooth® audio mode requires a Bluetooth®-capable audio device.

Check your Bluetooth® audio device for the following (see the manufacturer's operating instructions):

- Bluetooth® audio profile  
The Bluetooth® audio device must support the A2DP and AVRCP Bluetooth® audio profiles.
- Bluetooth® visibility  
Certain Bluetooth® audio devices do not just require activation of the Bluetooth® function. In addition, your device must be made "visible" to other devices.
- Bluetooth® device name  
This device name is predetermined but can usually be changed. To make a clear selection of the Bluetooth® device possible, we recommend that you customize the device name.

- **i** A2DP (**A**dvanced **A**udio **D**istribution **P**rofile): Bluetooth® audio profile for audio data transmission  
AVRCP (**A**udio **V**ideo **R**emote **C**ontrol **P**rofile): Bluetooth® audio profile for audio data playback.

- **i** The Bluetooth® device must be visible for authorization. After authorization, Audio 20 finds the Bluetooth® device even when it is not visible.

- ▶ The Bluetooth® function in Audio 20 must be activated (▷ page 28).

#### General notes

Before using your Bluetooth® audio device with Audio 20 for the first time, you will need to authorize it.

When you authorize a new Bluetooth® audio device, it is connected automatically. Connection involves first searching for a Bluetooth® audio device and then authorizing it. You can authorize up to fifteen Bluetooth® devices.

- **i** If you authorize a mobile phone that supports Bluetooth® audio, the A2DP and AVRCP Bluetooth® audio profiles are connected automatically.

The mobile phone is then entered:

- in the Bluetooth® telephone list (▷ page 49)
- in the Bluetooth® audio device list (▷ page 108)

Mercedes-Benz recommends authorizing a mobile phone in Bluetooth® telephony (▷ page 50).


**i** If the mobile phone that is connected only supports two Bluetooth® profiles at the same time, Audio 20 functions may behave as follows:

- when connecting to the Internet, playback is stopped on the Bluetooth® audio device.
- when starting playback on the Bluetooth® audio device, the Internet connection is ended.

### Searching for and authorizing a Bluetooth® audio device

#### Switching to Bluetooth® audio mode

- ▶ Press the **MEDIA** button.
- ▶ To select **Bluetooth Audio** in the menu: turn and press the controller. A menu appears.  
If you see the **No Bluetooth Audio Device Authorized** message, you will need to authorize the Bluetooth® audio device first.
- ▶ To select **Options** in the Bluetooth audio menu: slide **⊙**↓ the controller and press to confirm.
- ▶ To select **Bluetooth Audio Devices**: press the controller. A new menu appears.

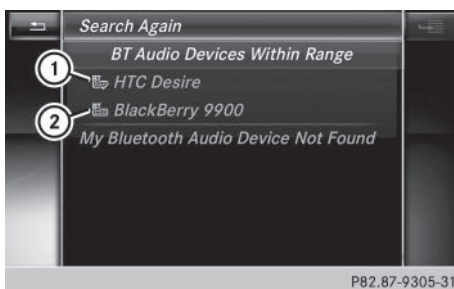

- ① Bluetooth® audio player within range and already authorized
- ② Newly detected mobile phone with Bluetooth® audio mode in range

The Bluetooth® device list displays all authorized devices, whether they are within range or not. After a device search, devices which are within range but not authorized are also displayed.

#### Searching for Bluetooth® audio

- ▶ To select **Search for Audio Devices**: press the controller.  
The **To connect your audio device, make sure that:** 1. The device is switched on. 2. The Bluetooth Audio function is activated and the audio device is visible via Bluetooth. (For details, see the separate operating instructions of your audio device or visit [www.mercedes-benz.com/connect.](http://www.mercedes-benz.com/connect.)) message appears.
- ▶ Select **Start Search**.  
Audio 20 searches for Bluetooth® audio devices within range and adds them to the Bluetooth® device list.  
The duration of the search depends on the number of Bluetooth® audio devices within range and their characteristics.
- i** On some Bluetooth® audio devices, playback has to be started on the device itself first so that Audio 20 can play the audio files. Bluetooth® must also be given as a media output location for the audio device used.

#### Authorizing Bluetooth® audio

- ▶ Select a Bluetooth® audio device that has not yet been authorized from the list: turn and press the controller. Authorization starts.  
Depending on the Bluetooth® audio device used, you now have two options for continuing with authorization.

### Option 1: entering the passkey

- ▶ You can find information on this in the "Authorizing (connecting) a mobile phone" section (▷ page 50).  
After successful authorization, the Bluetooth® audio device is connected and starts playing.

### Option 2: Secure Simple Pairing

- ❗ The Bluetooth® audio device must support Bluetooth® version 2.1 for connection via Secure Simple Pairing. Audio 20 creates a six-digit code, which is displayed simultaneously on both devices that are to be connected.

For some Bluetooth® audio devices, the pairing must be confirmed within 10 seconds.

- ▶ If the number code displayed on Audio 20 and on the Bluetooth® audio device is the same, select **Yes**: press the controller.  
If you select **Yes**, authorization continues and the Bluetooth® audio device is connected. Playback starts.  
If you select **No**, authorization is canceled.

### External authorization

If Audio 20 does not find your Bluetooth® audio device, this may be due to particular security settings on your Bluetooth® audio device. In this case, check whether conversely your Bluetooth® audio device can locate the Audio 20 system.

The Bluetooth® device name for Audio 20 is **MB Bluetooth**.

- ▶ Switch on Bluetooth® audio mode (▷ page 111).
- ▶ To select **Options**: slide Ⓞ↓ and press the controller.

- ▶ To select **Bluetooth Audio Devices**: press the controller.
- ▶ To select **Connect via Audio Device**: turn and press the controller.  
A message appears.



### Authorizing

- ▶ Start the authorization on your Bluetooth® audio device (see the manufacturer's operating instructions).  
After successful authorization, the Bluetooth® audio device is connected and starts playing.

On some Bluetooth® audio devices, playback has to be started on the device itself first so that Audio 20 can play the audio files.

### Reconnecting a Bluetooth® audio device

The Bluetooth® audio profiles are connected automatically under the following circumstances:

- one of the last two mobile phones to have been connected has also been used as a Bluetooth® audio player (if this function is supported by the mobile phone).
- the mobile phone is automatically connected. The Bluetooth® audio profiles are then also connected.

- ❗ For an automatic connection with Audio 20, the telephone must be within range.


For most Bluetooth® audio devices, the "automatic connection" must be activated by checking a box. Depending on the device used, this prompt often takes place when authorizing (see the manufacturer's operating instructions).

If the **No Bluetooth Audio Device Connected** message appears, you have two options to reconnect the Bluetooth® audio device.

#### Option 1:

- ▶ To select **Connect Last Used Player** in the basic display: press the controller. If Audio 20 can locate the Bluetooth® audio device, it will be connected and playback will start.

#### Option 2:



- ▶ To select **Options**: slide  and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
- ▶ To select a Bluetooth® audio device: turn and press the controller. If the Bluetooth® audio device has been authorized, playback starts.

### Bluetooth® audio device and simultaneous search for mobile phones


- i** When searching for a mobile phone or a new Bluetooth® audio device, the connection to an already activated Bluetooth® audio device is separated (▷ page 49).

In the Bluetooth® audio basic display, you will see the **No Bluetooth Audio Device Connected** message and the **Connect Device** menu item cannot be selected.

### Displaying details

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller.
- ▶ To select the symbol to the right of the Bluetooth® audio device: slide  the controller.
- ▶ To select **Details**: turn and press the controller. The following information concerning the selected mobile phone is shown:
  - Bluetooth® name
  - Bluetooth® address
  - availability status (shown after an update)
  - authorization status
- ▶ **To close the detailed display**: press the  button.


### De-authorizing (deregistering) a Bluetooth® audio device

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller.
- ▶ To select the symbol to the right of the Bluetooth® audio device: slide  and press the controller.
- ▶ To select **Deauthorize**: press the controller. A prompt appears asking whether you really wish to deauthorize this device.
- ▶ To select **Yes** or **No**: turn and press the controller. If you select **Yes**, the device will be deleted from the Bluetooth® device list. If you select **No** the process is canceled.
- i** Before re-authorizing the Bluetooth® audio device, you should also delete the device name **MB Bluetooth** from your Bluetooth® audio device's Bluetooth® list (see the Bluetooth® audio device's operating instructions).



## Switching to Bluetooth® audio mode

### Basic display

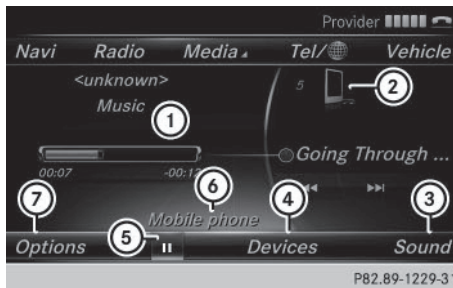

- ① Audio transmission status (depending on the Bluetooth® audio device, also title name and artist)
- ② Data medium position in the media list
- ③ Sound settings
- ④ Device list
- ⑤ To stop or start playback
- ⑥ Name of the connected Bluetooth® audio device (example)
- ⑦ Options menu

Some mobile phones only support two Bluetooth® profiles at the same time (e.g. Hands-Free Profile for Bluetooth® telephony and Bluetooth® audio profile for audio streaming). If you activate Bluetooth® audio mode and there is already an active Internet connection, this can cause the connection to be terminated.

### Switching to Bluetooth® audio

- ▶ Press the button.
- ▶ To select **Bluetooth Audio** in the menu: turn and press the controller. Audio 20 activates the Bluetooth® audio device. The basic display then appears. Playback starts.

- i** If the Bluetooth® audio device connected supports metadata and corresponding data is available, then the artist, track and album name can be displayed.

### Starting/stopping playback

- ▶ To select **Start playback** : turn and press the controller. Playback starts. is selected.
- ▶ **To stop playback:** select . A message appears. is selected.
- ▶ **To continue playback:** select . A message appears. is selected.

### Starting playback if the Bluetooth® audio device has been stopped

During the search for mobile phones, the connection with the Bluetooth® audio device is terminated (> page 49). In the Bluetooth® audio basic display (> page 111) you will see the **No Bluetooth Audio Device Connected** message and the **Connect Last Used Player** menu item cannot be selected.

When the search is finished, the Bluetooth® audio device can be reconnected.

- ▶ To select **Start playback:** : slide and press the controller. Playback resumes from the beginning.



- ▶ To select **Connect Last Used Player:** press the controller. Depending on the Bluetooth® audio device used, playback starts immediately or you must start playback manually. In this case, you will see the **Bluetooth Audio Device Paused** message.
- i** If there is an Internet connection and the mobile phone that is connected only sup-







ports two Bluetooth® profiles at the same time, the Internet connection is interrupted.

- i** The connection to the Bluetooth® audio device can also be interrupted if:
  - the connected mobile phone only supports 2 Bluetooth® profiles at the same time
  - you connect to the Internet using Audio 20 (▷ page 73).

### Selecting a track

The function is not supported by all Bluetooth® audio devices.

Some mobile phones impair function with regard to the following criteria:

- the number of tracks that can be selected
- the time period until the next or previous track is played
- ▶ Switch the multifunction steering wheel to the media menu (see the vehicle Operator's Manual).
- ▶ **To skip forwards or backwards to a track:** press the  or  button on the multifunction steering wheel.
- ▶ **Rapid scroll:** press and hold the  or  button on the multifunction steering wheel until the desired track is reached. If you press and hold the  or  buttons, the rapid scrolling speed increases after a short time.
- i** In rapid scroll, track names are not shown, but instead only Track 1, Track 2 etc. The playback times for the tracks played are not displayed. This is available as an optional function starting with AVRCP Version 1.3. There is also no music search option available with Bluetooth® Audio.

### Selecting playback options


If the Bluetooth® audio device supports the corresponding function, the following options are available:

- **Normal Track Sequence:** the tracks are played in the normal order (e.g. track 1, 2, 3 etc.).  
Audio data playback is determined by the order in which the tracks are written to the data medium. Alphabetical order is the most common. Once all the tracks in a folder have been played, the tracks in the next folder are played.
- **Random Track List:** the current track list is played in random order (e.g. 3, 8, 5 etc.).
- **Random Medium:** all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).  
Playback options are optional functions and are not, or only partially, supported by Bluetooth® audio devices.

### Selecting playback options

- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Playback Mode.**  
A • dot indicates the current setting.
- ▶ Select the desired option.  
If you select **Random Track List**, you will see a corresponding message in the display/selection window.

### Increasing the Audio 20 volume

- ▶ To select **Options:** slide  and press the controller.
- ▶ To select **Volume:** turn and press the controller.  
A menu appears. The • dot indicates the current setting.
- ▶ Select **Standard** or **Boost.**  
Information on sound settings (▷ page 118).


**Operation with the Media Interface**

**Prerequisite**

Media Interface is a universal interface for the connection of mobile audio devices. Media Interface in Audio 20 has two USB connections.

The USB connection sockets are located in the stowage compartment under the armrest.

**Media Interface basic display**

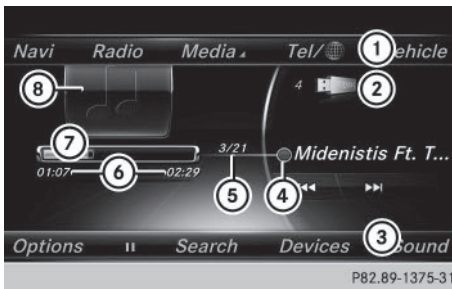

- ① Main function bar
- ② Display for the active data medium
- ③ Media menu bar
- ④ Title display in the media list
- ⑤ Current track/number in track list
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Additional display area with cover view

**Switching to Media Interface**

- ▶ Connect a data medium to USB port 1 or USB port 2 (▷ page 102).
- ▶ Select the basic menu for Media Interface 1 or Media Interface 2 (▷ page 99).  
If you remove a device, the **No Device Connected** message appears.

**Supported devices**

The Media Interface allows you to connect the following devices to Audio 20:

- iPod®
- iPhone®
- iPad®
- MP3
- USB devices

- ❗ It is not possible to run two Apple® devices simultaneously.
- ❗ iPod®, iPhone® and iPad® are registered trademarks of Apple Inc., Cupertino, California, USA.
- ❗ Audio and picture files can be played back. Picture files from Apple® devices and MP3 players cannot be displayed (except cover pictures).

For details and a list of supported devices, visit our website at <http://www.mercedes-benz-mobile.com/>. Then follow the instructions in the "Media Interface" section. Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEDES (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

**Supported data formats**

Music	mp3, wma, aac
Images	jpg, jpeg, bmp, png

### Selecting a music file

#### Selecting with the controller

- ▶ **To display the current track list:** press the controller in the basic display. The track list for the active data medium appears.
- ▶ To select a track: turn the controller and press to confirm.
- ▶ **To skip forwards or backwards to a track:** turn the controller in the basic display. The selected track is played.

#### Fast forward/rewind

- ▶ With the media source active in the basic display, slide ◀⊙▶ the controller and hold it until the desired position has been reached.

### Search function

#### Selecting Search using media menu bar

- ▶ Slide ⊙↓ the controller. The media menu bar appears.
- ▶ To select **Search**: turn and press the controller. The category list appears.

#### Overview

The following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Title**
- **Genres**
- **Year**

- **Composers**
- **Photos**
- **Podcasts**
- **Audiobücher (Audio Books)**
- **iTunes U**
- **Genius Mixes**

- ❗ The functions are available as soon as the entire media content has been read and analyzed.


If the same device is reconnected with unchanged media content, these functions are available more quickly.

The categories Audio Books, Podcasts, iTunes U® and Genius Mixes® are only available for Apple® devices.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.




- ▶ To select a category, e.g. **Current Tracklist**: turn and press the controller. The selection list appears.
- ▶ Select the required track.

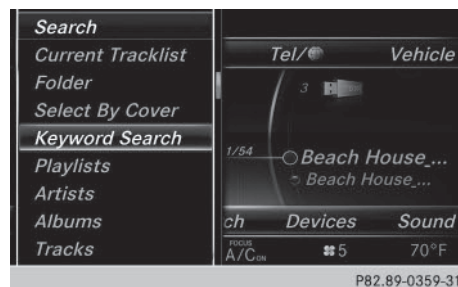

- ▶ **Keyword search:** using the controller, enter the characters for the desired search term and confirm (▶ page 106). Search results are sorted according to the available categories, displayed and can then be selected.

### Playback options

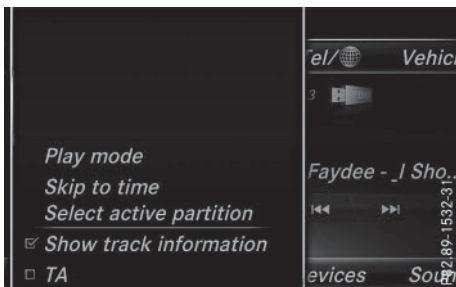

- ▶ Select playback options (▶ page 102).
- ❗ This is only possible if the Genius function is activated in iTunes followed by a synchronization of the Apple® device with iTunes again.

## Picture viewer

### General notes

If pictures are stored on a medium (except on Apple® devices) which is connected to Audio 20, you can view these on the Audio 20 display.

The following data media and picture formats are supported:

- **Data media:** CD, USB devices, SD memory cards
- **Picture formats:** jpeg, jpg, bmp, png

The maximum image resolution is 20 megapixels for jpeg, jpg and 1.5 megapixels for bmp, png.


### Displaying pictures



- ▶ In the media basic display, press the controller. The **Search** with a category list appears.
- ▶ To select **Photos** in the category list: turn and press the controller. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture. If there is no picture on the data medium, an empty list is shown. You can search for pictures on other data media.

### Searching for pictures on other data media

- ▶ In the directory list, slide ◀⊙ the controller. The device list appears.

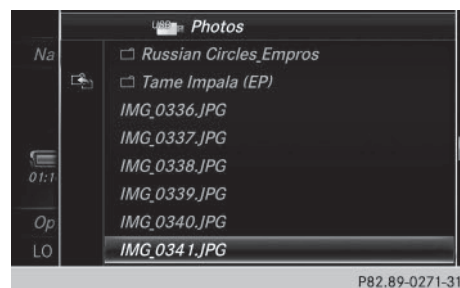

Example: the directory list displays the existing picture files

- ▶ To select a data medium with picture files: turn the controller and press to confirm. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.

### Starting a slide show

- ▶ While viewing a picture, press the controller. The image menu appears.
- ▶ To select **Start Slideshow**: turn and press the controller. The slide show starts.
- ▶ To end the slide show: press the controller. The image menu appears.
- ▶ Select **End Slide Show**.

- ▶ To revert to the original size: press the controller.


or

- ▶ Press the  button.





### Closing the picture viewer

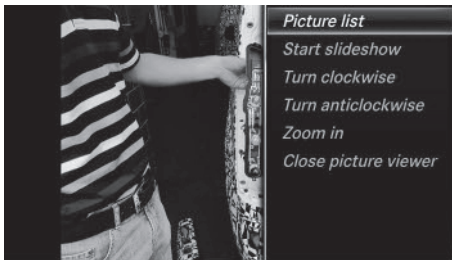- ▶ Press the controller. The menu appears.
- ▶ To select **Close Picture Viewer**: turn and press the controller. Audio 20 returns to the last accessed media function.


### Changing the picture view



P82.89-0272-31

- ▶ Press the controller. The image menu appears.
- ▶ To select **Turn Clockwise**: turn and press the controller. The picture rotates 90 degrees.
- ▶ Select **Turn Counterclockwise**. The picture rotates 90 degrees.
- ▶ Select **Zoom In**. The size of the picture increases. After you have zoomed into the picture, you can move the section of the picture.
- ▶ To move the section of the picture: slide  and  and  and  the controller.

Audio 20 features .....	118
Sound settings .....	118
Harman/kardon® Logic 7® sur- round sound system .....	119

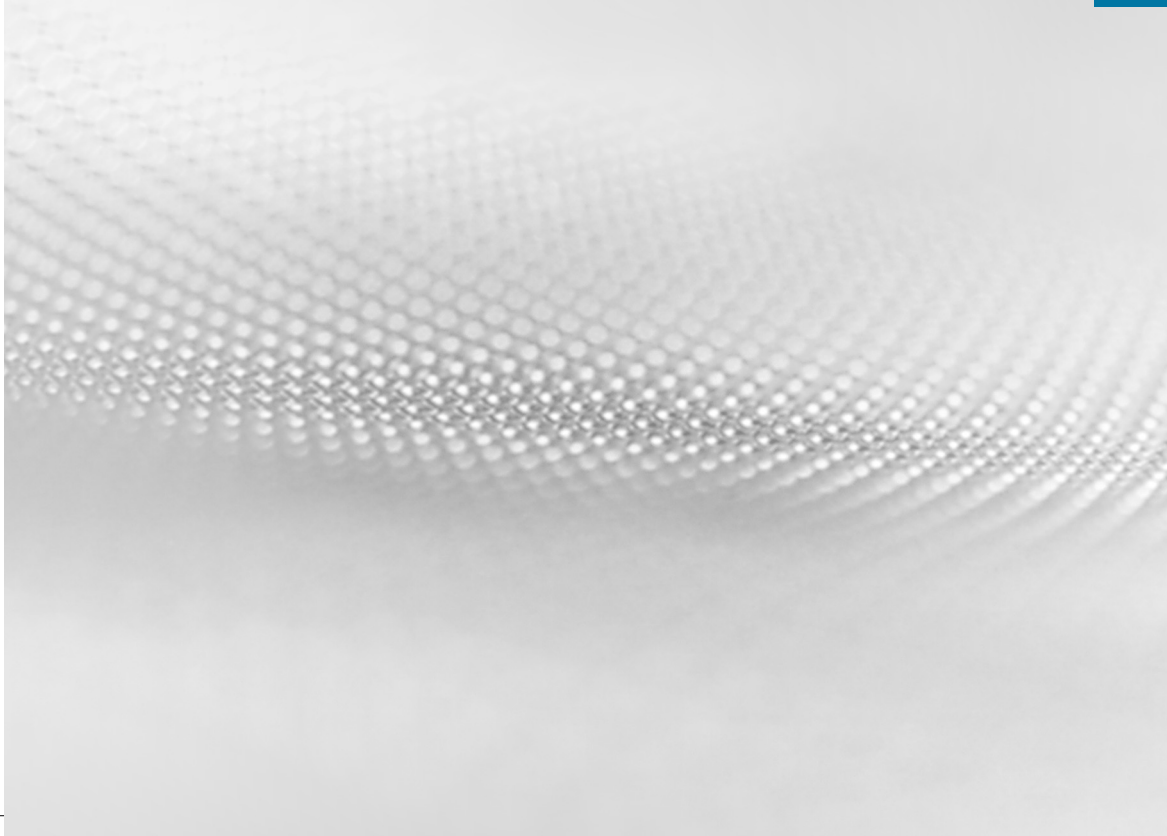

### Audio 20 features

These operating instructions describe all standard and optional equipment available for your Audio 20 system at the time of purchase. Country-specific differences are possible. Please note that your Audio 20 system may not be equipped with all the features described. This also applies to safety-relevant systems and functions. Therefore, the equipment on your Audio 20 system may differ from that in the descriptions and illustrations. Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.


### Sound settings

#### Calling up the sound menu

The sound settings can be selected to suit a variety of different audio sources. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu can be called up from the menu of the desired mode.

- ▶ Switch to radio mode (▷ page 88).

or

- ▶ Switch to media mode (▷ page 98).
- ▶ To display the menu bars: slide  the controller.
- ▶ To select **Sound** in the menu bar: turn and press the controller.






The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Sound menu overview


Function	Options
Equalizer	Sets treble, mid-range and base
Balance/fader	Adjusts the volume: right/left and front/rear

#### Setting treble, mid-range and bass




- ▶ Call up the sound menu (▷ page 118).
- ▶ Turn the controller until **Equalizer** is brought to the front.
- ▶ To activate rotary menus for treble, mid-range and base: slide  the controller.
- ▶ To switch between the rotary menus: slide  or  the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. Rotary menus show the set values.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.

#### Adjusting the balance/fader

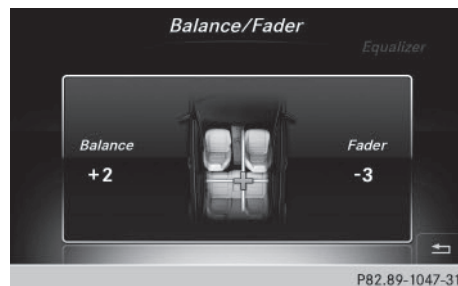

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear. For the best sound, setting 0 is recommended.



- ▶ Call up the sound menu (▷ page 118).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide Ⓞ↓ the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide ←Ⓞ or Ⓞ→ the controller.
- ▶ To adjust the fader: slide Ⓞ↓ or ↑Ⓞ the controller.
- ▶ To return to the basic menu: press the  button briefly.

### Harman/kardon® Logic 7® surround sound system

#### General notes

The harman/kardon® Logic7® surround sound system is available for all functions in the radio and media modes.

The harman/kardon® Logic7® surround sound system is available for the following operating modes:

- radio (FM only)
- satellite radio
- audio CD
- MP3 (including SD memory card and USB storage device)
- Media Interface
- Bluetooth® audio mode

**i** For the best sound, CD or WAV CD format is recommended. For data-reduced media, AAC with a data rate of 320 kbit/s is recommended.

#### Calling up the sound menu

The sound settings can be selected to suit a variety of different audio sources. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu is called up from the menu of the desired mode.

- ▶ Switch to radio mode (▷ page 88).
- or
- ▶ Switch to media mode (▷ page 98).
- ▶ To switch to the menu bar: slide Ⓞ↓ the controller.
- ▶ To select **Sound**: turn and press the controller.  
The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Overview of harman/kardon® Logic7® surround sound system



Function	Options
Equalizer	Sets treble, mid-range and base
Balance/fader	Adjusts the volume: right/left and front/rear
Logic 7	Optimizes the sound playback

Sound


#### Setting treble, mid-range and bass









- ▶ Call up the sound menu (▷ page 119).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ To activate rotary menus for treble, mid-range and base: slide Ⓞ↓ the controller.
- ▶ To switch between the rotary menus: slide ←Ⓞ or Ⓞ→ the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller.  
The rotary menus show the set values.

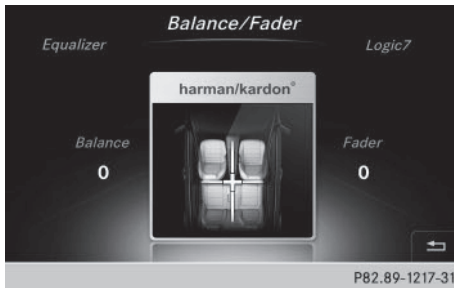- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.


### Adjusting the balance/fader






Balance adjusts the volume left and right. Fader adjusts the volume in front and rear. For the best sound, setting 0 is recommended.

- ▶ Call up the sound menu (▷ page 119).
- ▶ Turn the controller until **Balance/Fader** is in the center.
- ▶ Slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide  or  the controller.
- ▶ To adjust the fader: slide  or  the controller.  
An image shows the sound focus set.
- ▶ To return to the basic menu: press the  button briefly.

### Setting surround sound

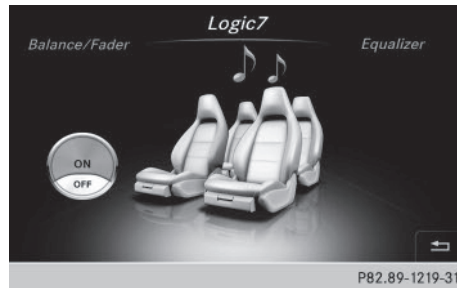

The **Logic7** setting optimizes the sound playback.

- ▶ Call up the sound menu (▷ page 119).
  - ▶ Turn the controller until **Logic7** is in the center.
  - ▶ Slide  the controller.  
The left-hand rotary menu to switch surround sound on and off is activated.
  - ▶ To activate **Logic7**: turn the controller until **On** is active.
- or
- ▶ To deactivate **Logic7**: turn the controller, until **OFF** is active.
  - ▶ To return to the menu: slide  the controller.
  - ▶ To return to the basic menu: press the  button briefly.

For the optimum audio experience for all passengers when Logic7® is switched on, the balance settings should be set to the center of the vehicle interior.

MP3 tracks should have a bit rate of at least 128 kbit/s.

Surround sound playback does not function for mono signal sources, such as for AM radio mode.

If radio reception is poor, e.g. in a tunnel, you should switch off Logic7®, since it may otherwise switch dynamically between stereo and mono and cause temporary sound distortions.